

Components and Hardware List


Bun Feet



(A)

8 pcs.


Wood Screw (Installed)



(B)

8 pcs.

File rod (Installed) 14-1/2 long

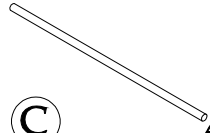

(C)

4 pcs.


Mending Plate (Installed)



(D)


8 pcs.

Pencil Tray



(E)






1 pcs.

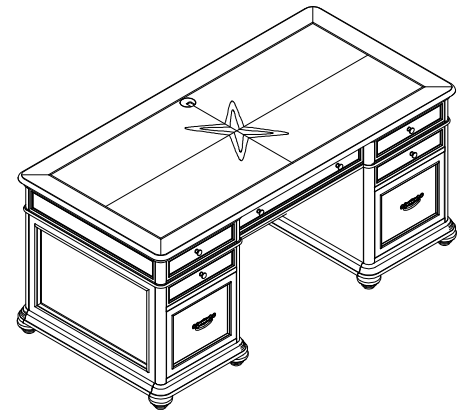

15831 EXECUTIVE DESK

ASSEMBLY STEPS:

1. Place the Desk upside down on a clean and soft surface.
2. Using your Phillips Screwdriver, remove the Packing Brace and assemble the Feet (A) to the bottom corners as shown.
3. Carefully set the Desk upright.

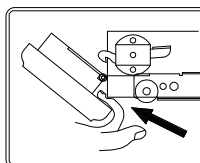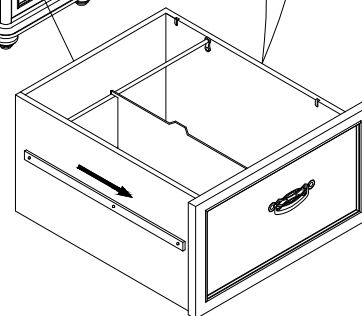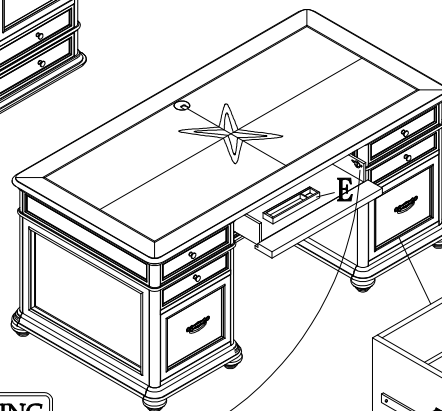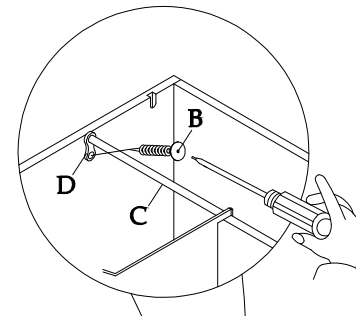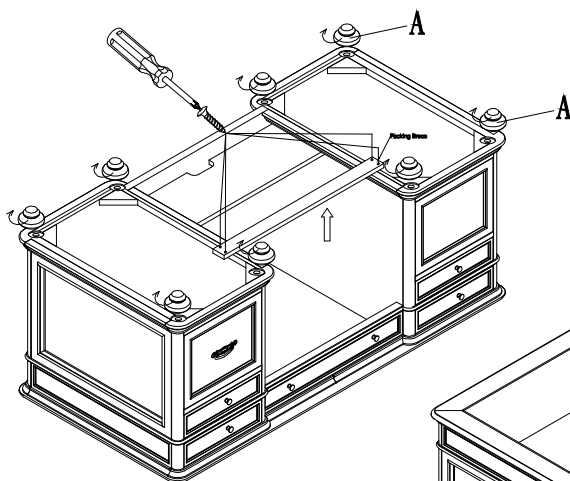

WARNING
Pinch Point.
Keep fingers from
underneath drawer
front when
releasing.

The File Drawers can be set up to use either Letter or Legal size hanging file folders using the File Rods installed in the file drawers.

The levelers in the bottom of the Bun Feet can be adjusted if necessary to compensate for uneven flooring.