




ASSEMBLY INSTRUCTION ACME FURNITURE

MODEL # 92907, 92912

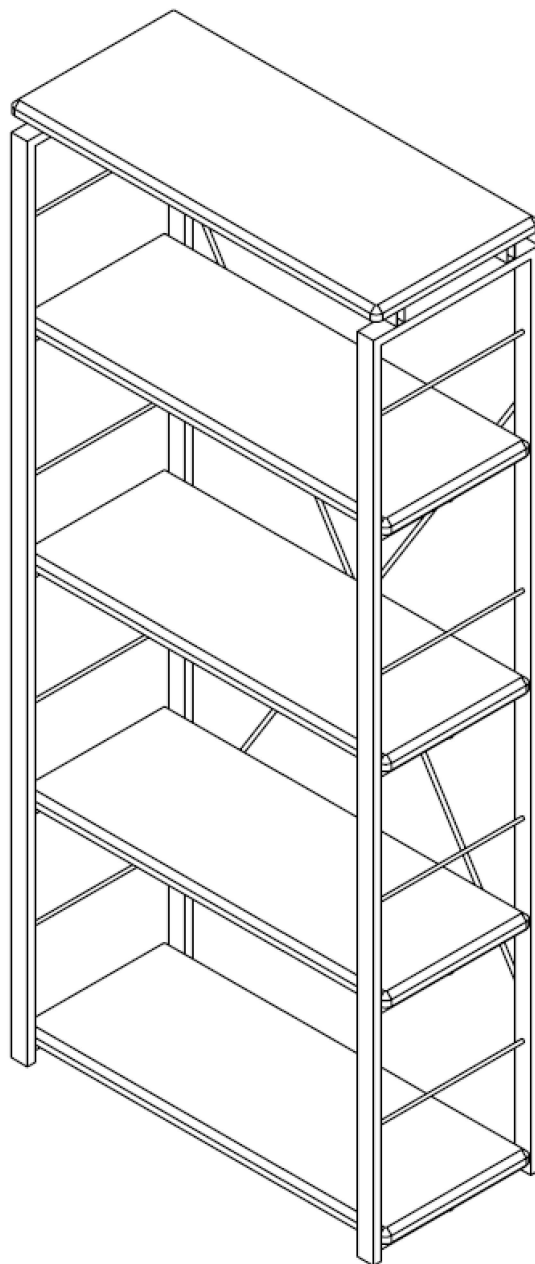


PARTS




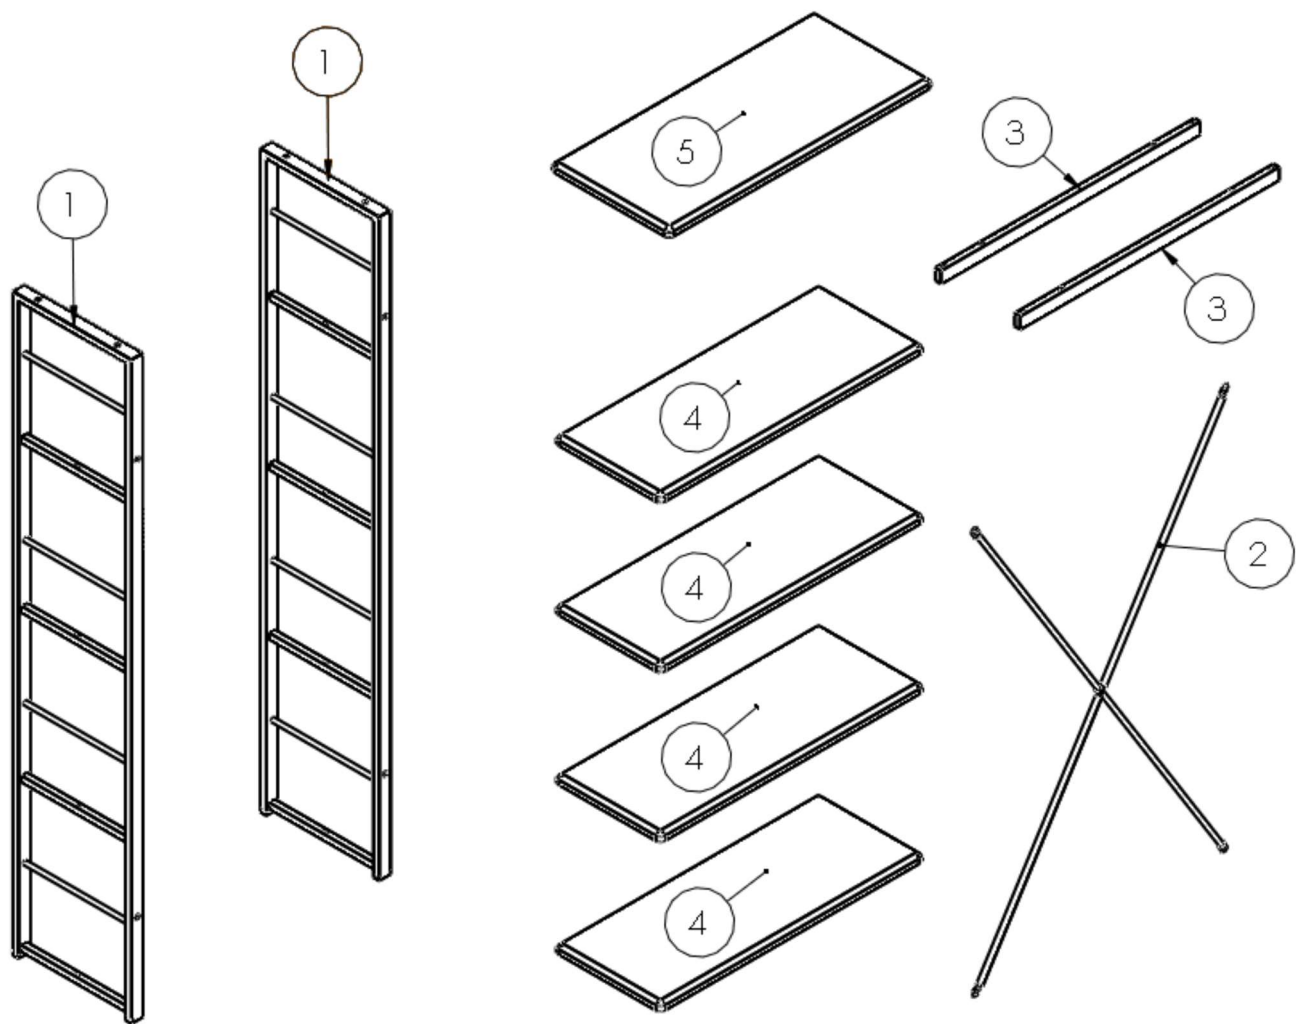


No.			No.			No.			No.		
(A)		8	(B)		5	(C)		4	(D)		4
(E)		1	(F)		4	(G)		1	(H)		4





STEP.1

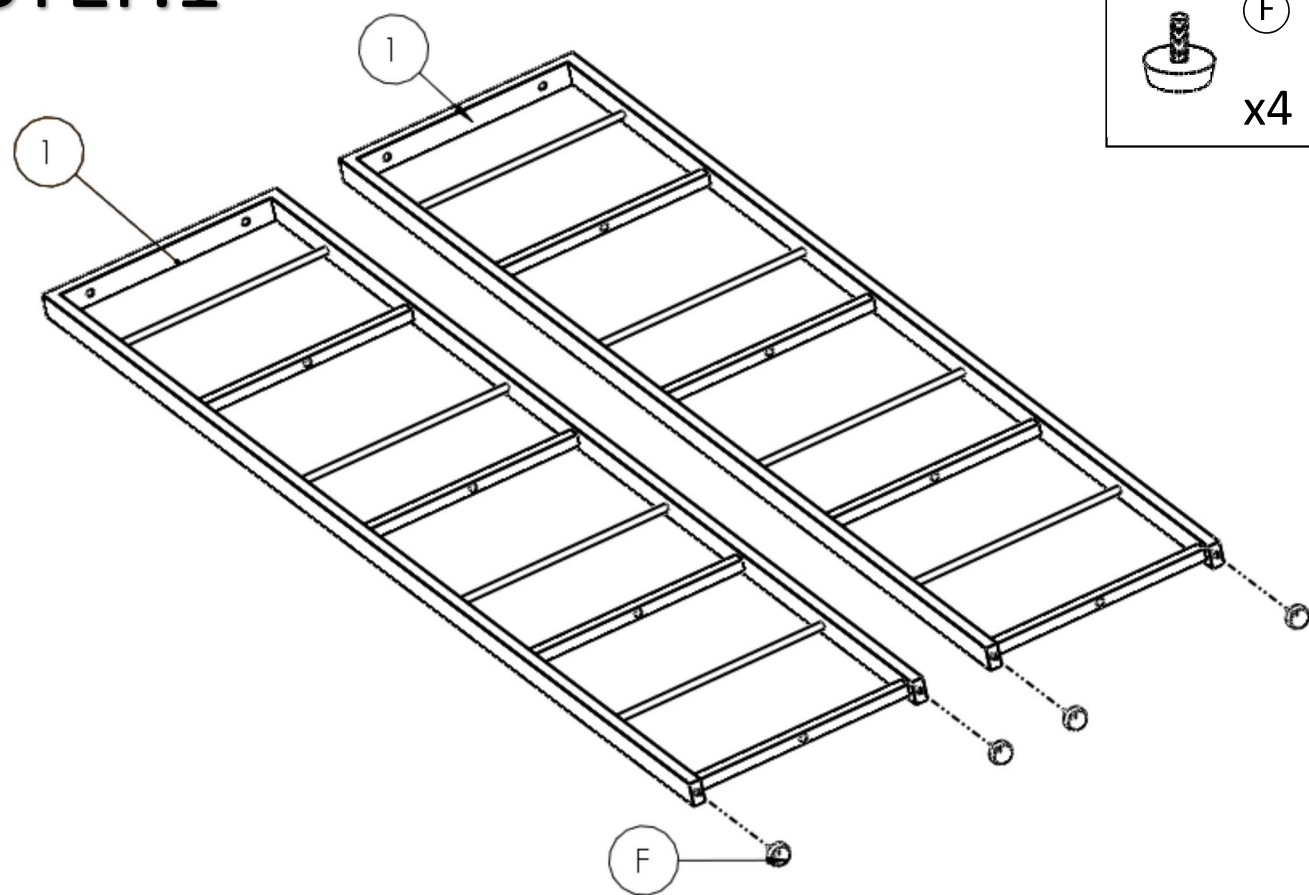




STEP.2

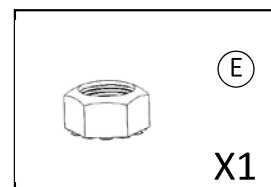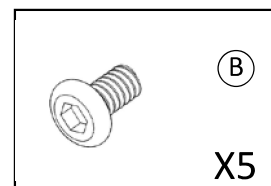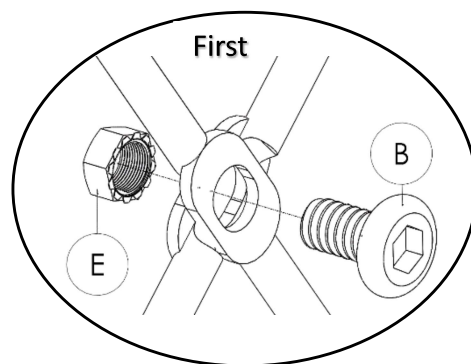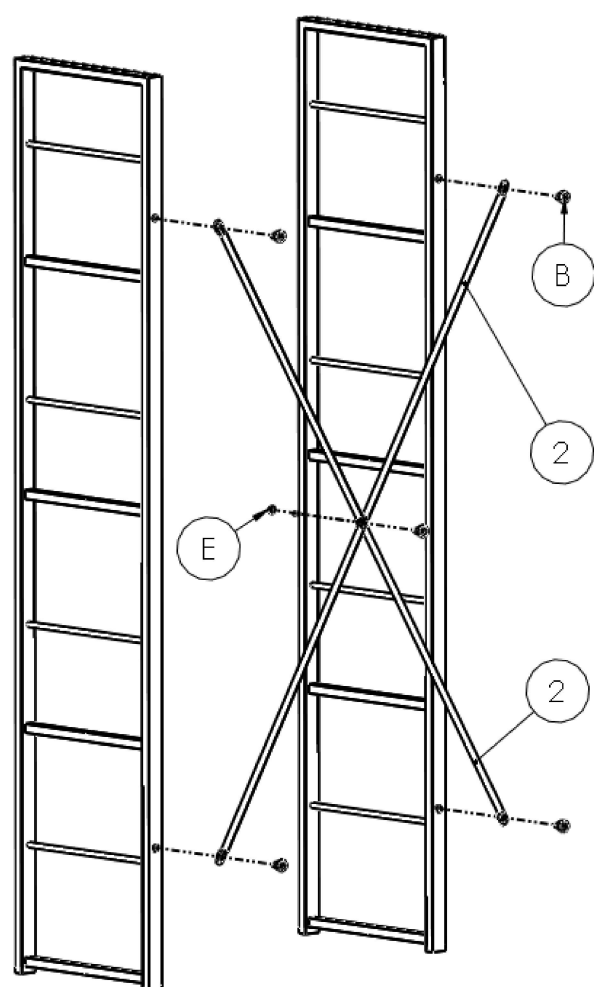

STEP.3

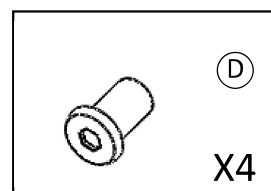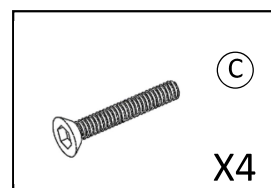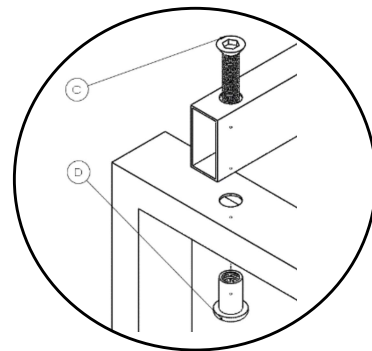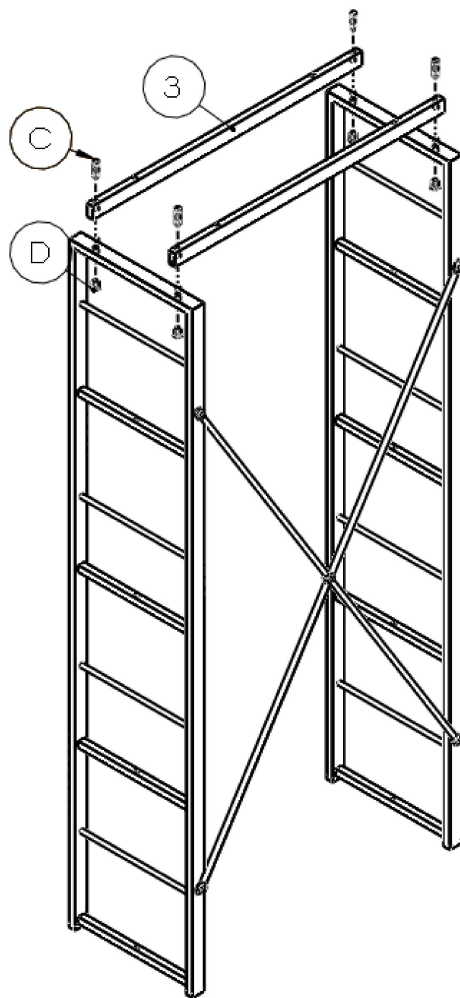

STEP.4

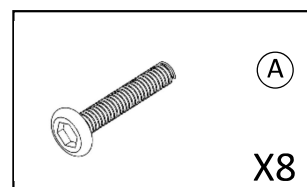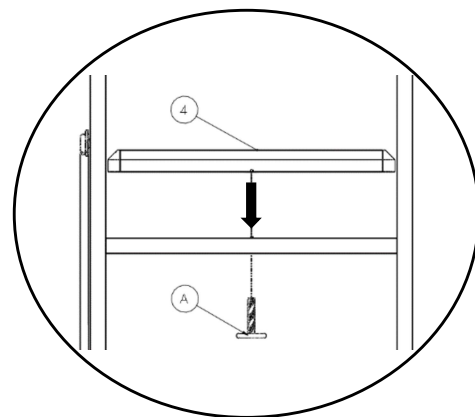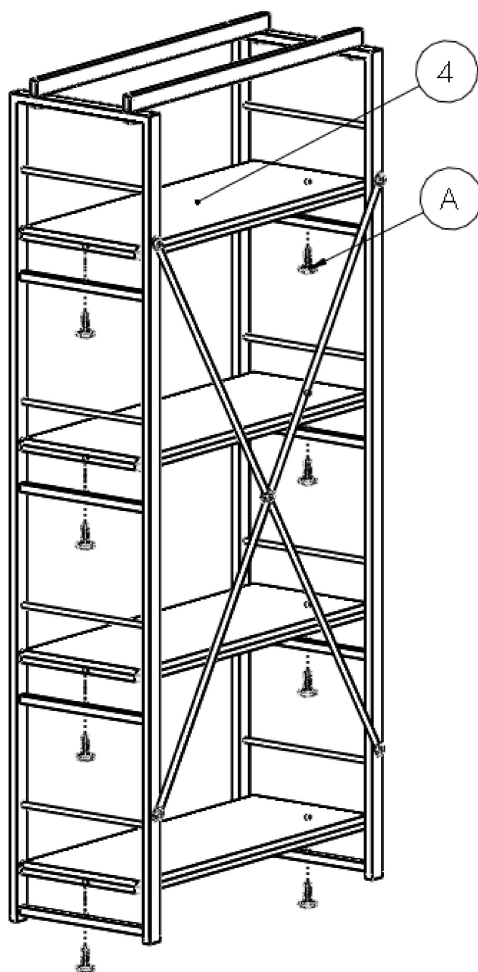

STEP.5

