

ASSEMBLY INSTRUCTIONS

ABERDEEN COLLECTION

S1218-BS Aberdeen 29" Bar Stool S1218-CS Aberdeen 24" Counter Stool

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts which may have come loose inside the carton during shipment. Identify, count all items and compare them with the PART LIST and HARDWARE LIST below.

CAUTION: Read the instructions carefully before assembly.

- 1. We recommend that you assemble this product with the assistance of another person to eliminate damage to the product during assembly.
- 2. Do not over-tighten the screws or bolts until the assembly is completed.
- 3. Keep all hardware parts out of reach of children.
- 4. Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

	PARTS LIST		
NO.	DESCRIPTION	SKETCH	QTY
А	BACKREST		1PC
В	SEAT		1PC
С	SEAT FRAME		1PC
D	ROUND FOOTREST		1PC
Е	LEG		4PCS

HARDWARE LIST			
NO.	DESCRIPTION	SKETCH	QTY
1	SHORT BOLTS 1/4"x1"		4PCS
2	MEDIUM BOLTS 1/4"x1-3/4"		10PCS
3	LONG BOLTS 1/4"x2-1/8"		4PCS
4	SPRING WASHERS 1/4" DIA		18PCS
5	FLAT WASHERS 1/4" DIA	0	18PCS
6	ALLEN WRENCH 1/4"		1PC



Step 1

Separate the hardware & store separately to prepare for assembly.

SHORT BOLTS 1/4"x1"

MEDIUM BOLTS 1/4"x1-3/4"

LONG BOLTS 1/4"x2-1/8"




FLAT WASHERS 1/4" DIA

SPRING WASHERS 1/4" DIA

(O) X 18


Step 2

2	MEDIUM BOLTS 1/4"x1-3/4"	
4	SPRING WASHERS 1/4" DIA	O
5	FLAT WASHERS 1/4" DIA	0

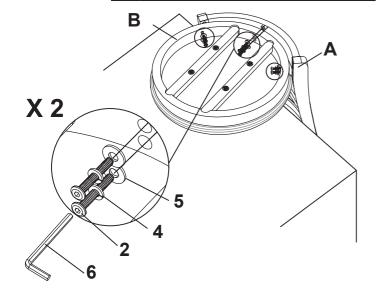

Step 3

3	LONG BOLTS 1/4"x2-1/8"	(a)
4	SPRING WASHERS 1/4" DIA	\bigcirc
5	FLAT WASHERS 1/4" DIA	0

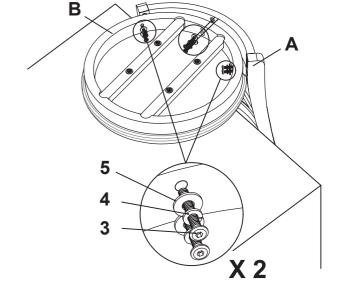



ASSEMBLY INSTRUCTIONS

ABERDEEN COLLECTION

S1218-BS Aberdeen 29" Bar Stool S1218-CS Aberdeen 24" Counter Stool


Step 4


2	MEDIUM BOLTS 1/4"x1-3/4"	
4	SPRING WASHERS 1/4" DIA	\bigcirc
5	FLAT WASHERS 1/4" DIA	0

Step 5

2	MEDIUM BOLTS 1/4"x1-3/4"	
4	SPRING WASHERS 1/4" DIA	0
5	FLAT WASHERS 1/4" DIA	0

DO NOT TIGHTEN THE SCREWS.

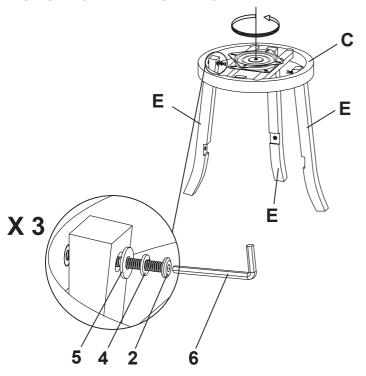

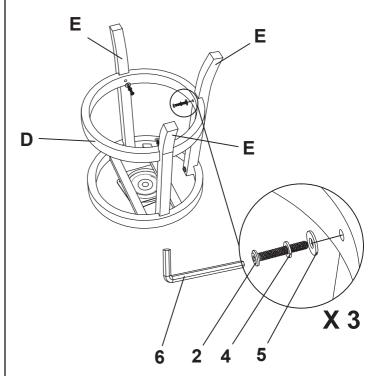



Step 6

	2	MEDIUM BOLTS 1/4"x1-3/4"	
	4	SPRING WASHERS 1/4" DIA	(
Γ	5	FLAT WASHERS 1/4" DIA	(0)

Step 7

2	MEDIUM BOLTS 1/4"x1-3/4"	
4	SPRING WASHERS 1/4" DIA	\bigcirc
5	FLAT WASHERS 1/4" DIA	0

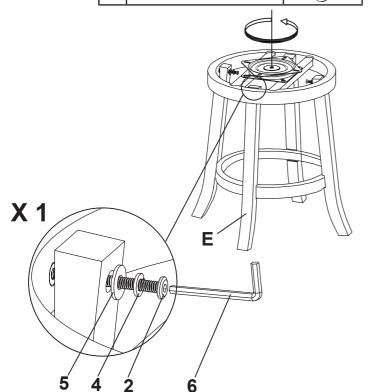

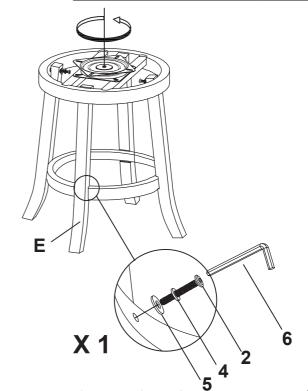



ASSEMBLY INSTRUCTIONS

ABERDEEN COLLECTION

S1218-BS Aberdeen 29" Bar Stool S1218-CS Aberdeen 24" Counter Stool

Step 8

1	SHORT BOLTS 1/4"x1"	
4	SPRING WASHERS 1/4" DIA	\bigcirc
5	FLAT WASHERS 1/4" DIA	0

Step 9

Tighten all screws.

