

ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE



Fine Furniture for every stage of life

215871KE(B1-B3)
Eastern King Bed

ITEM: 215871KE(B1-B3)

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

30 MINUTES

PARTS IDENTIFICATION


B1 (BOX 1)

A HEADBOARD
PANEL

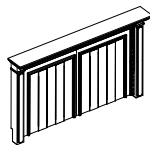


1PC

C LEFT
HEADBOARD LEG



1PC

B RIGHT
HEADBOARD LEG



1PC


D HEADBOARD
BOTTOM RAIL



1PC

B2 (BOX 2)


E FOOTBOARD



1PC

B3 (BOX 3)

F BED RAIL



2PCS

G BED SLAT



4PCS


H BED SLAT SUPPORT
WITH LEVELER



8PCS

HB


215871KE(B1)
FROM BOX 1
HEADBOARD
COMPLETE

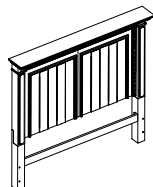

1PC

E

215871KE(B2)
FROM BOX 2
FOOTBOARD



1PC

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: 215871KE(B1-B3)



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.




WARNING!


1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

HARDWARE IDENTIFICATION

Z-B1(BOX 1) - HARDWARE PACK IS LOCATED IN 215871KE(B1)

1	BOLT (Ø5/16" x 45MM - RBW)		14PCS	3	FLAT WASHER (Ø5/16" - RBW)		14PCS
2	LOCK WASHER (Ø5/16" - RBW)		14PCS	4	ALLEN WRENCH (4MMx60MM - RBW)		1PC

Z-B3(BOX 3) - HARDWARE PACK IS LOCATED IN 215871KE(B3)

5	THREADED BOLT (Ø5/16" x 90MM - RBW)		8PCS	8	WRENCH (12MM - RBW)		1PC
6	HALF ROUND NUT (Ø5/16" - RBW)		8PCS	9	FLAT HEAD SCREW (Ø4 x 30MM - RBW)		8PCS
7	HEX NUT (Ø5/16" x 12MM - RBW)		8PCS				


NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: **215871KE(B1-B3)**


ASSEMBLY INSTRUCTIONS

STEP 1

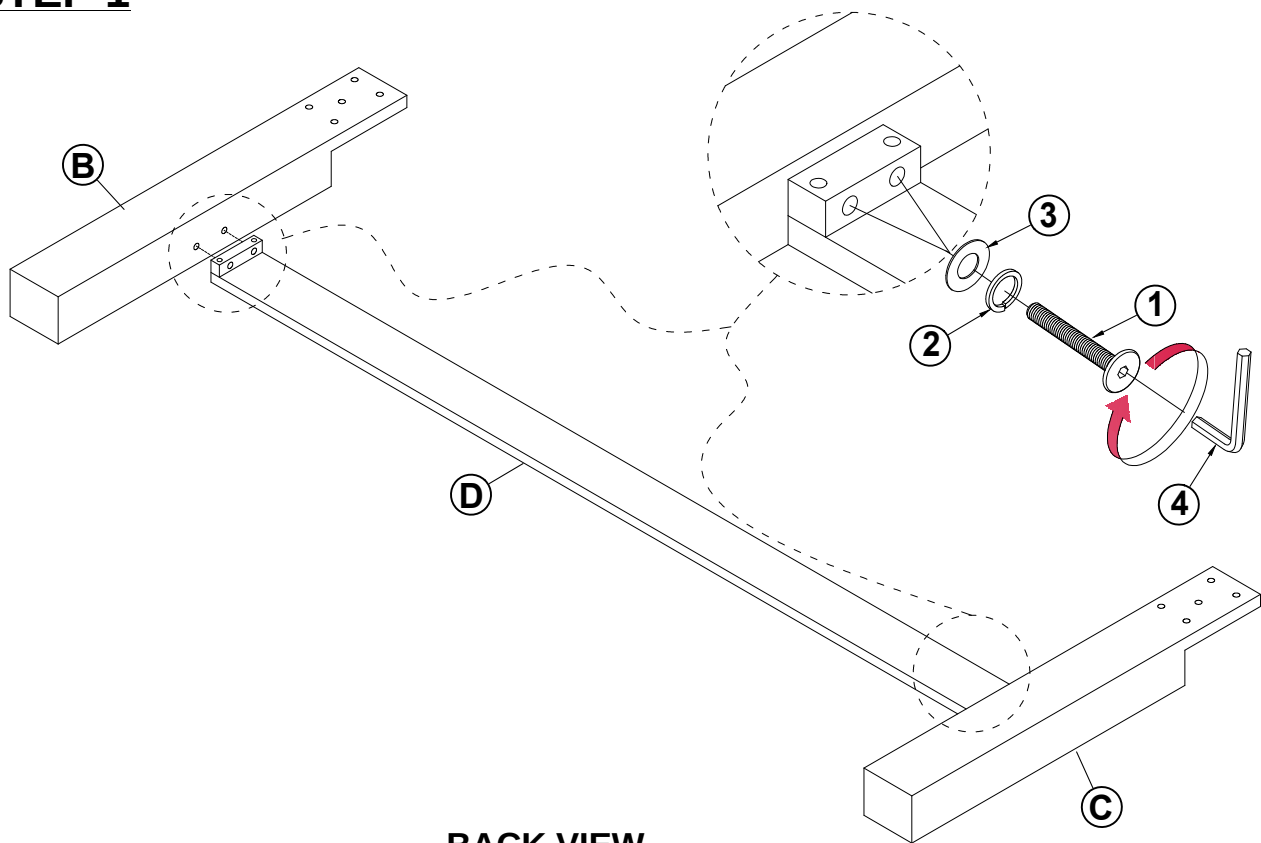

BACK VIEW


STEP 2

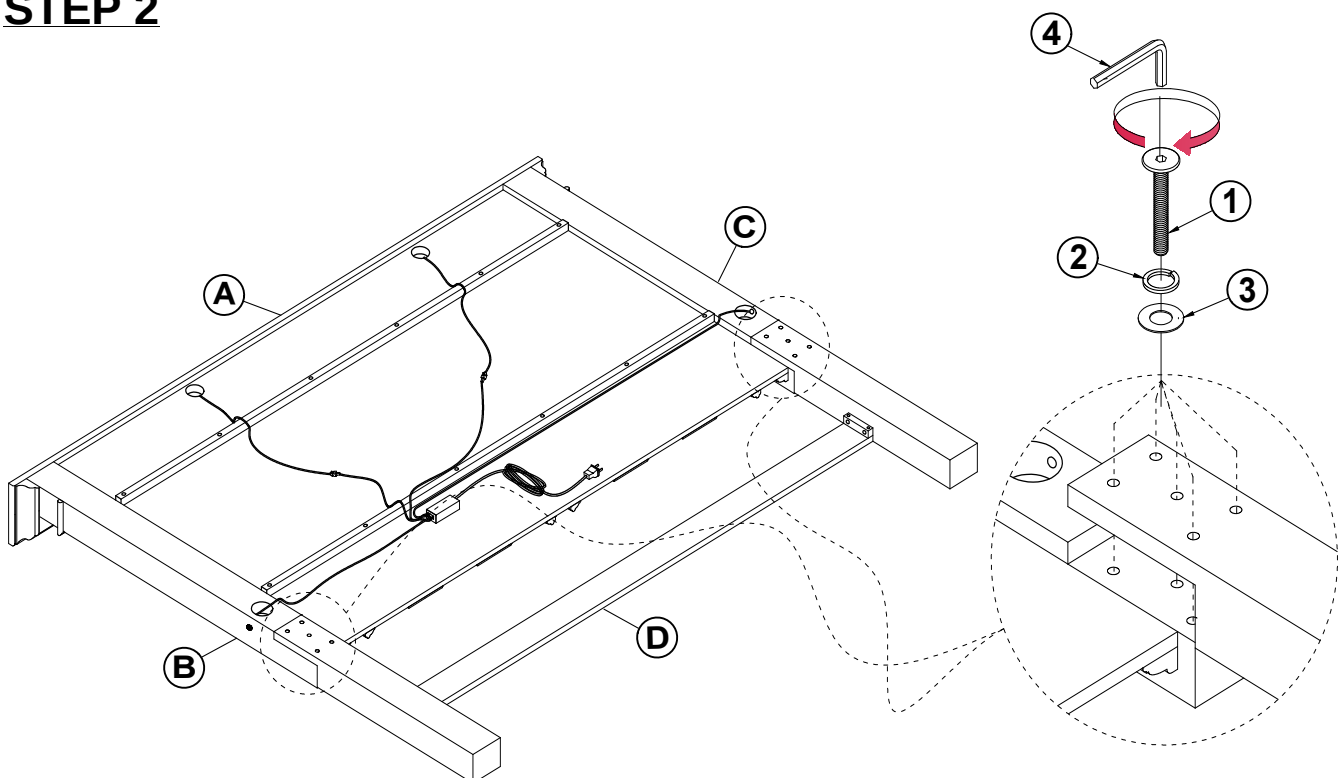


ITEM: **215871KE(B1-B3)**



ASSEMBLY INSTRUCTIONS
STEP 3

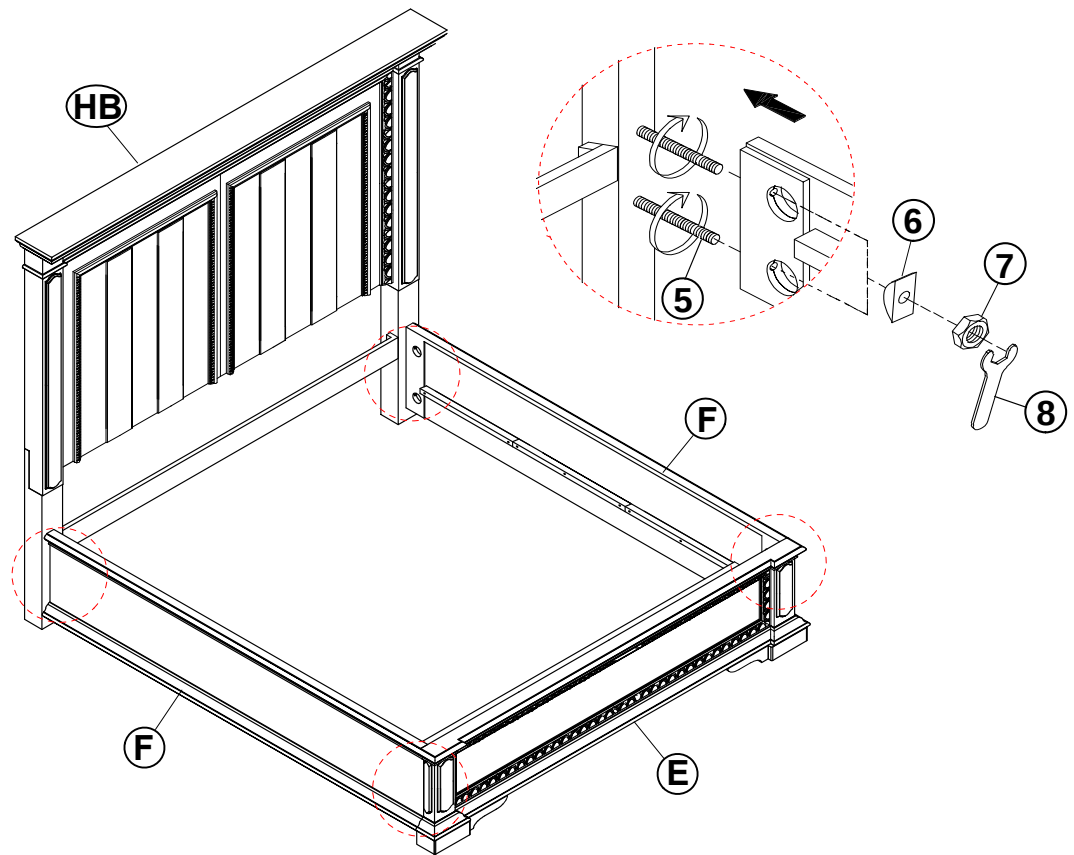


STEP 4

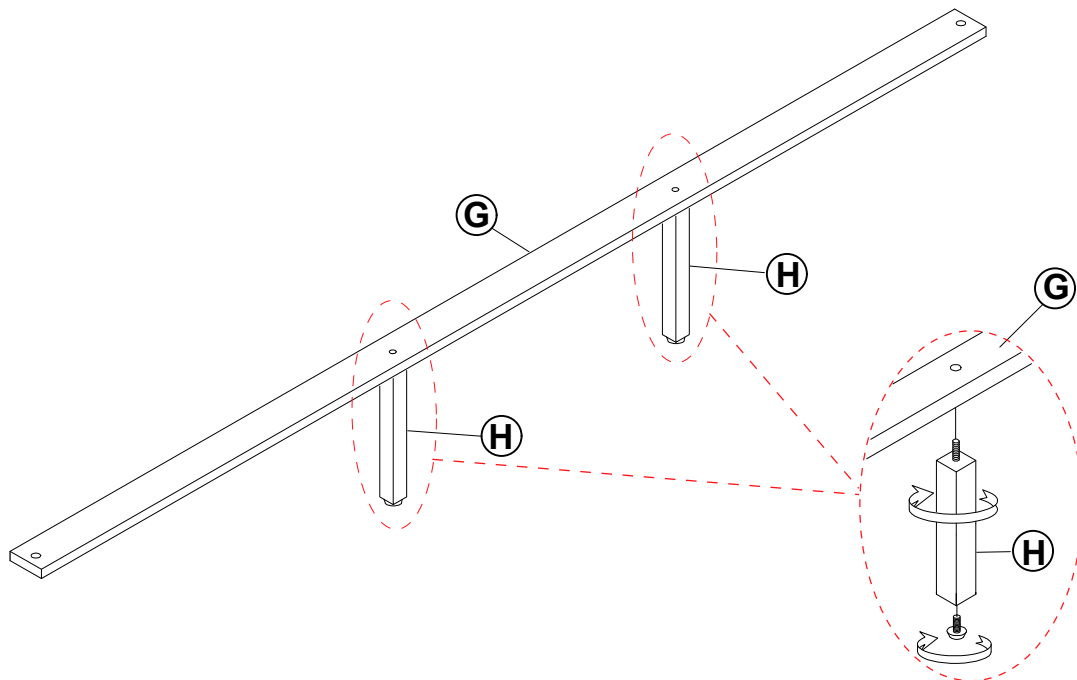

ITEM: **215871KE(B1-B3)**


ASSEMBLY INSTRUCTIONS

STEP 5

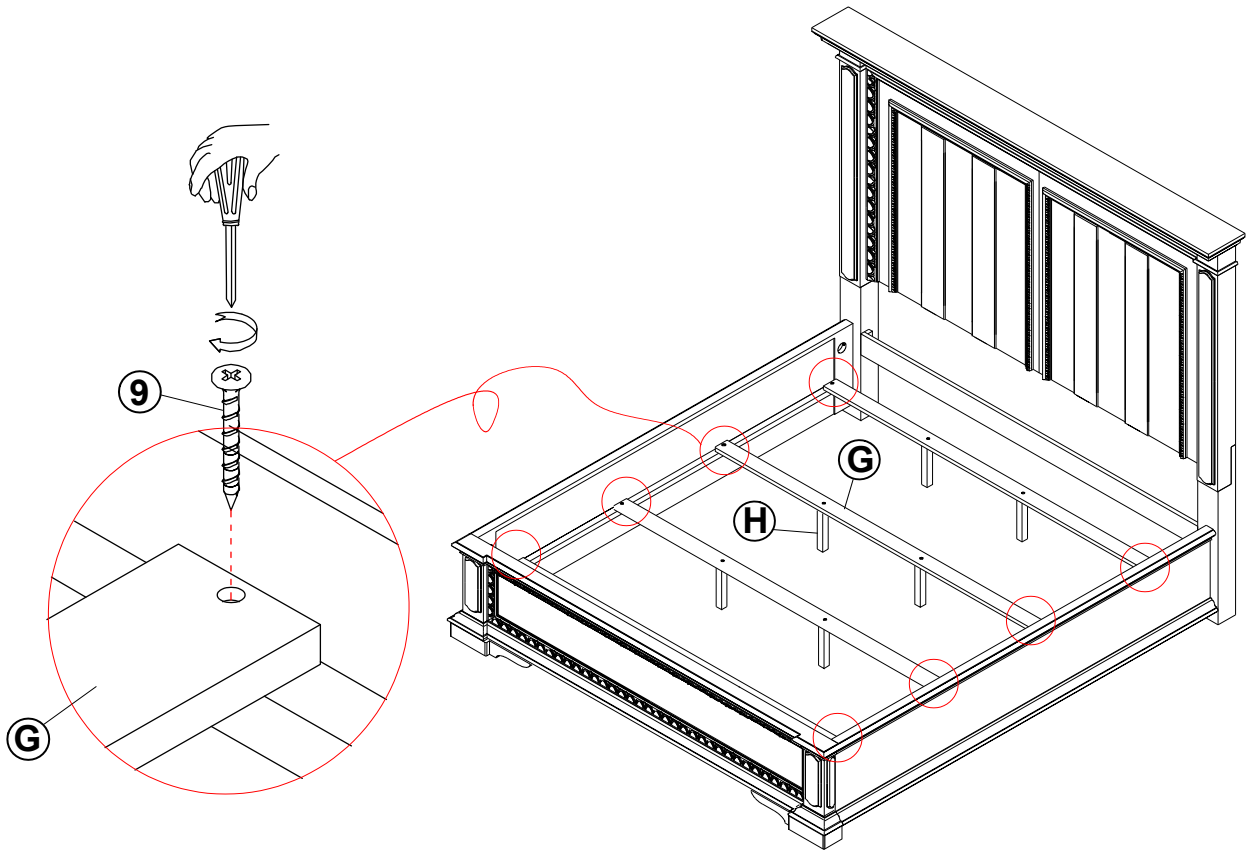

STEP 6

COMPLETE

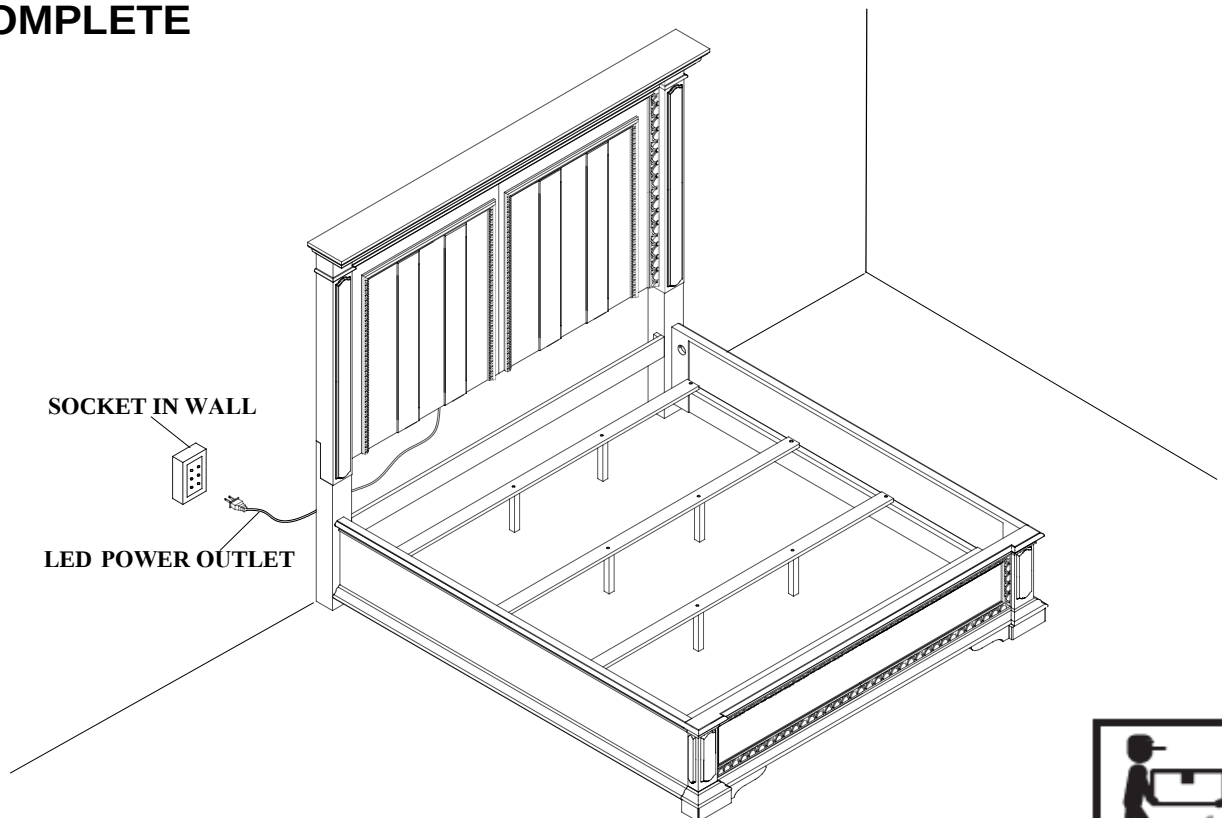



Technical drawing of a bed frame showing dimensions for the headboard, footboard, and slats. The drawing includes the following dimensions:

- Headboard width: 86.75"
- Headboard height: 74.00"
- Headboard depth: 10.00"
- Headboard slat spacing: 17.00"
- Headboard slat width: 73.75"
- Headboard slat thickness: 8.50"
- Headboard slat height: 8.00"
- Headboard slat length: 77.00"
- Headboard slat width: 18.00"
- Headboard slat height: 2.50"
- Headboard slat length: 49.00"
- Headboard slat width: 66.75"
- Headboard slat height: 82.50"
- Headboard slat length: 82.00"
- Headboard slat width: 90.00"

COASTERFURNITURE.COM

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

215872
Nightstand

TIPPING INSTALLATION INSTRUCTIONS FURNITURE TIPPING RESTRAINT

WARNING

Injury may result from tipping furniture.



This restraint may protect against tipping furniture.

Do not allow children to climb on furniture.

This restraint is not a substitute for proper adult supervision.

Failure to detach this restraint before moving the furniture may result in injury and damage.


1. Attach one of the mounting brackets securely to the back edge of the unit, using the short screw.
2. Determine where the unit is to be placed, and mark the location on the wall for the other mounting bracket. The bracket on the wall needs to be approximately 2" below the bracket mounted to the edge of the unit.
3. Drill a hole in the wall. Insert the plastic wall anchor into the hole and if necessary, use a small block of wood and hammer to tap it in so that it's flush with the wall.
4. Attach the bracket over the plastic wall anchor using the long screw.
5. Place the unit against the wall, both brackets need to be facing each other.
6. Lace an end of the restraint strap through the hole in each bracket. Bring both ends together and rotate the thumb nut onto the threaded end until tight.
7. Ensure that the restraint strap is securely laced and locked.

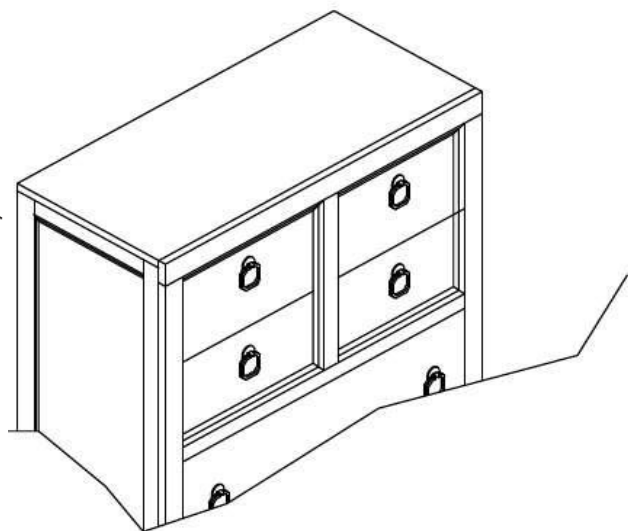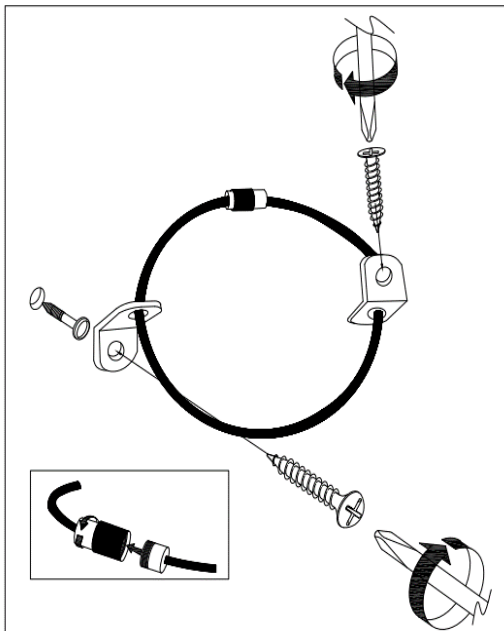

ITEM: **215872**



Inner Size of Drawer : 20.00"W X 10.75"D X 8.25"H X 0.50"T

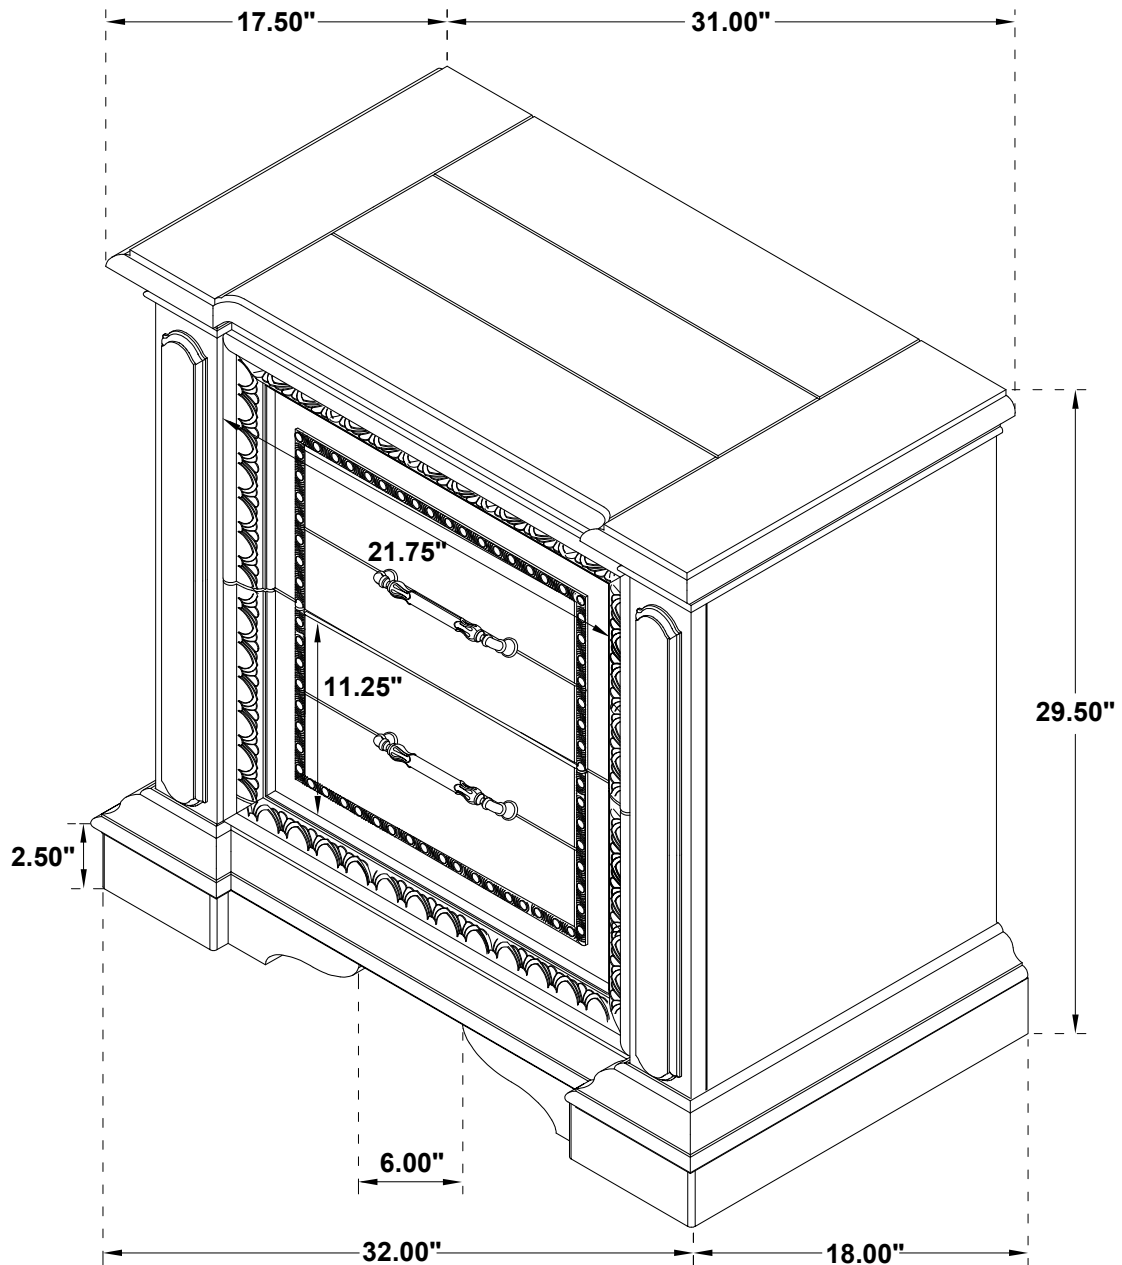

Note: Dimension tolerance $\pm 5\%$



ASSEMBLY INSTRUCTIONS

COASTER FINE FURNITURE



Fine Furniture for every stage of life

215873
Dresser

ANTI-TIPPING INSTALLATION INSTRUCTIONS

FURNITURE TIPPING RESTRAINT

WARNING

Injury may result from tipping furniture.



This restraint may protect against tipping furniture.

Do not allow children to climb on furniture.

This restraint is not a substitute for proper adult supervision.

Failure to detach this restraint before moving the furniture may result in injury and damage.

1. Attach one of the mounting brackets securely to the back edge of the unit, using the short screw.
2. Determine where the unit is to be placed, and mark the location on the wall for the other mounting bracket. The bracket on the wall needs to be approximately 2" below the bracket mounted to the edge of the unit.
3. Drill a hole in the wall. Insert the plastic wall anchor into the hole and if necessary, use a small block of wood and hammer to tap it in so that it's flush with the wall.
4. Attach the bracket over the plastic wall anchor using the long screw.
5. Place the unit against the wall, both brackets need to be facing each other.
6. Lace an end of the restraint strap through the hole in each bracket. Bring both ends together and rotate the thumb nut onto the threaded end until tight.
7. Ensure that the restraint strap is securely laced and locked.

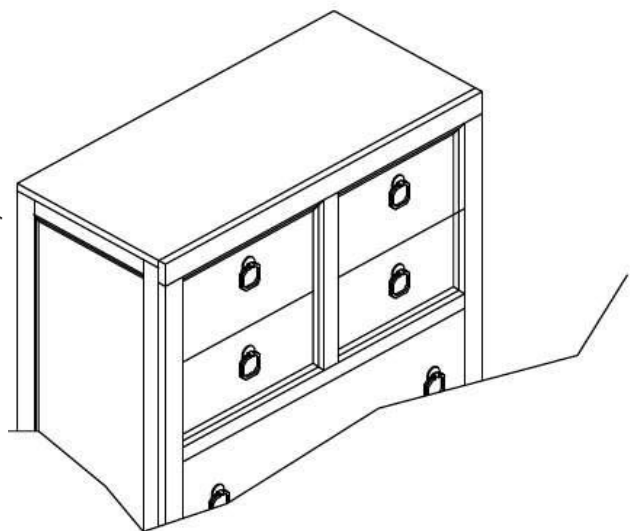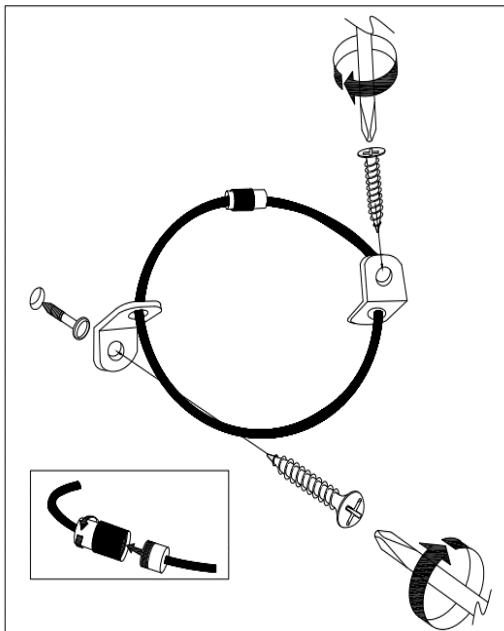


ITEM: **215873**



Inner Size of Drawer A : 29.75"W X 13.25"D X 7.50"H X 0.50"T


Inner Size of Drawer B : 29.75"W X 13.25"D X 5.50"H X 0.50"T

Inner Size of Drawer C : 29.75"W X 12.75"D X 2.50"H X 0.50"T

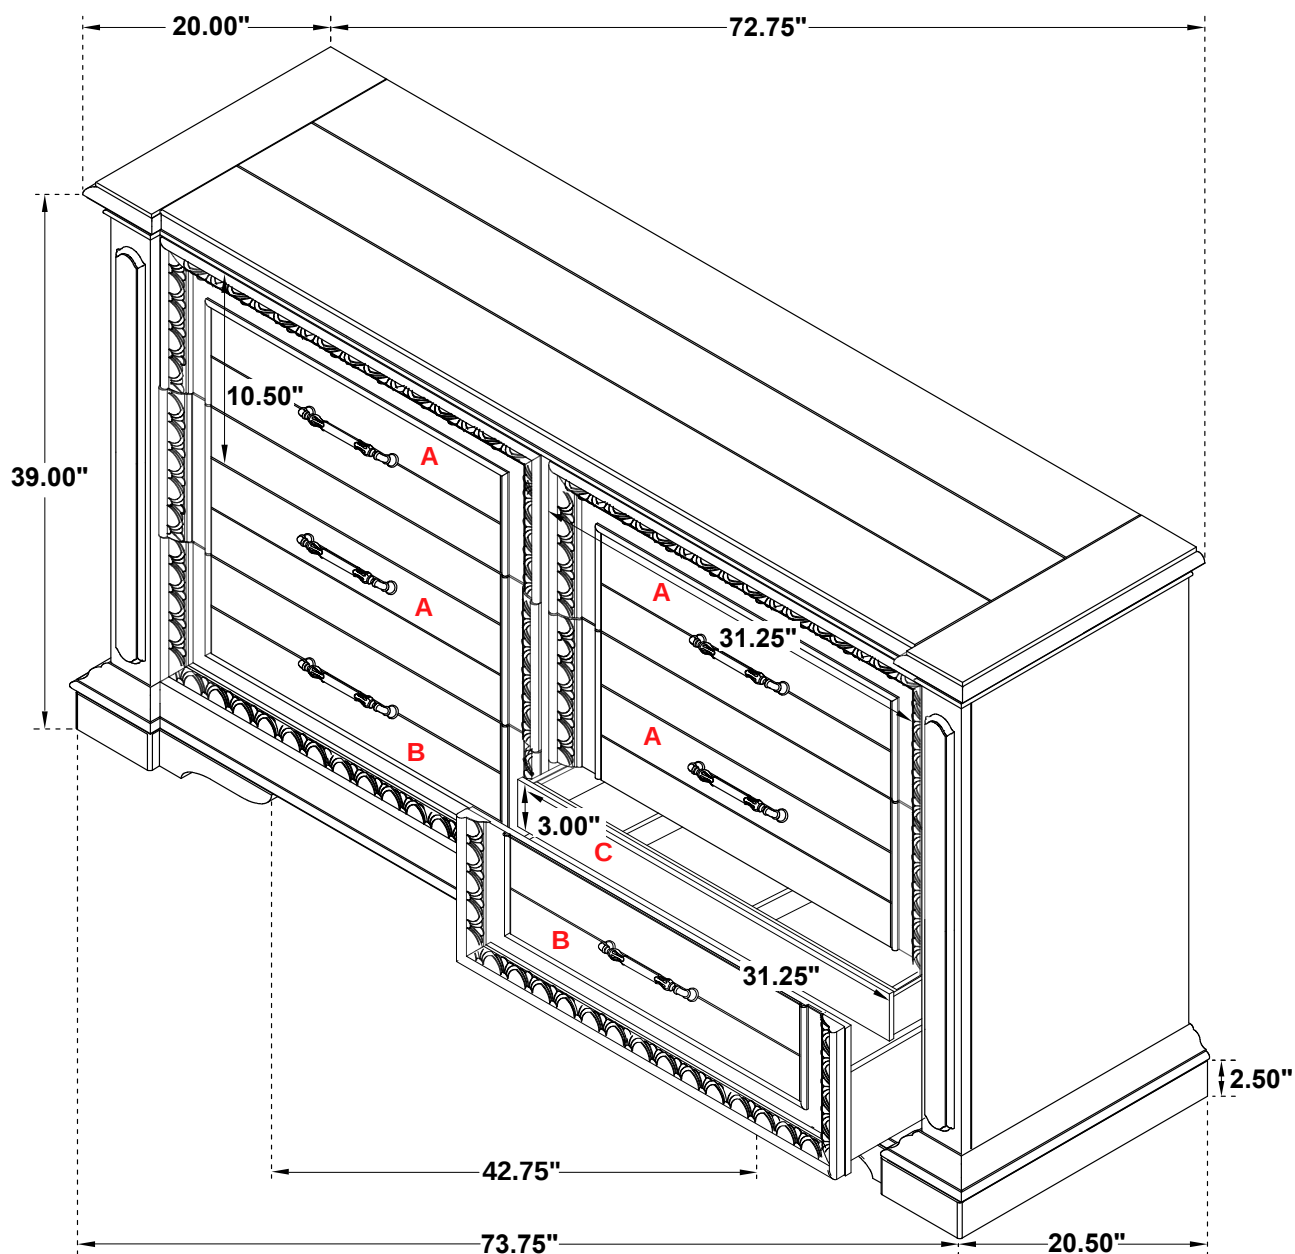

Note: Dimension tolerance $\pm 5\%$

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE

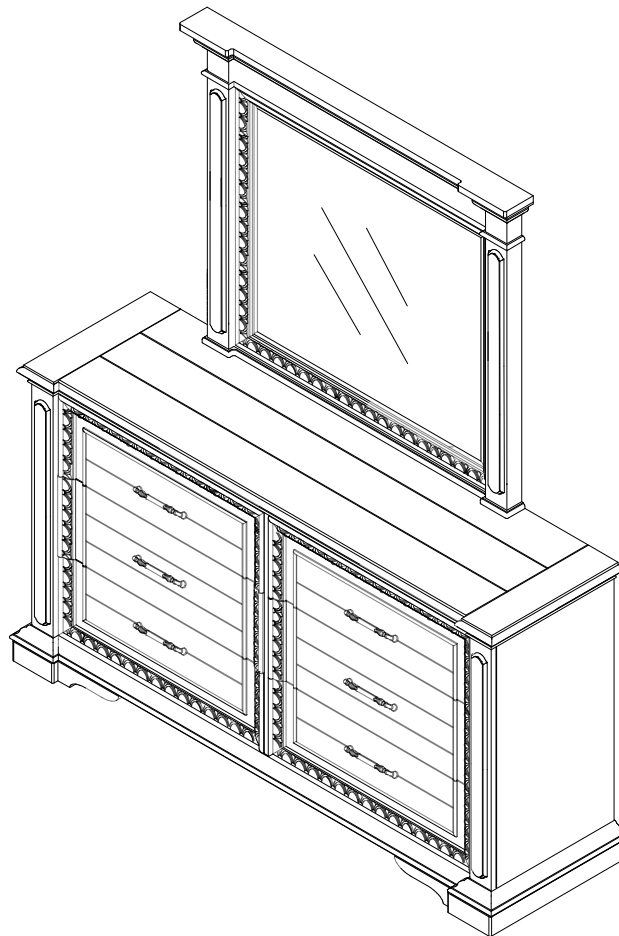

Fine Furniture for every stage of life

215874
Mirror

ITEM:215874



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

5 MINUTES


PARTS IDENTIFICATION

A
DRESSER
FROM BOX
ITEM #215873

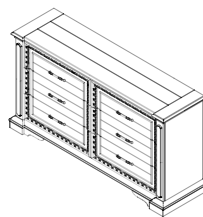

1PC

B MIRROR



1PC


C
MIRROR SUPPORT
(PACKED WITH
DRESSER)



2PCS

HARDWARE IDENTIFICATION

1 BOLT
($\Phi 1/4"$ x 38mm - RBW)



6PCS

3 FLAT WASHER
($\Phi 1/4"$ - RBW)



6PCS

2 LOCK WASHER
($\Phi 1/4"$ - RBW)



6PCS

4 ALLEN WRENCH
(4mm x 60mm - RBW)




1PC


ITEM: **215874**

ASSEMBLY INSTRUCTIONS


STEP 1

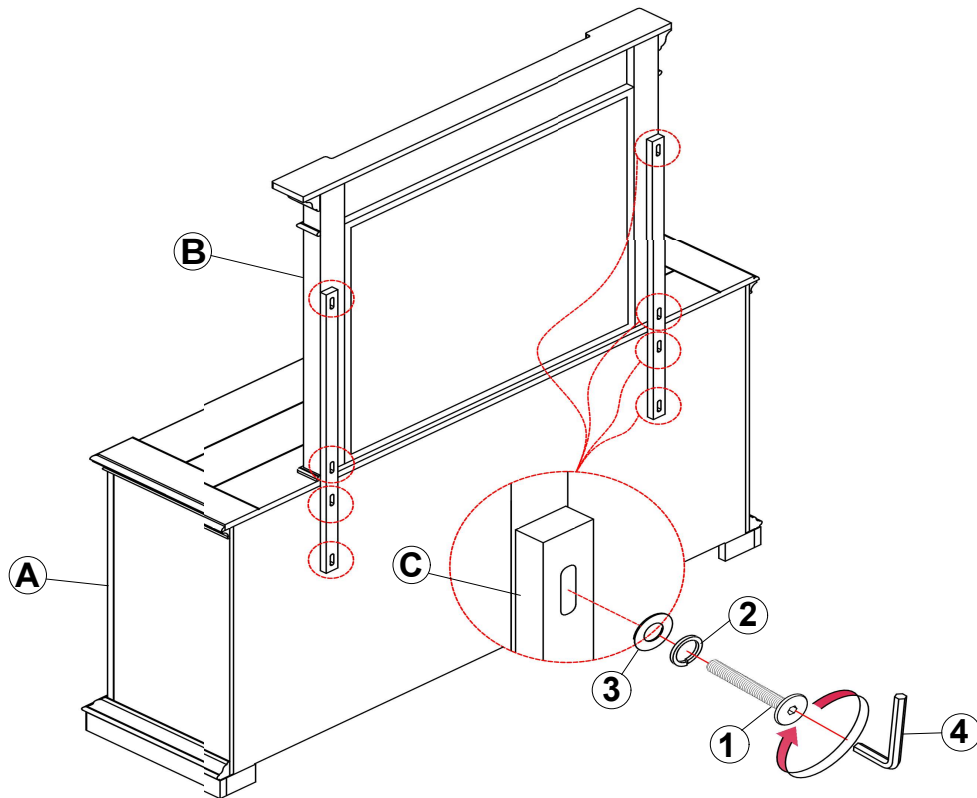

STEP 2 COMPLETE

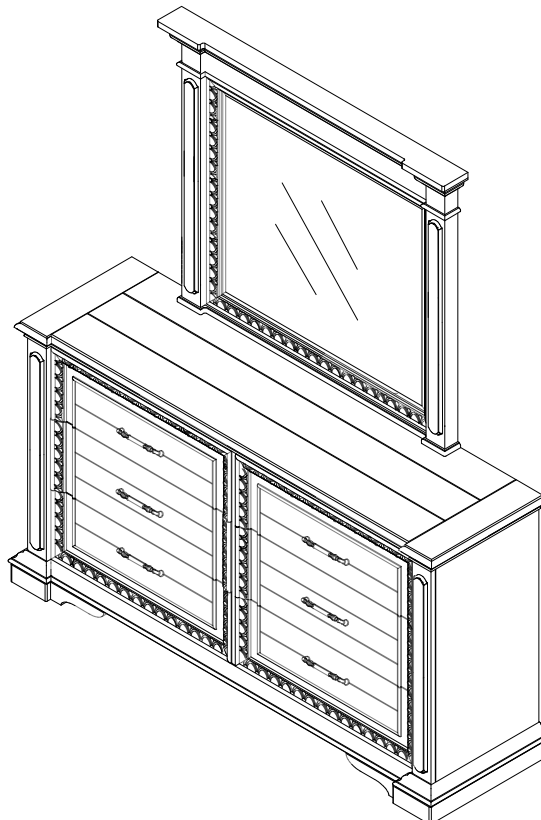

ITEM: **215874**

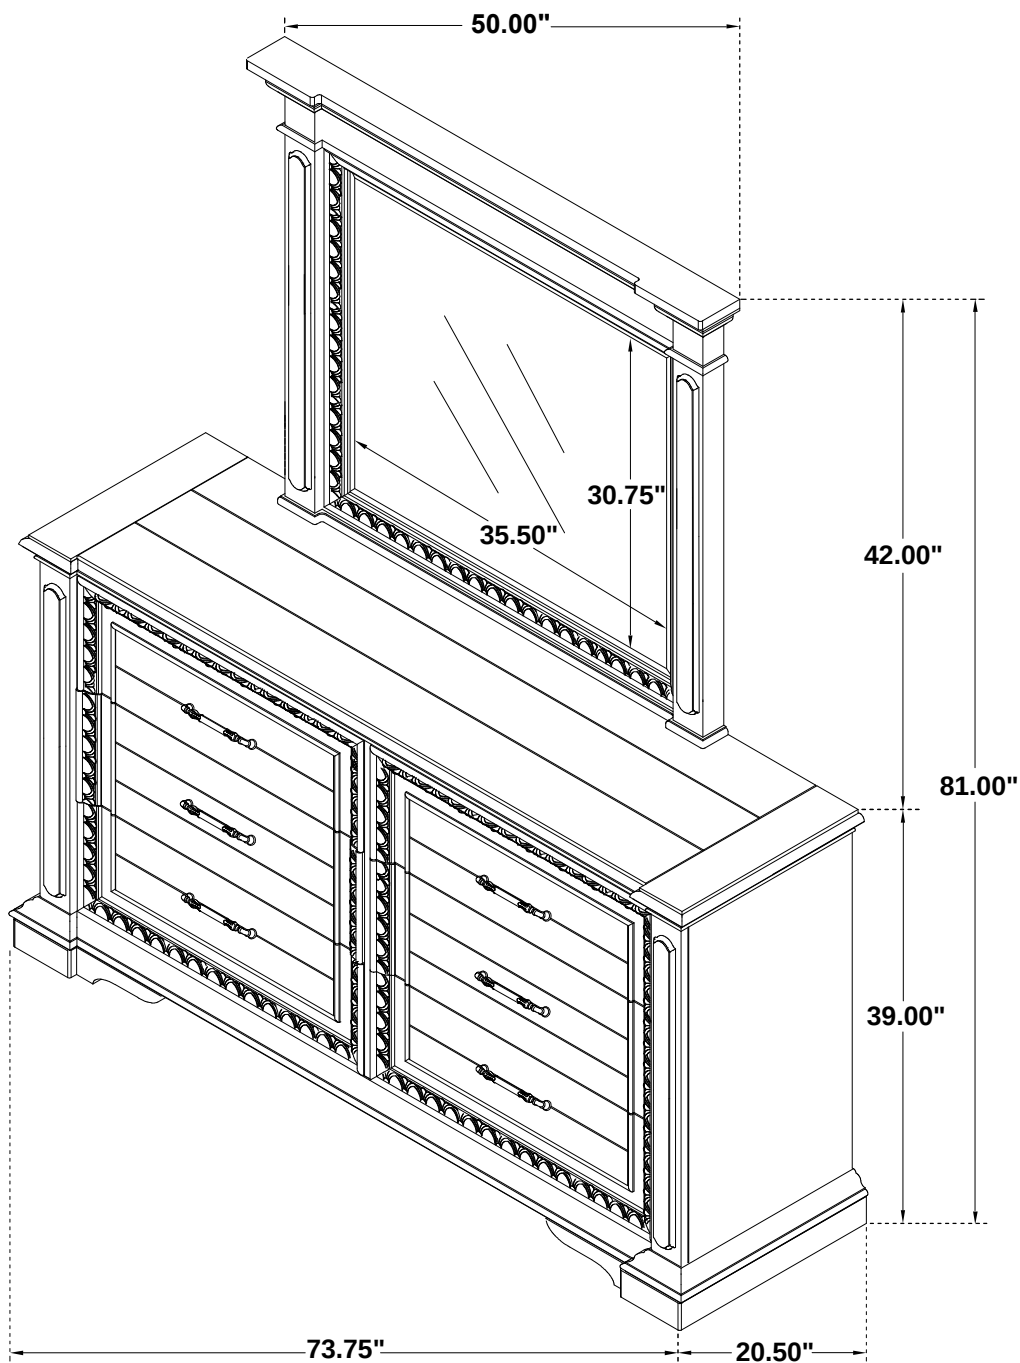

Note: Dimension tolerance $\pm 5\%$



ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

215875
Chest

ANTI-TIPPING INSTALLATION INSTRUCTIONS

FURNITURE TIPPING RESTRAINT

WARNING

Injury may result from tipping furniture.



This restraint may protect against tipping furniture.

Do not allow children to climb on furniture.

This restraint is not a substitute for proper adult supervision.


Failure to detach this restraint before moving the furniture may result in injury and damage.

1. Attach one of the mounting brackets securely to the back edge of the unit, using the short screw.
2. Determine where the unit is to be placed, and mark the location on the wall for the other mounting bracket. The bracket on the wall needs to be approximately 2" below the bracket mounted to the edge of the unit.
3. Drill a hole in the wall. Insert the plastic wall anchor into the hole and if necessary, use a small block of wood and hammer to tap it in so that it's flush with the wall.
4. Attach the bracket over the plastic wall anchor using the long screw.
5. Place the unit against the wall, both brackets need to be facing each other.
6. Lace an end of the restraint strap through the hole in each bracket. Bring both ends together and rotate the thumb nut onto the threaded end until tight.
7. Ensure that the restraint strap is securely laced and locked.

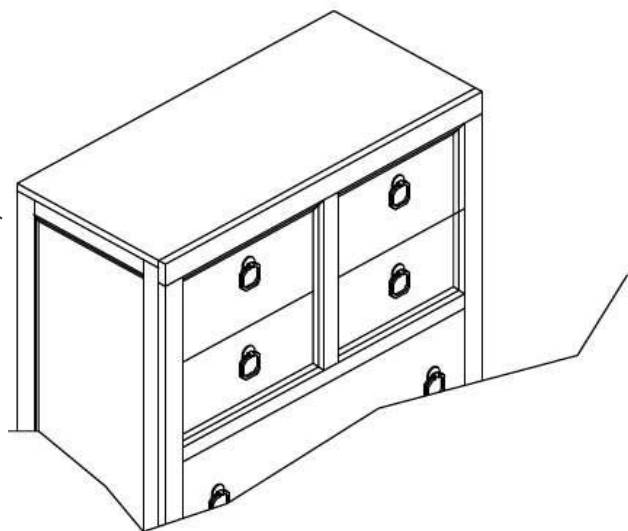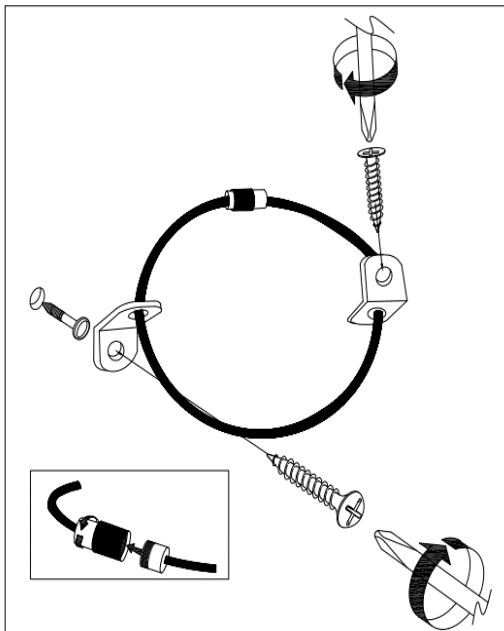

ITEM: **215875**

Inner Size of Drawer : 33.25"W X 13.25"D X 7.00"H X 0.50"T

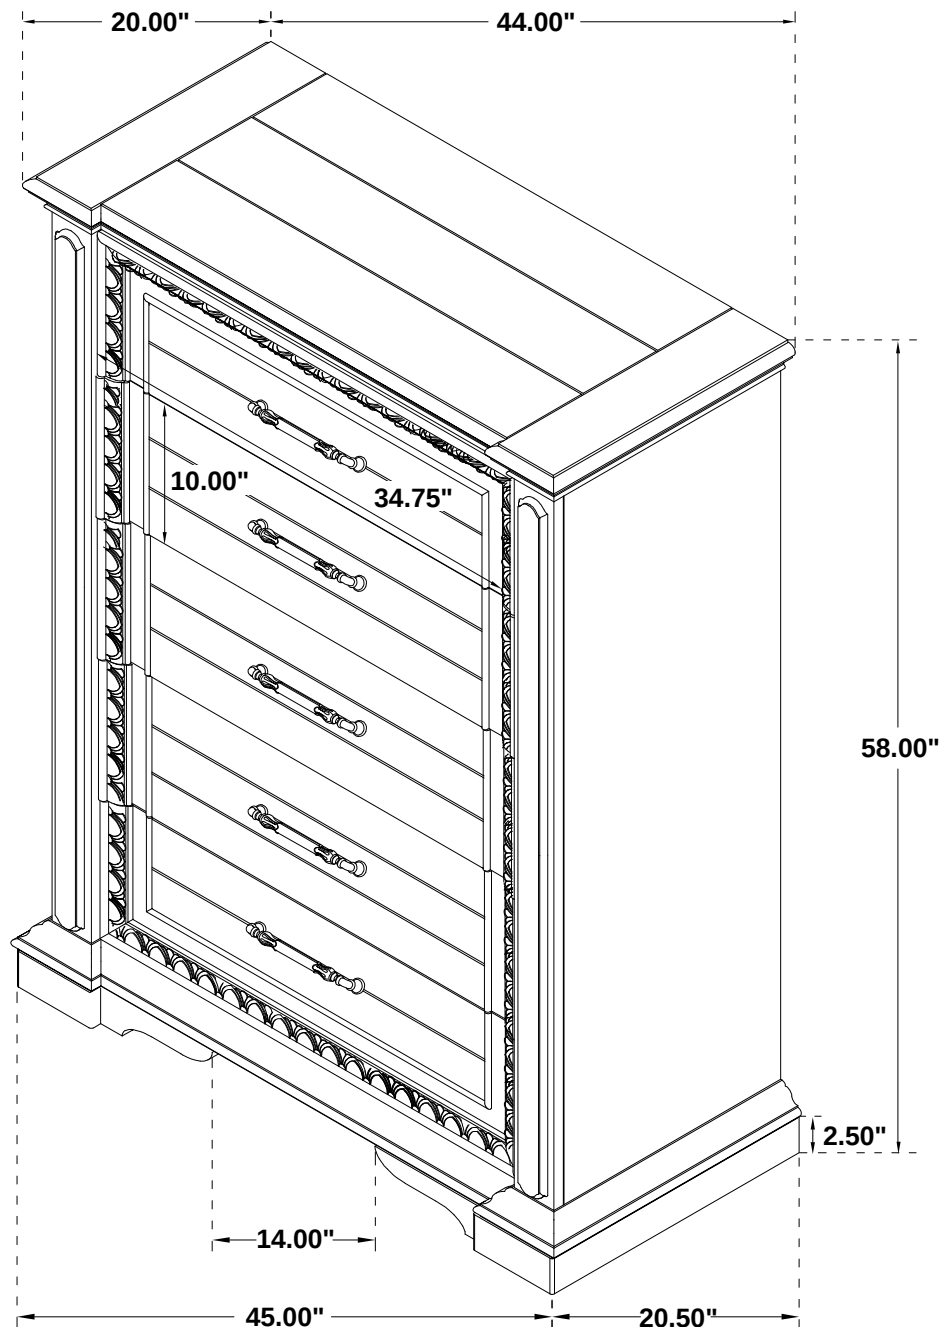

Note: Dimension tolerance $\pm 5\%$