









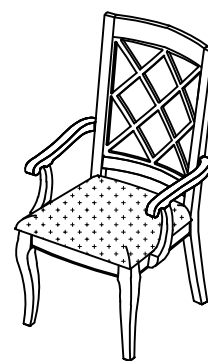







### Warning :

- Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment.
- To prevent possible scratches and damage, this furniture must be assembled on a soft surface such as a blanket or carpet.



57656  
Wood Back Uph  
Arm Chair 2in


### Components and Hardware List

Back frame	Front Leg	Seat cushion	Chair Arm (Left)	Chair Arm (Right)
 (A) 1 pc.	 (B) 2 pcs.	 (C) 1 pc.	 (D) 1 pc.	 (E) 1 pc.
Allen Head Bolt Ø5/16" x 18 x 3-1/8"  (F) 4 pcs.	Allen Head Bolt Ø5/16" x 18 x 2"  (G) 2 pcs.	Allen Head Bolt Ø5/16" x 18 x 2-3/8"  (H) 4 pcs.	Spring Washer Ø5/16" x Ø14  (I) 10 pcs.	Flat Washer Ø5/16" x Ø18  (J) 10 pcs.
4mm Allen Key  (K) 1 pc.	Screw Ø1/8" x 1-5/8"  (L) 2 pcs.	Allen Head Bolt Ø1/4" x 18 x 1-3/4"  (M) 2 pcs.	Spring Washer Ø1/4" x Ø14  (N) 2 pcs.	Flat Washer Ø1/4" x Ø18  (O) 2 pcs.


Tool Required  
(Not provided)  
Phillips Screwdriver




### Step 1

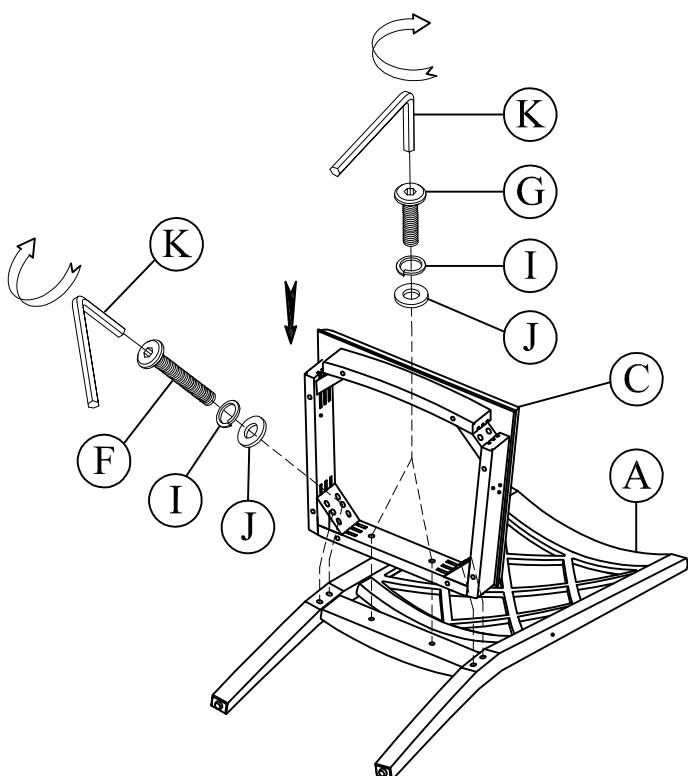

### Step 2

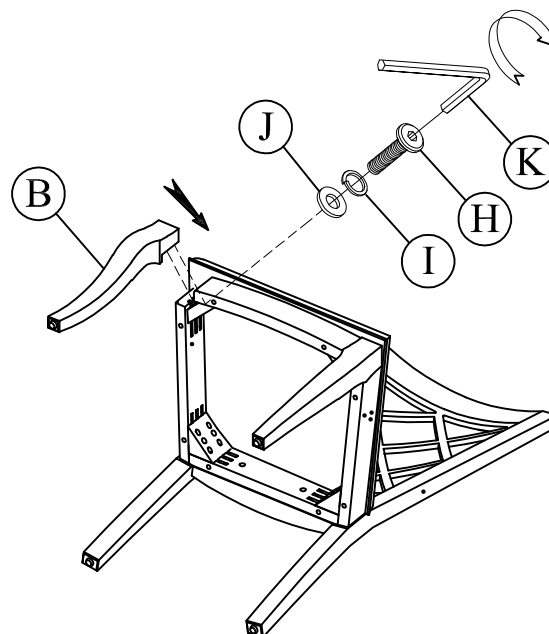

### Step 3

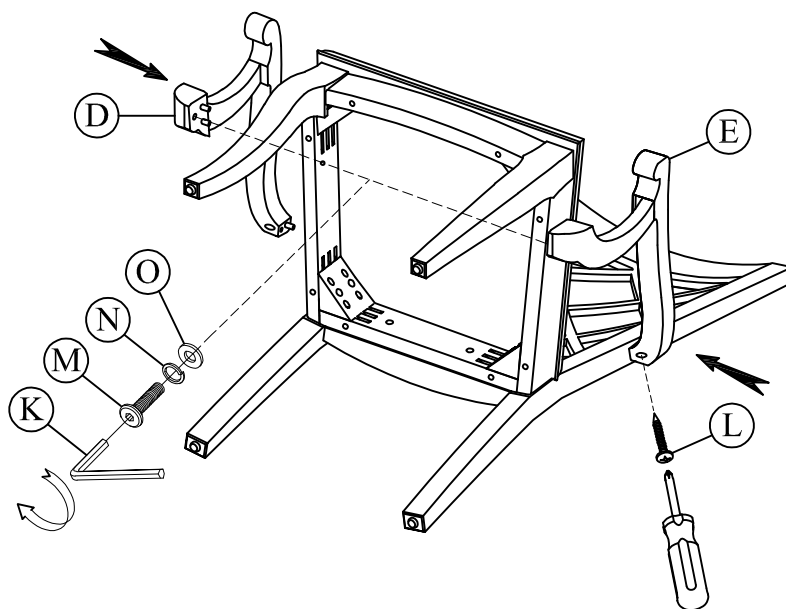

### COMPLETE

