

Headboard hardware located in velcro pouch in back of headboard.
Footboard hardware located in one end of the footboard/siderails.


ASSEMBLY INSTRUCTIONS

Item No: BSOF#9000

Description: KING BED

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment.

Step 1:

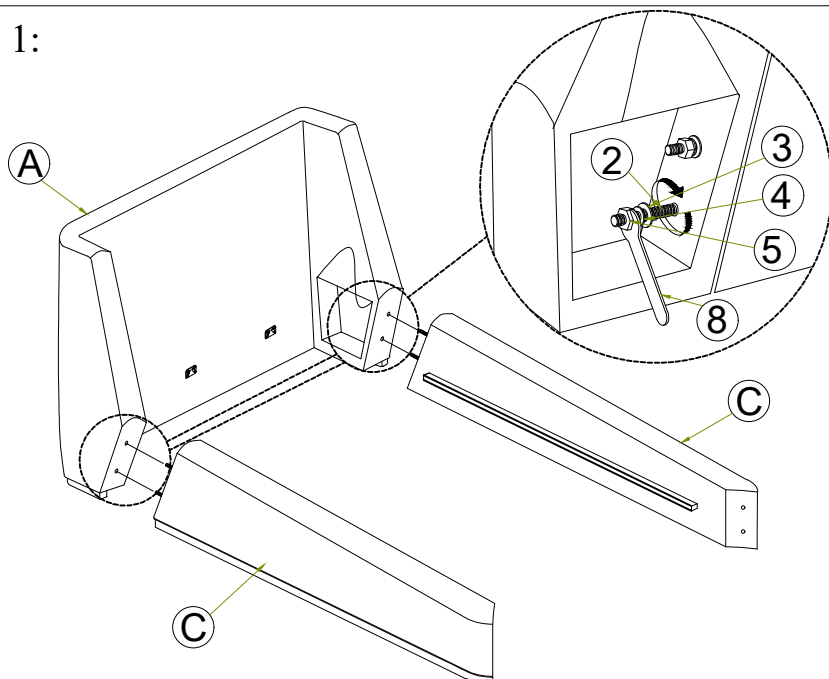

TOOLS REQUIRED (NOT PROVIDED)

Philips screwdriver

PART LIST


No.	Description	Sketch	Q'ty
A	Headboard		1 PC
B	Footboard		1 PC
C	Side Rail		2 PCS
D	Centre Rail		2 PCS
E	Slats		13 PCS
F	Long Support Leg		6 PCS

2	BOLT Ø5/16x90mm		4 PCS
3	FLAT WASHER (Ø5/16)22mm		4 PCS
4	LOCK WASHER (Ø5/16)		4 PCS
5	Hex Nut Ø5/16" x 12 x 5mm		4 PCS
8	WRENCH M5 x 90mm		1 PC

HARDWARE LIST

No.	Description	Sketch	Q'ty
1	BOLT Ø5/16 x 50mm		6 PCS
2	THREAD BOLT Ø5/16 x 90mm		8 PCS
3	FLAT WASHER Ø5/16 x 22mm		14 PCS
4	LOCK WASHER (Ø5/16)		14 PCS
5	Hex Nut Ø5/16" x 12 x 5mm		8 PCS
6	SCREW (M4x38mm)		26 PCS
7	SCREW (M4x20mm)		8 PCS
8	WRENCH M5 x 90mm		1 PC
9	ALLEN KEY (30*75mm)		1 PC

Step 2:

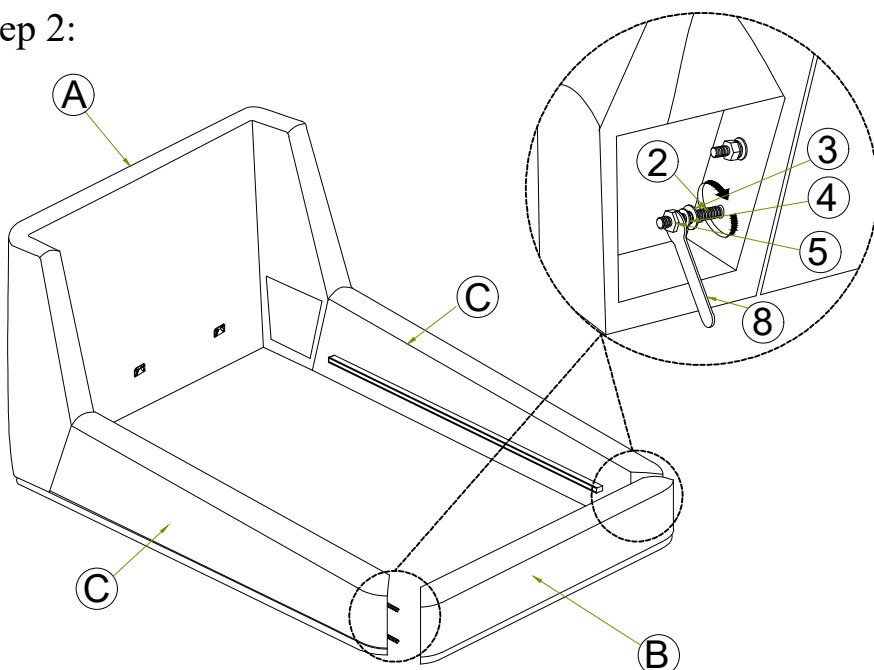

2	BOLT Ø5/16x90mm		4 PCS
3	FLAT WASHER (Ø5/16)22mm		4 PCS
4	LOCK WASHER (Ø5/16)		4 PCS
5	Hex Nut Ø5/16" x 12 x 5mm		4 PCS
8	WRENCH M5 x 90mm		1 PC

Headboard hardware located in velcro pouch in back of headboard.
Footboard hardware located in one end of the footboard/siderails.




ASSEMBLY INSTRUCTIONS

Item No: BSOF#9000

Description: KING BED

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment.


Step 3:

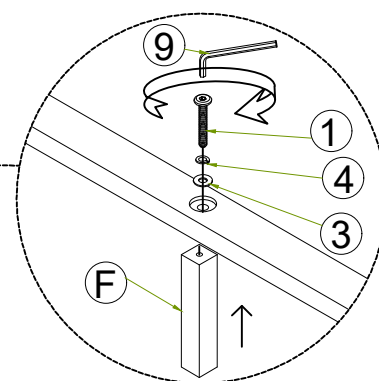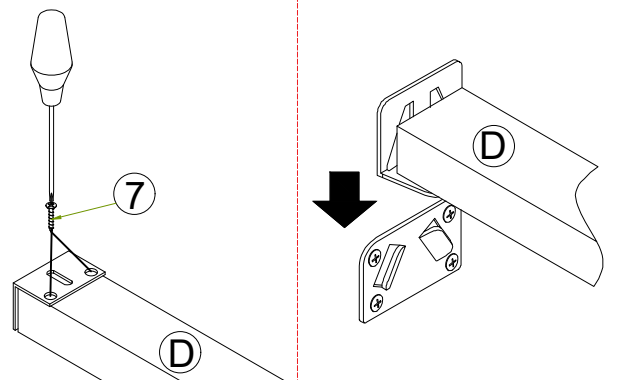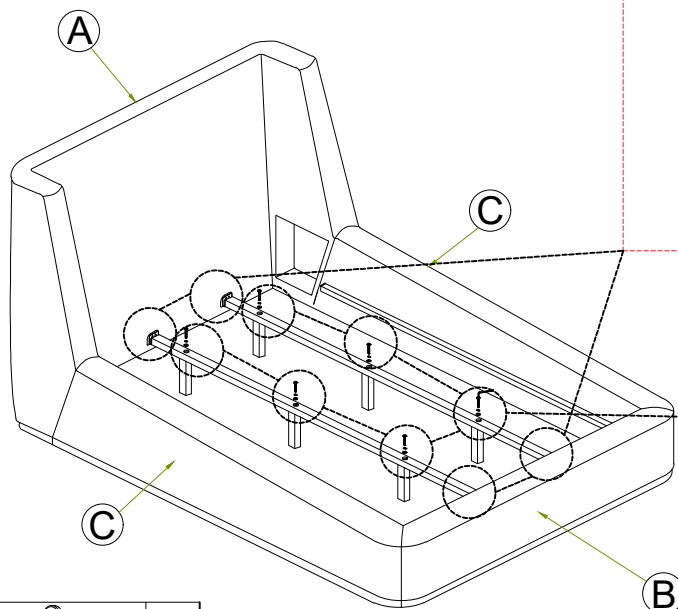


Adjustable leveler


1	BOLT Ø5/16x50mm		6 PCS
3	FLAT WASHER (Ø5/16)22mm		6 PCS
4	LOCK WASHER (Ø5/16)		6 PCS
7	SCREW (M4x20mm)		8 PCS
9	ALLEN KEY (35*100mm)		1 PC

Step 4:

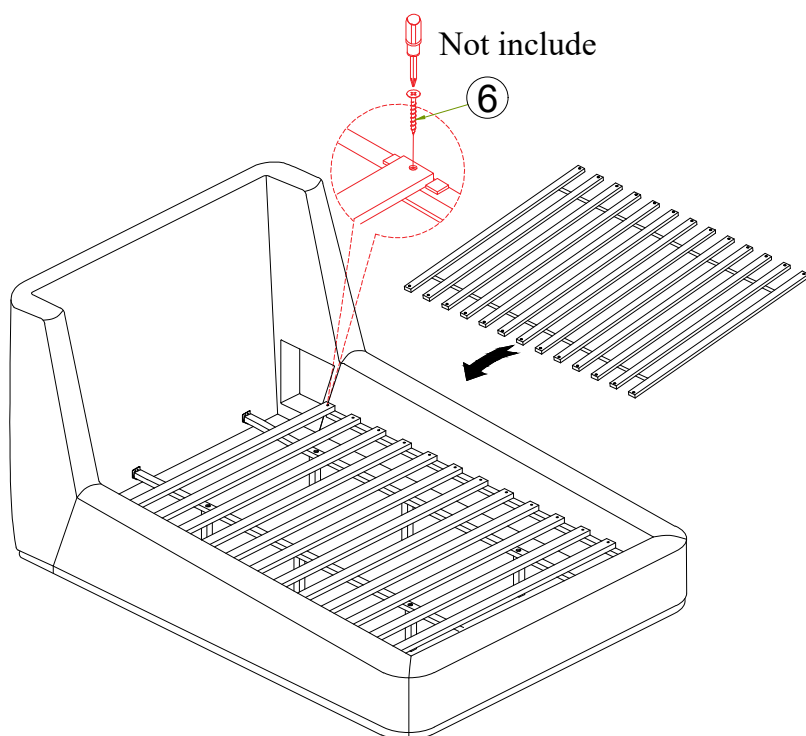

Completed

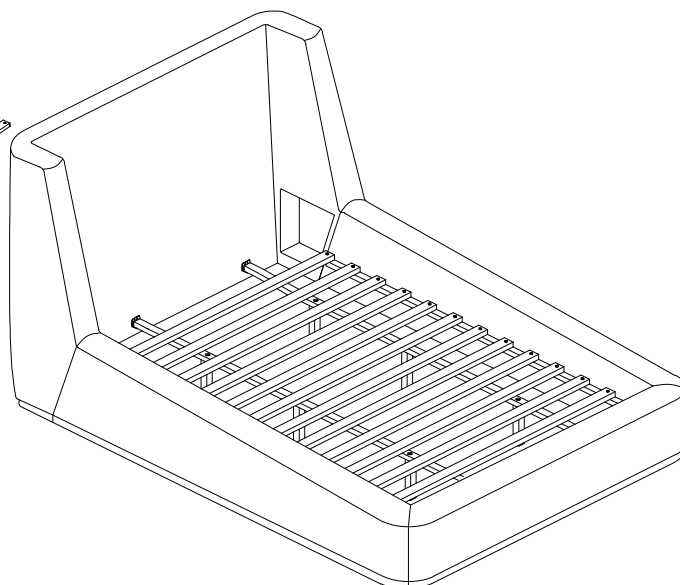

6	SCREW (M4x38mm)		26 PCS
---	-----------------	---	--------