


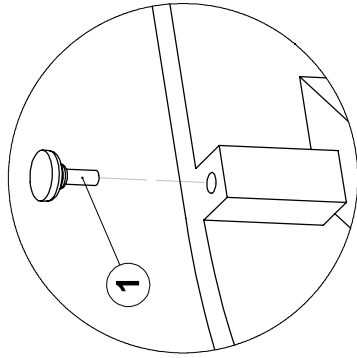

DETAIL B

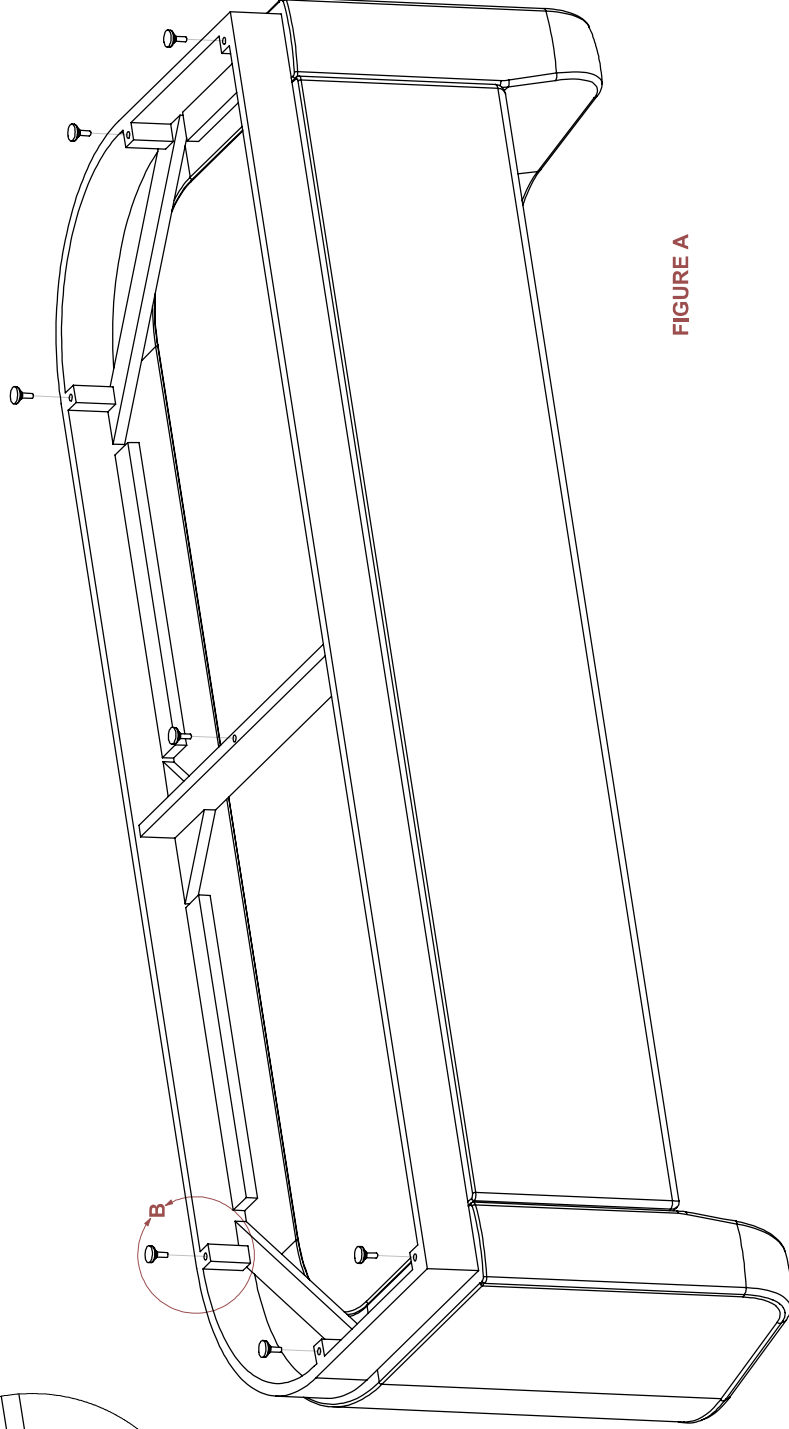


FIGURE A

- 1.- TURN THE SOFA UPSIDE DOWN ON A CLEAN AND FLAT SURFACE.
- 2.- ALIGN EACH LEG WITH THE HOLES AND SCREW THEM UNTIL THE LEGS ARE TIGHT.
- 3.- ONCE THE LEGS ARE INSTALLED, PLACE THE SOFA BACK TO ITS ORIGINAL POSITION.



ASSEMBLING INSTRUCTIONS

I-IUP-551

ITEM #	DESCRIPTION	#
1	LEVELERS 5/16 x 1"	7

IUP551-ACH

ITEM	DESCRIPTION	#
1HER153	NIVELADOR 5/16 x 1"	6

IUP551-LOV

ITEM	DESCRIPTION	#
1HER153	NIVELADOR 5/16 x 1"	7

IUP551-SOF

ITEM	DESCRIPTION	#
1HER153	NIVELADOR 5/16 x 1"	7



ASSEMBLING INSTRUCTIONS

I-IUP-551

IUP551-ACH
IUP551-LOV
IUP551-SOF