

# ASSEMBLY INSTRUCTION


## 2155-BENCH BROADMOOR BENCH


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may come loose inside the carton during shipment.

Identify and count all parts.


**NOTE:** Assemble the bench on a flat & soft surface. Do not tighten all the screws until the bench has been put a flat /hard surface adjust & level all the legs so that they do not wobble. Once adjusted then tighten all the screws.

**NOTE :** Periodically check to ensure that all connectors (bolts, screw, etc.) are tight.


PARTS LIST		
NO	DESCRIPTION	QTY
1	CUSHION SEAT 	1
2	LEG LEFT 	4
3	LEG RIGHT 	3
4	SUPPORT RAIL 	2
5	STRETCHER 	2

HARDWARE LIST		
NO	DESCRIPTION	QTY
A	 JCBC SCREW M6 x 40MM (NYLOK) WITH LOCK & WASHER	4
B	 JCBC SCREW M6 x 60MM (NYLOK) WITH LOCK & WASHER	8
C	 ALLEN KEY M4	1
D	 PAN HEAD RATTAN SCREW #8 x 32MM	4


### STEP 1

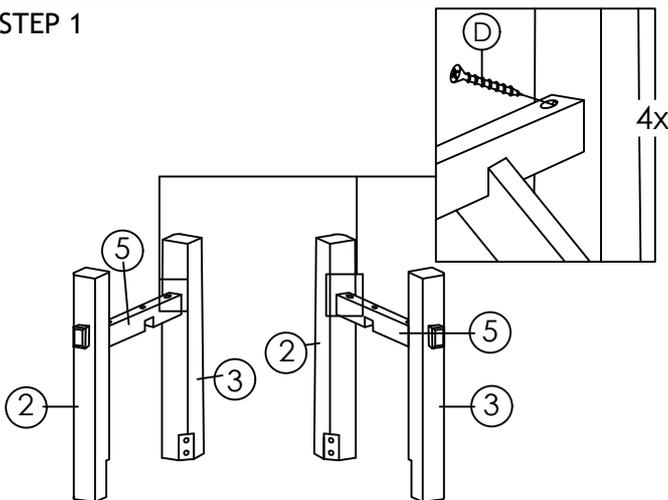


### STEP 2

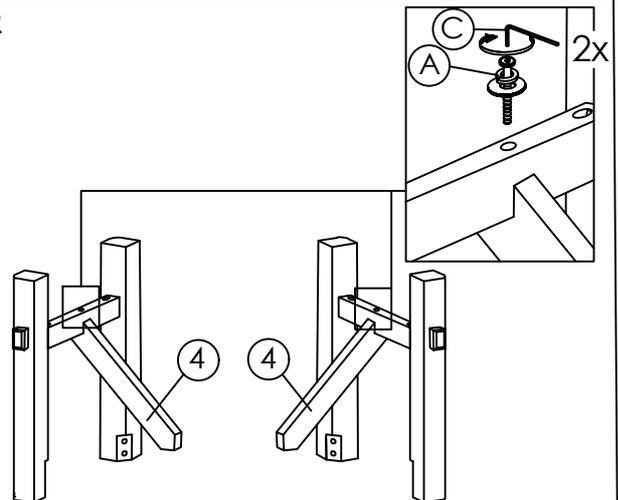

### STEP 3

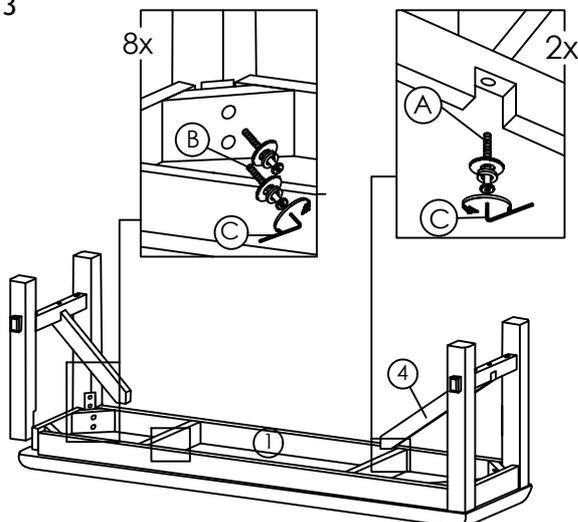

### COMPLETED ASSEMBLY

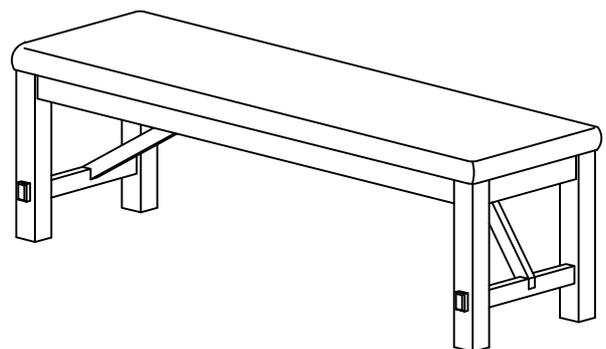

**NOTE:** To ensure bench durable and long lasting, please check entire bench part whether it's in safe and ordinary conditions. The hardware is located in the packing items.