

Assembly Instruction for ARM CHAIR D-1710-5-AC3/D-1710-6-AC3/D-1710-8-AC3

Caution: Please read instructions thoroughly before unpacking assembly parts. Sharp, exposed staple tips can cause injury, therefore, for your protection, please remove any exposed staples used in packing.


1. We recommend that you should assemble this product with the assistance of another person; this will make assembly easier, and will help to eliminate damage to the product or injury to persons during assembly.
2. Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment.
3. Please do not over tighten screws or bolts.
4. Please Put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

PART LIST			
No.	PART DESC	CODE.	Q'TY
A	BACKREST	PD-1710-5-AC3BAC PD-1710-6-AC3BAC PD-1710-8-AC3BAC	1
B	SEAT CUSHION WITH FRAME	PD-1710-5-AC3SEC PD-1710-6-AC3SEC PD-1710-8-AC3SEC	1
C	LEFT FRAME	PD-1710-5-AC3LEG1 PD-1710-6-AC3LEG1 PD-1710-8-AC3LEG1	1
D	RIGHT FRAME	PD-1710-5-AC3LEG2 PD-1710-6-AC3LEG2 PD-1710-8-AC3LEG2	1


HARDWARE LIST			
NO.	HARDWARE DESC	CODE.	Q'TY
1	ALLEN KEY(M4)	PD-1710-5-AC3HW	1
2	SPRING WASHER(1/4")		2
3	FLAT WASHER (1/4" -20 x 7/8")		2
4	ALLEN BOLT (1/4"-20 x 2-1/2")	PD-1710-6-AC3HW	4
5	ALLEN BOLT (1/4"-20 x 1-1/2")	PD-1710-8-AC3HW	4
6	NUTS (5/8" x 5/16")	PD-1710-5-AC3HW	6
7	BARREL NUTS (Ø10x 2")		2
8	SCREW DRIVER (5 x 2-3/8")		1

⚠ Only tighten all bolts when all bolts aligned with bolt inserts.

STEP : 1

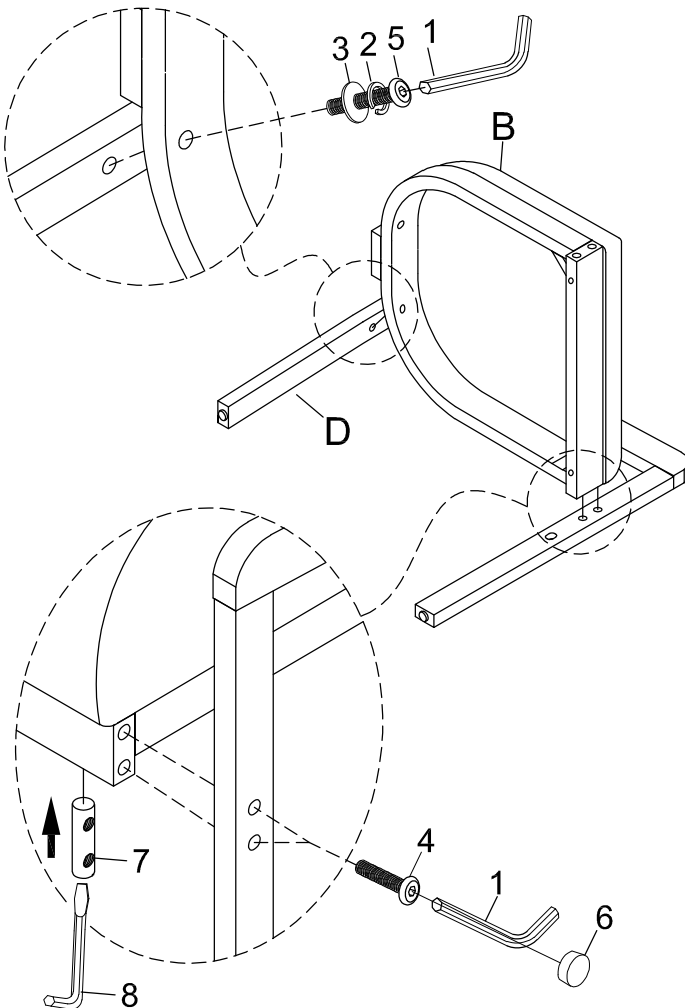


STEP : 2

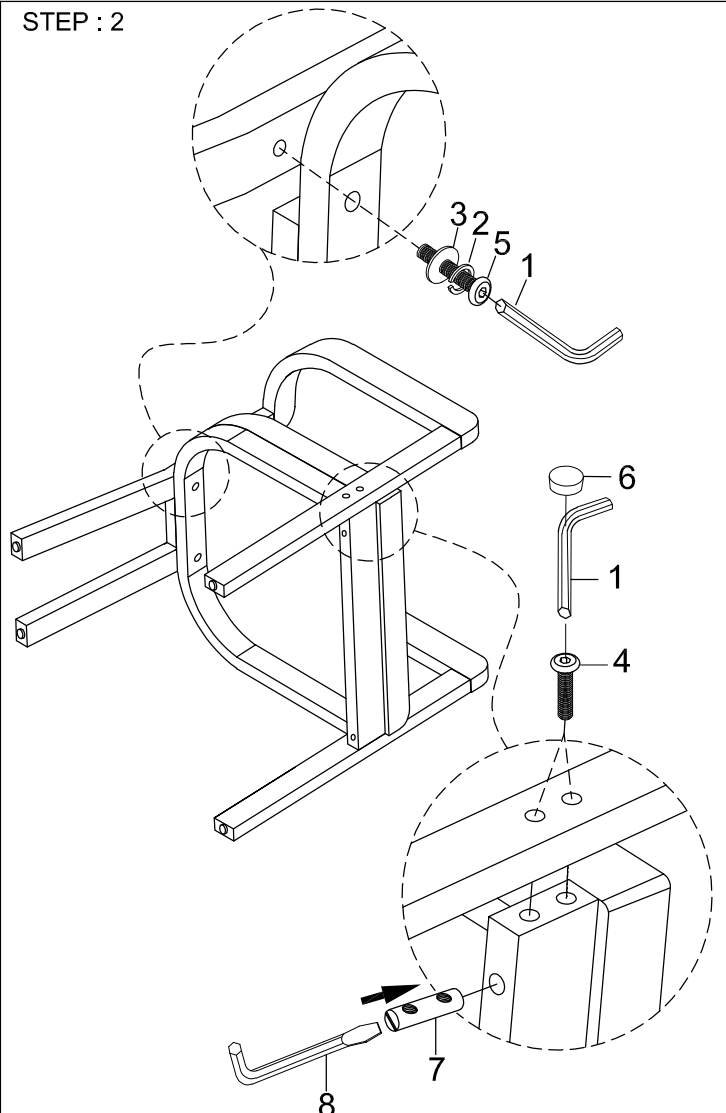

Assembly Instruction for
ARM CHAIR
D-1710-6-AC3/D-1710-8-AC3/D-1710-5-AC3

STEP : 3

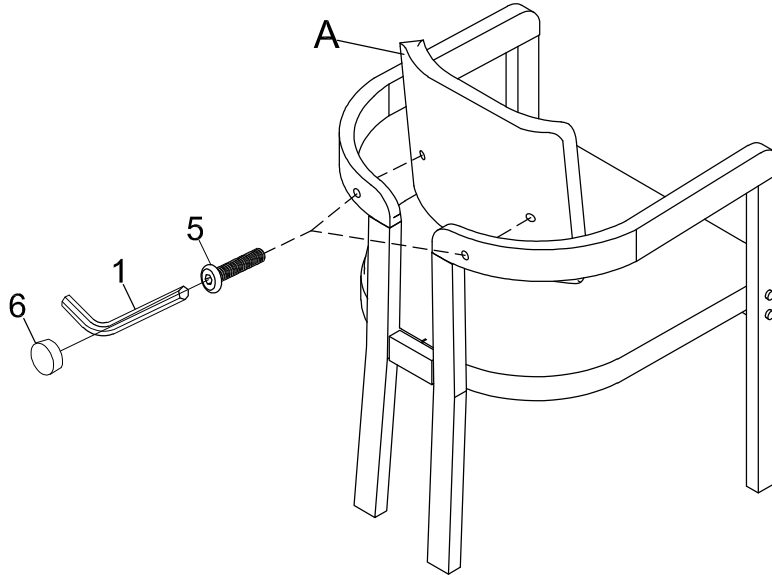

COMPLETED

