


UTTERMOST

ASSEMBLY INSTRUCTIONS

23845

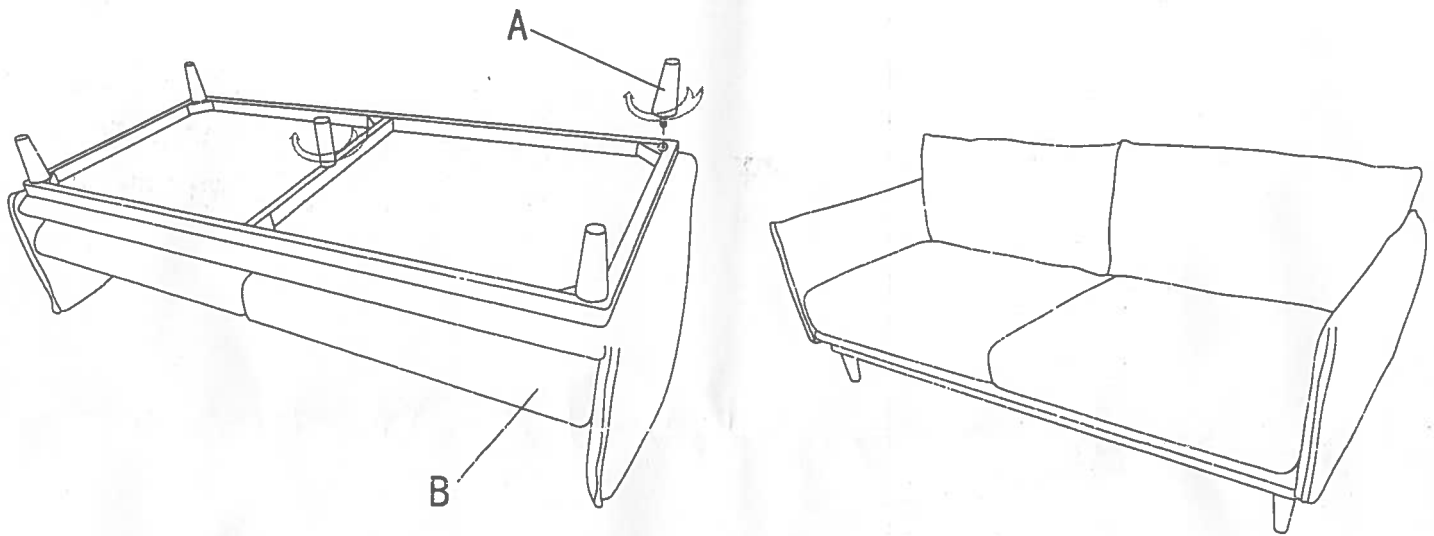

1. Take the parts carefully out of the carton, and place it on a flat surface, make sure that the parts will not be damaged.

2. Use the screws to secure the rear legs(A) to the seat(B)

Hardware and tool included: 2 screws.

The foot pin of front legs can be adjustable.

To Clean, wipe with soft dry cloth.