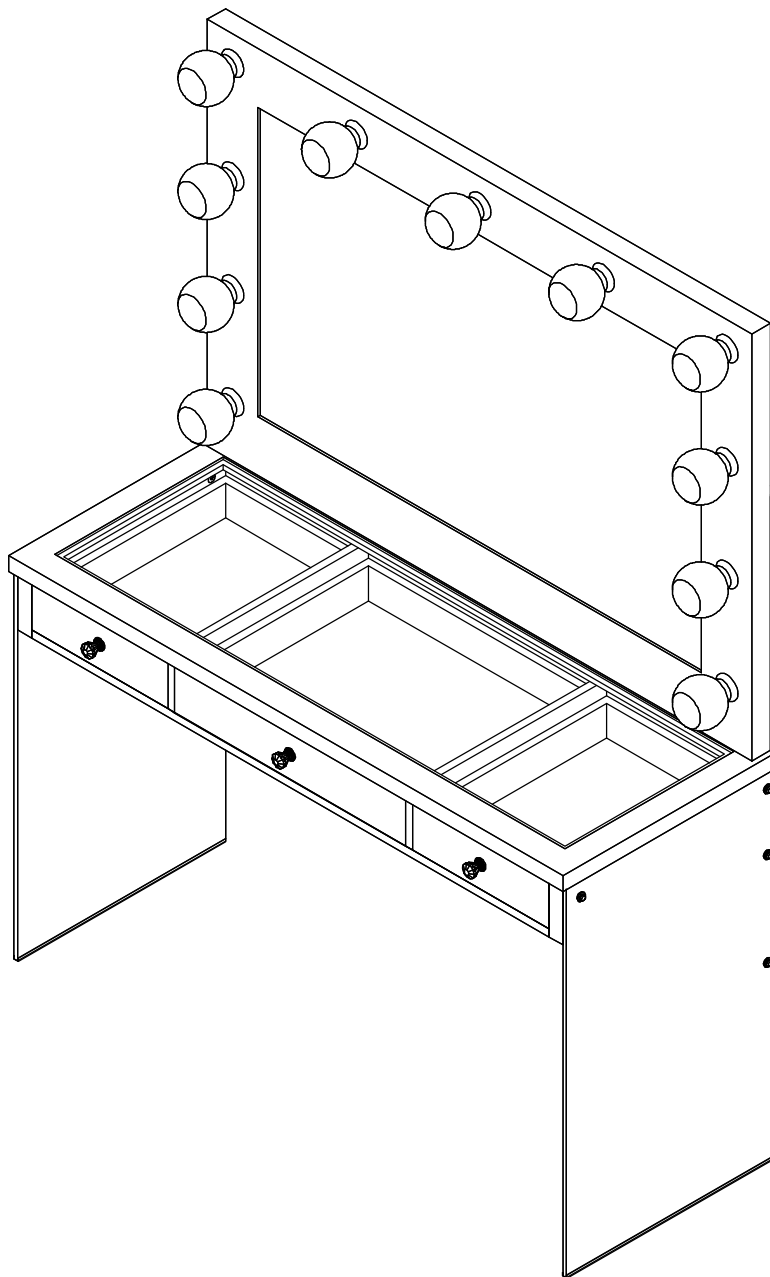


# Jacey Vanity

## Item #: CVJZ700VM-VB

### ASSEMBLY INSTRUCTIONS



Recommendation: Replace clear 4W/6W LED filament bulb equivalent 40W/60W Incandescent.

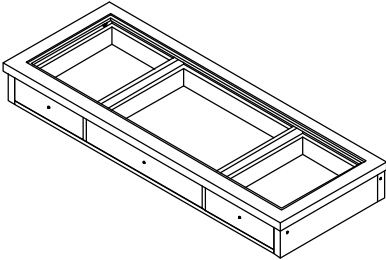
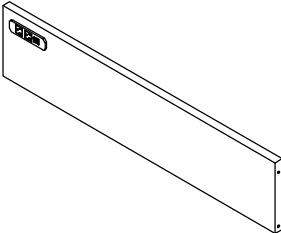

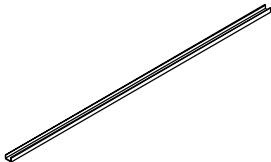
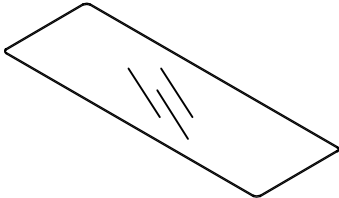
**WARNING:**  
**RISK OF FIRE**  
**LED LIGHT BULB**  
**120V E26/MAX 25**  
**WATT** (Per Light Bulb)

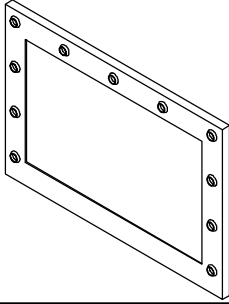
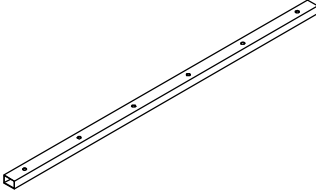
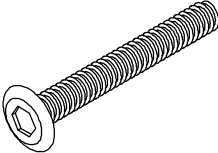
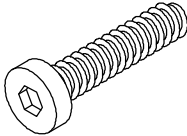






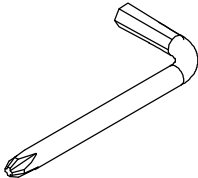
# ASSEMBLY INSTRUCTIONS

## Item #: CVJZ700VM-VB

Please identify and locate all assembly parts (see parts list) before discarding any packing materials.  
Some parts may have become loose during transit.

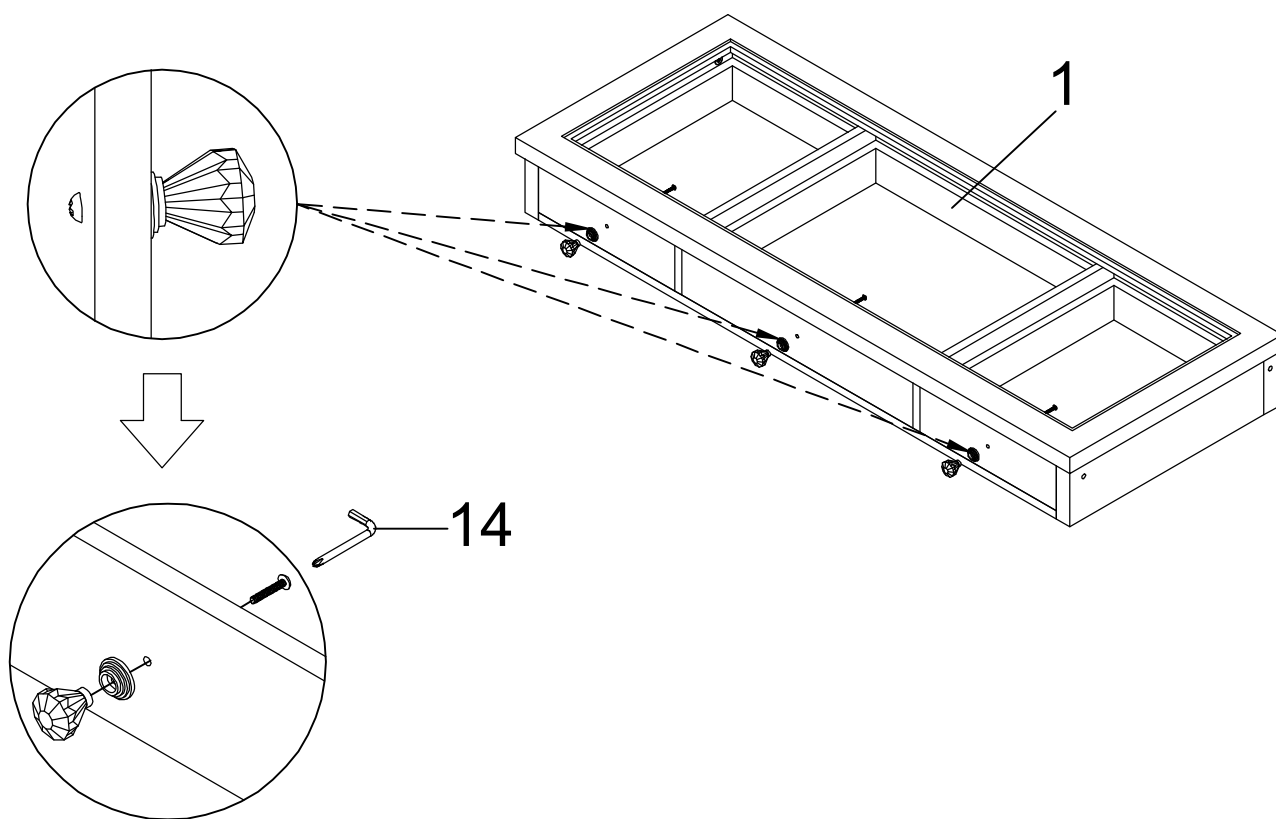
PARTS LIST			
NO.	SKETCH	DESCRIPTION	QYT
1		VANITY TABLE TOP	1PC
2		BACK PANEL	1PC
3		GLASS PANEL	2PCS
4		PLASTIC BAR	2PCS
5		GLASS TOP	1PC

NO.	SKETCH	DESCRIPTION	QYT
6		MIRROR	1PC
7		CROSSBAR	2PCS
8		LONG BOLT 1/4" x 35mm	12PCS
9		SHORT BOLT 1/4" x 25mm	8PCS
10		WASHER ø16mm	8PCS
11		PLASTIC WASHER ø15mm	8PCS


NO.	SKETCH	DESCRIPTION	QYT
12		CAP 20 x 30mm	4PCS
13		COVER ø11mm	8PCS
14		ALLEN KEY 4mm	1PC

NOTE: Do not tighten until each step is completed or instructed.


Step 1: Install the Knob using Knob bolt with Allen Key (14) as shown.



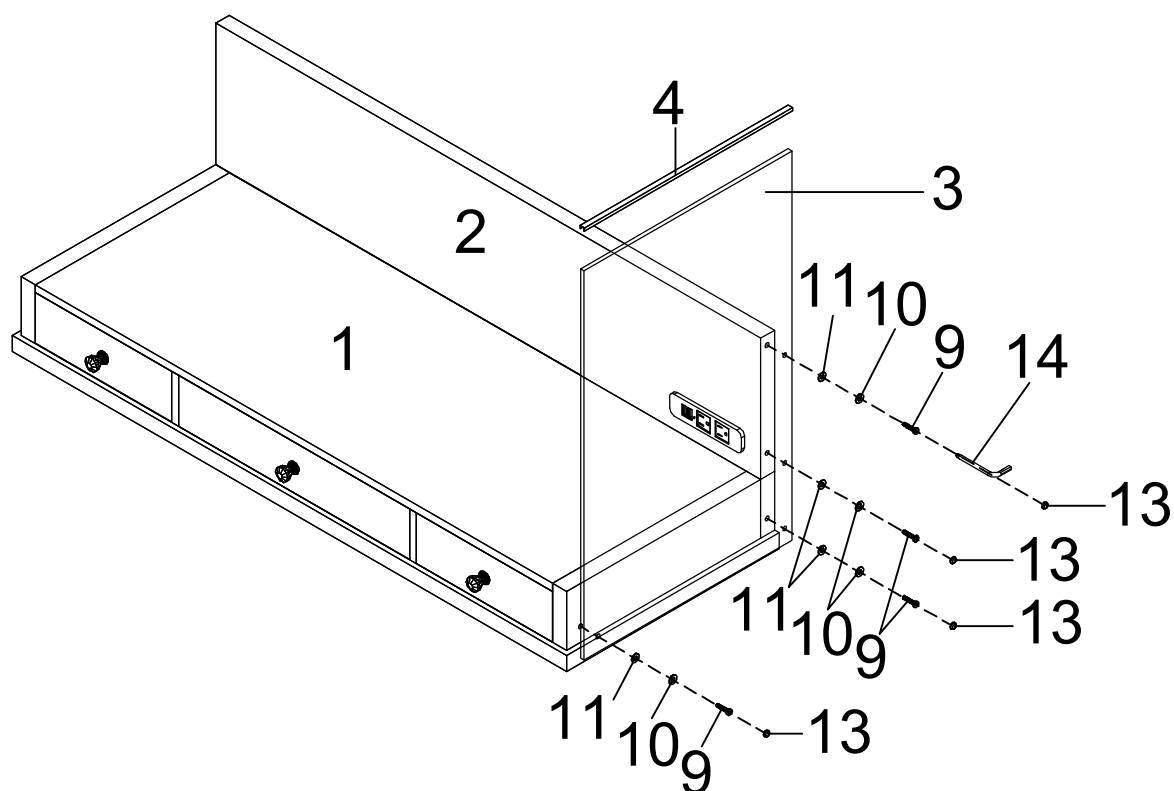
Step 2: 1. Turn the Vanity Table Top (1) upside down on a protective surface. Attach Glass Panel (3) to the box (1) and Back Panel (2) using Short Bolt (9), Washer (10), Plastic Washer (11) and Cover (13) with Allen Key (14).  
2. Attach Plastic Bar (4) to Side Glass (3) as shown.



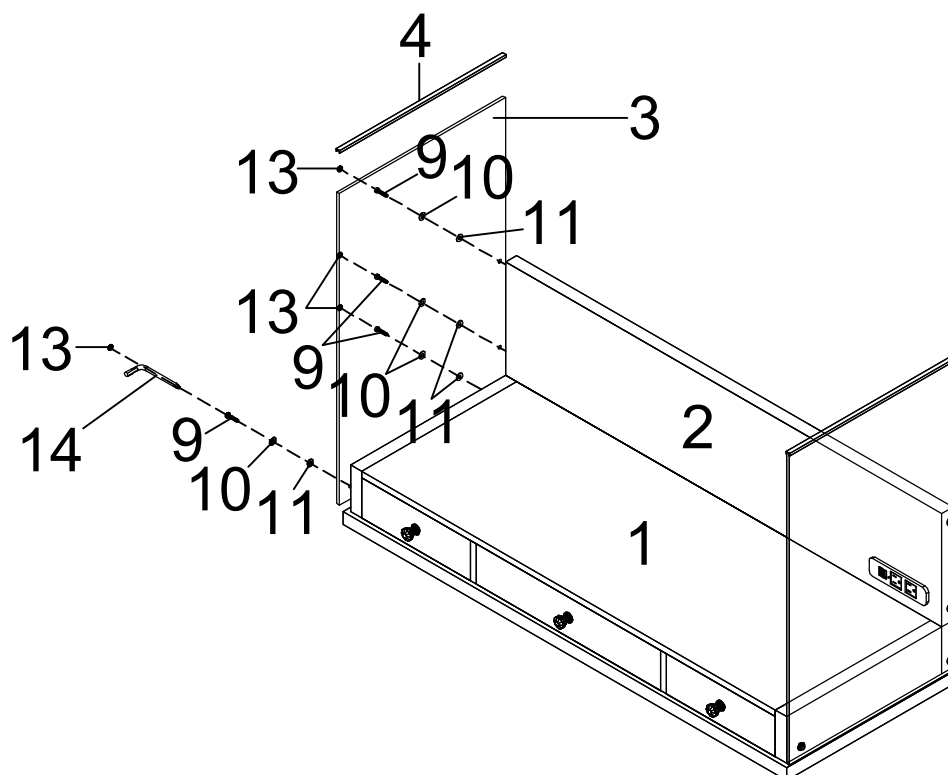Step 3: 1. Attach Glass Panel (3) to the Vanity Table Top (1) and Back Panel (2) using Short Bolt (9), Washer (10), Plastic Washer (11) and Cover (13) with Allen Key (14).  
2. Attach Plastic Bar (4) to Side Glass (3) as shown.




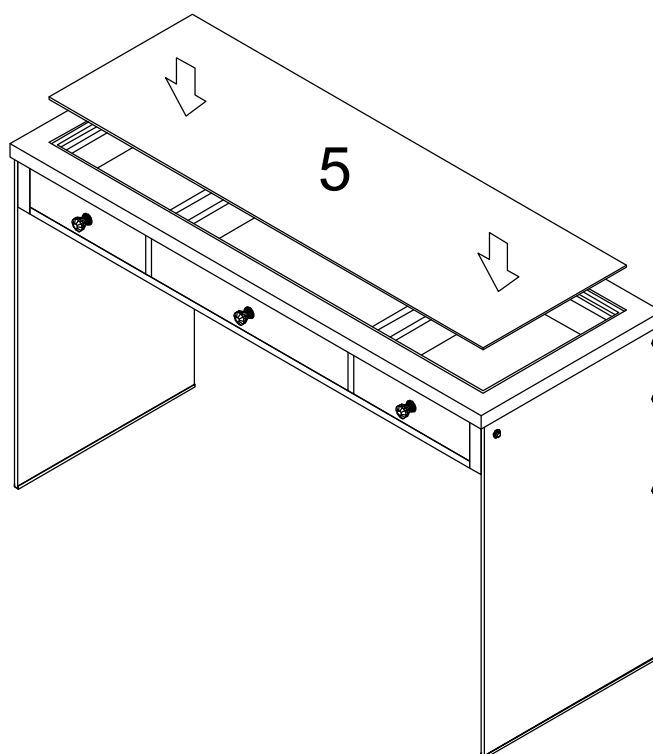Step 4: Turn the assembly to upright position. Insert the Glass Top (5) as shown.




Step 5: 1. Insert Cap (12) to the Crossbar (7).

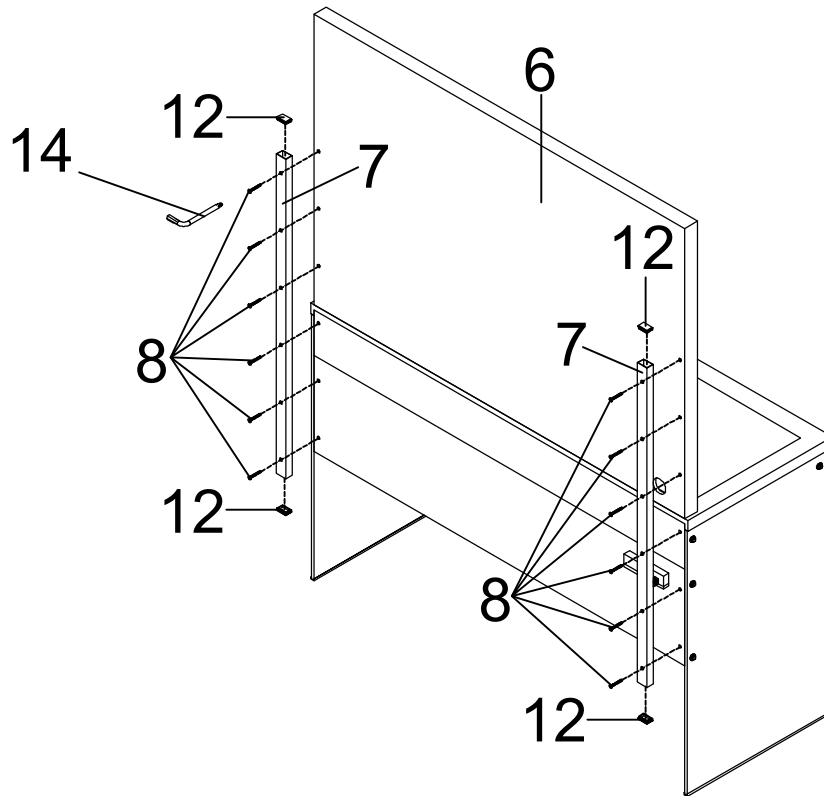2. Place Mirror (6) onto the Vanity table assembly. Secure Crossbar (7) to the back of the Mirror (6) and Vanity table assembly with Long Bolt (8) tighten with Allen Key (14).



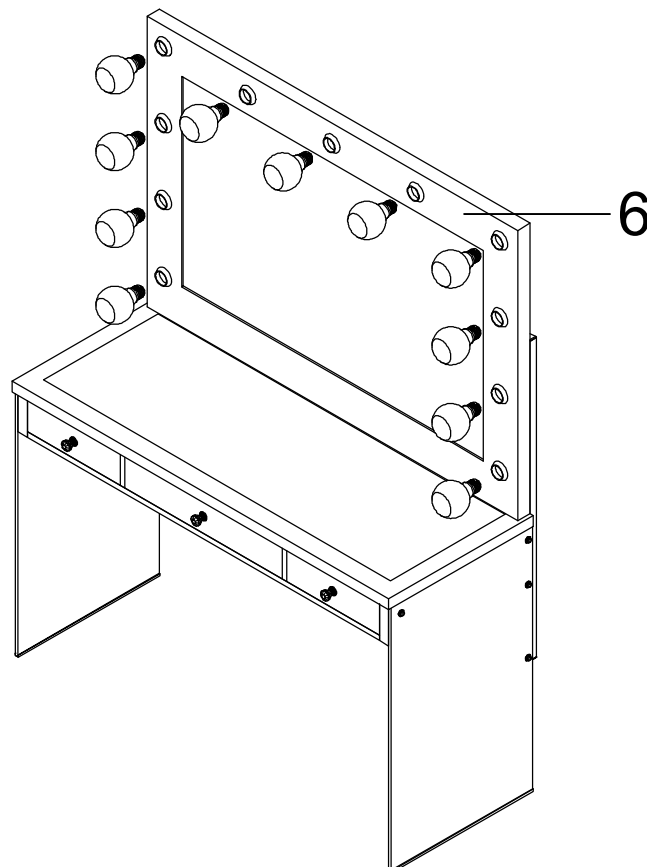Step 6: Install Light bulbs to the Mirror (6) as shown.



Complete. Congratulations on your assemble success.