

88 5531 42

Bedford Night Stand

(Ebony Finish)


IMPORTANT NOTE

Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damages occuring to the wood parts.


We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.




Casual Attire For Today's Home

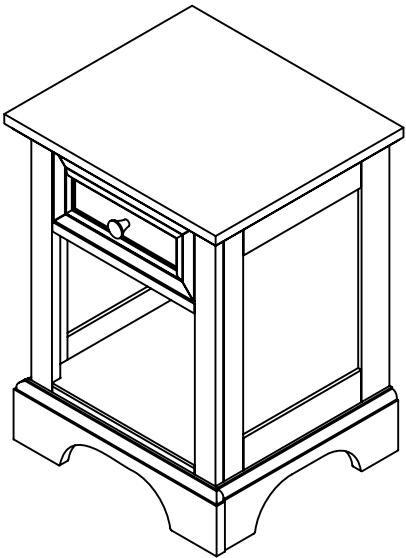

Part List

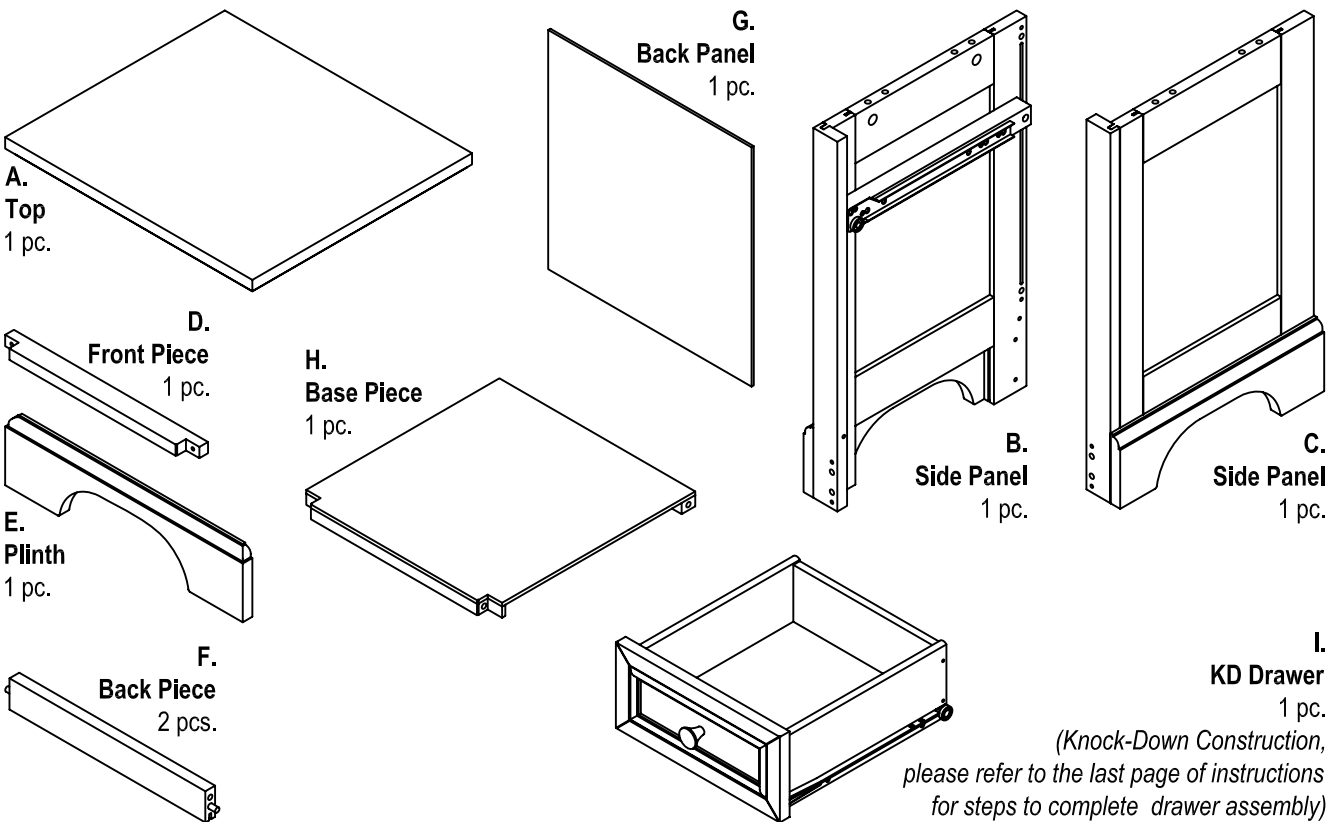

Hardware List

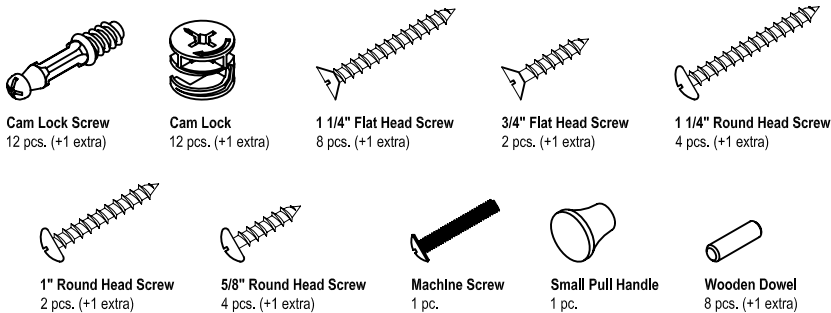

Tools Required For Assembly : Phillips screwdriver

Home Styles Consumer Assistance Line 888-680-7460 and 877-831-0319
servicedesk@homestyles-furniture.com

Assembly Instructions 2/6

IMPORTANT
Do not tighten up all the screws until each part is properly assembled.

STEP 1

Insert Cam Lock Screws into the pre-drilled holes of Side Panel (B) and (C).




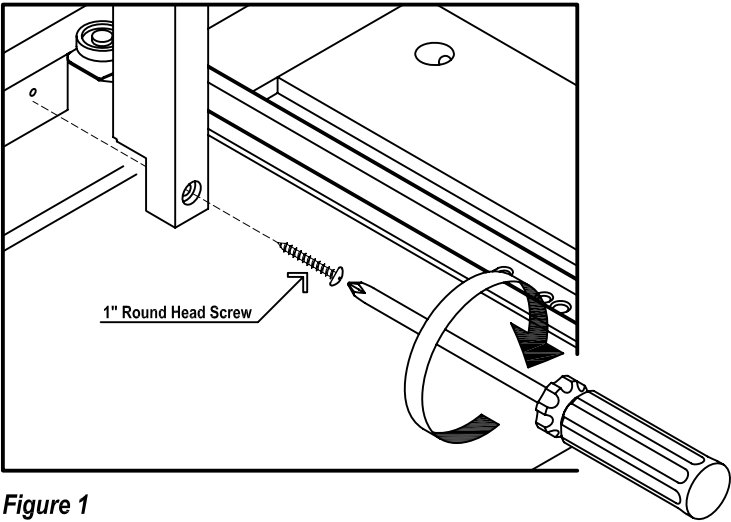


Figure 1

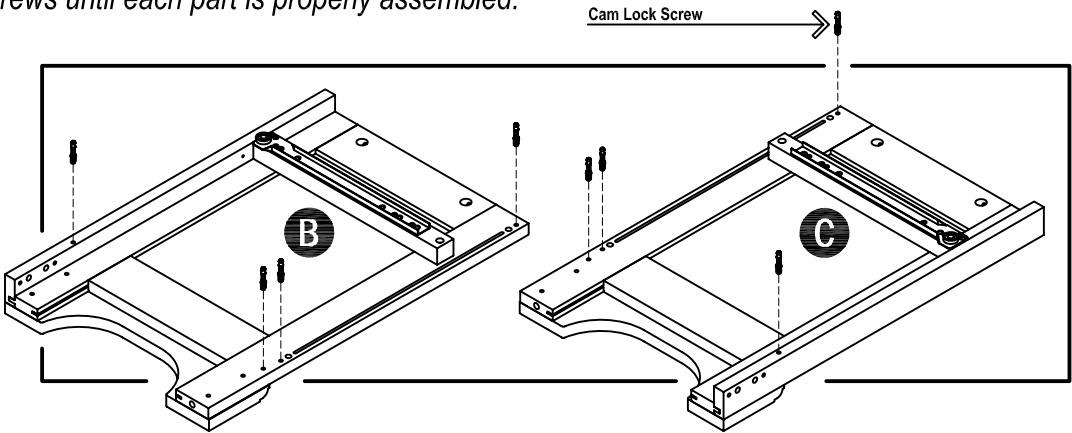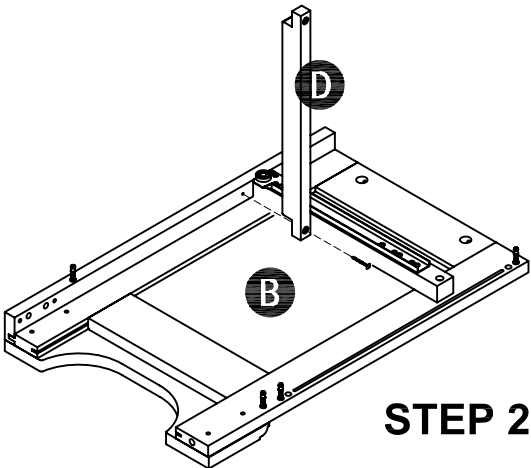

STEP 2

Attach Front Piece (D) to Side Panel (B) with 1" Round Head Screws. (See figure 1)

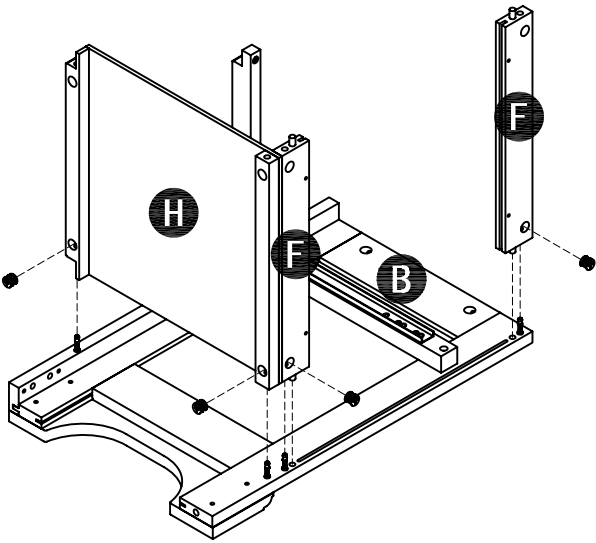

STEP 3

Attach Back Pieces (F) & Base Piece (H) to Side Panel (B) using Cam Locks. (See figure 2)

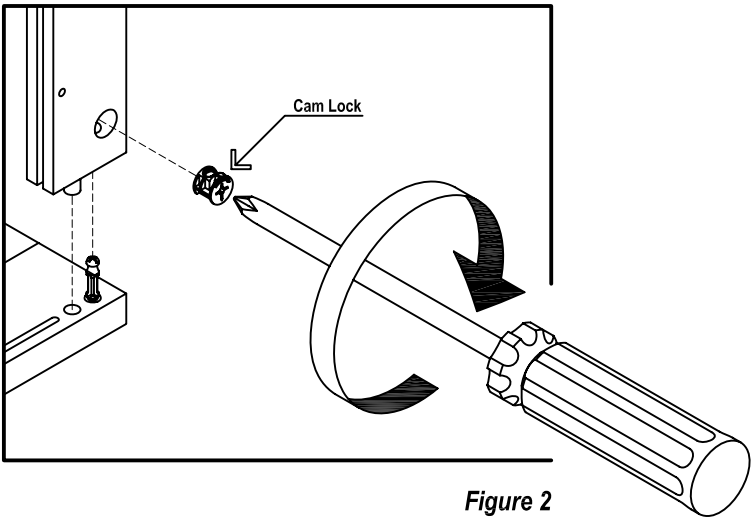


Figure 2

Assembly Instructions 3/6

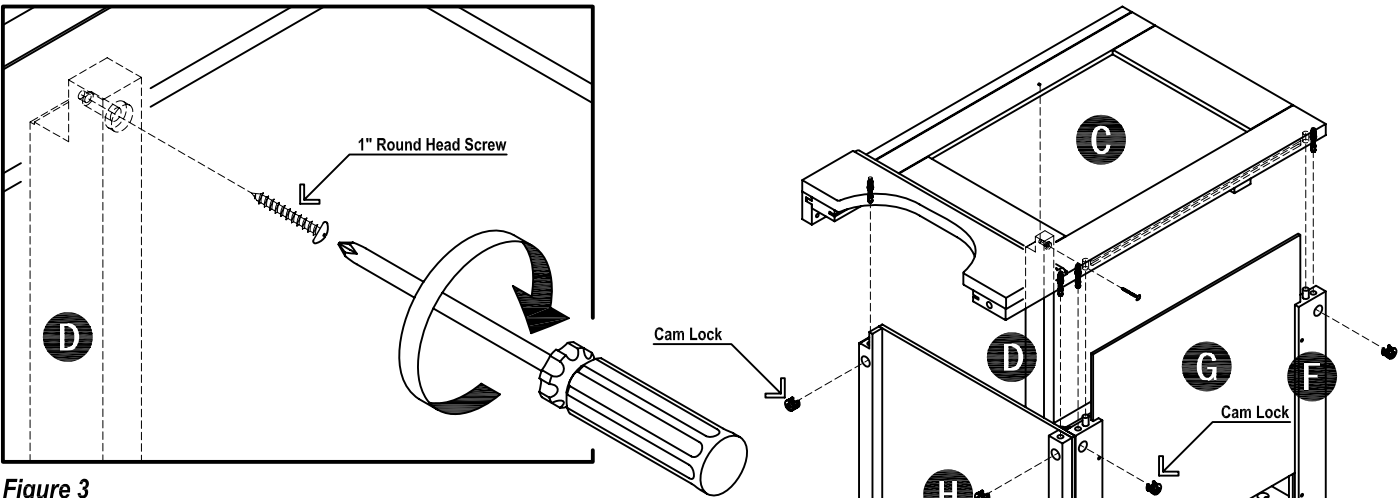





Figure 3

STEP 4

Slide Back Panel (G) into Back Piece's (F) grooves.

Attach Back Piece (F) & Base Piece (H) to Side Panel (C) using Cam Locks.

Attach Front Piece (D) to Side Panel (C) with 1" Round Head Screws. (See figure 3)

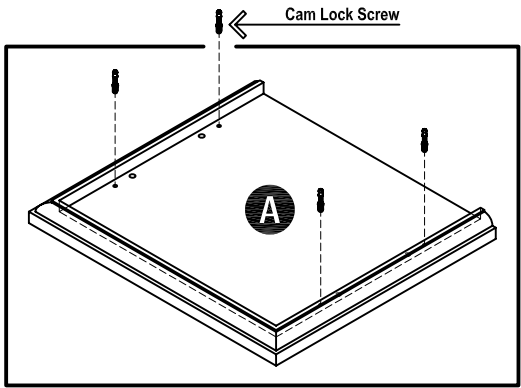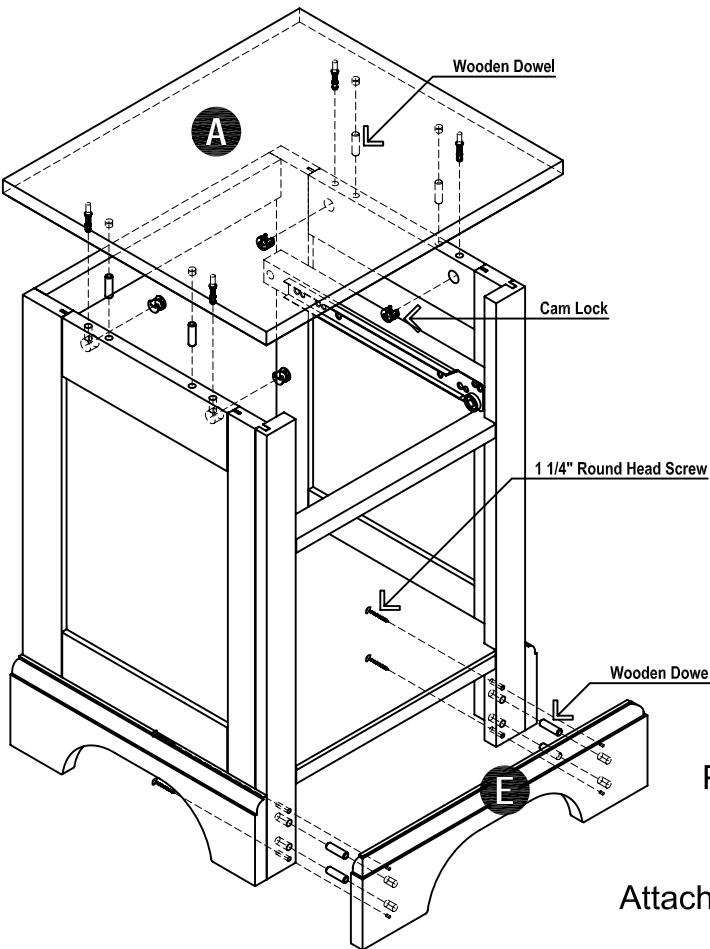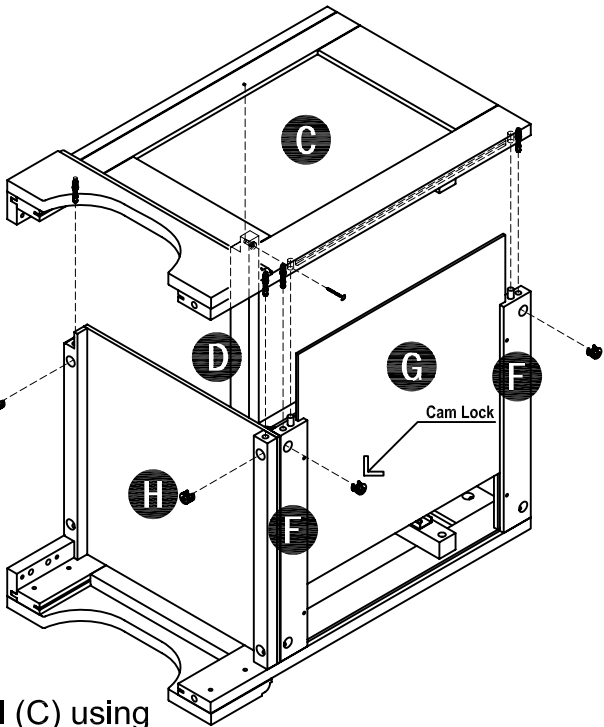

STEP 5

Insert Cam Lock Screws into the pre-drilled holes of Top (A).

STEP 6



Place Top (A) onto the unit using Cam Locks & Wooden Dowels.

Attach Plinth (E) to the unit using 1 1/4" Round Head Screws & Wooden Dowels.

Assembly Instructions 4/6

STEP 7


Attach 5/8" Round Head Screws to the back of unit through the holes of Back Piece (F).

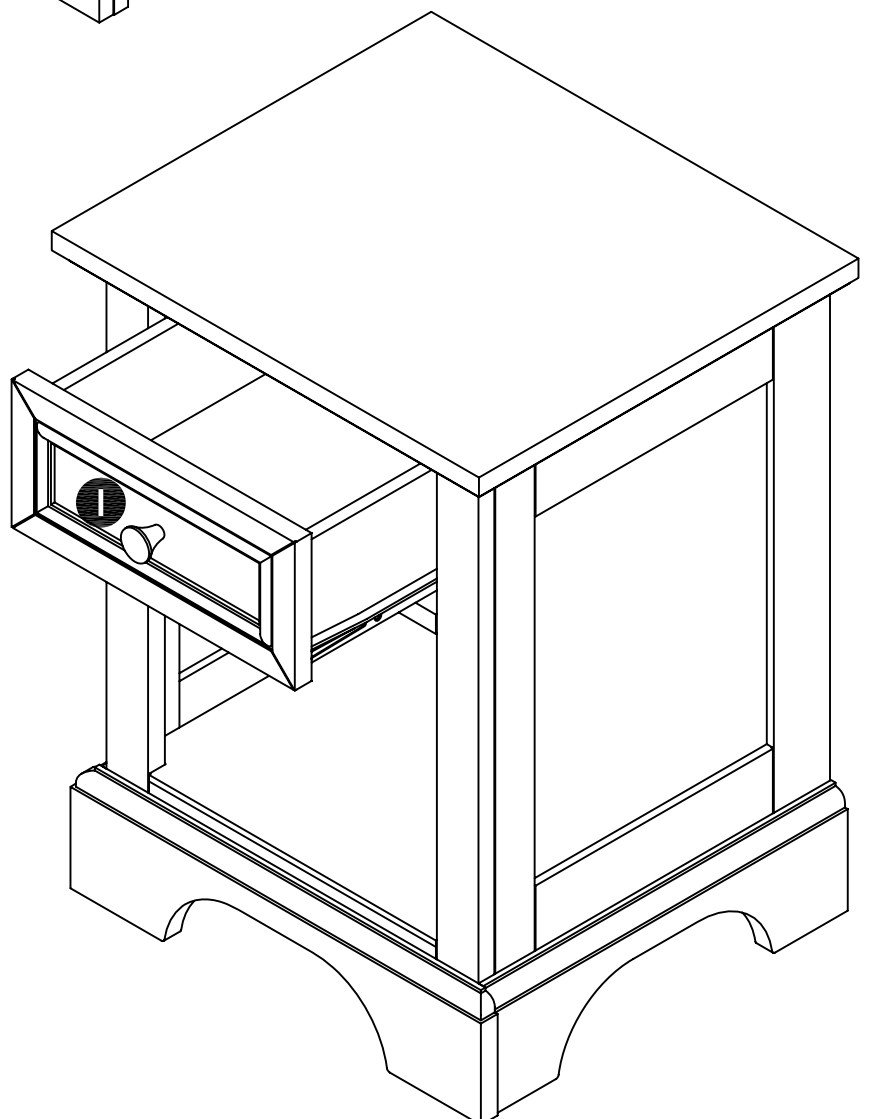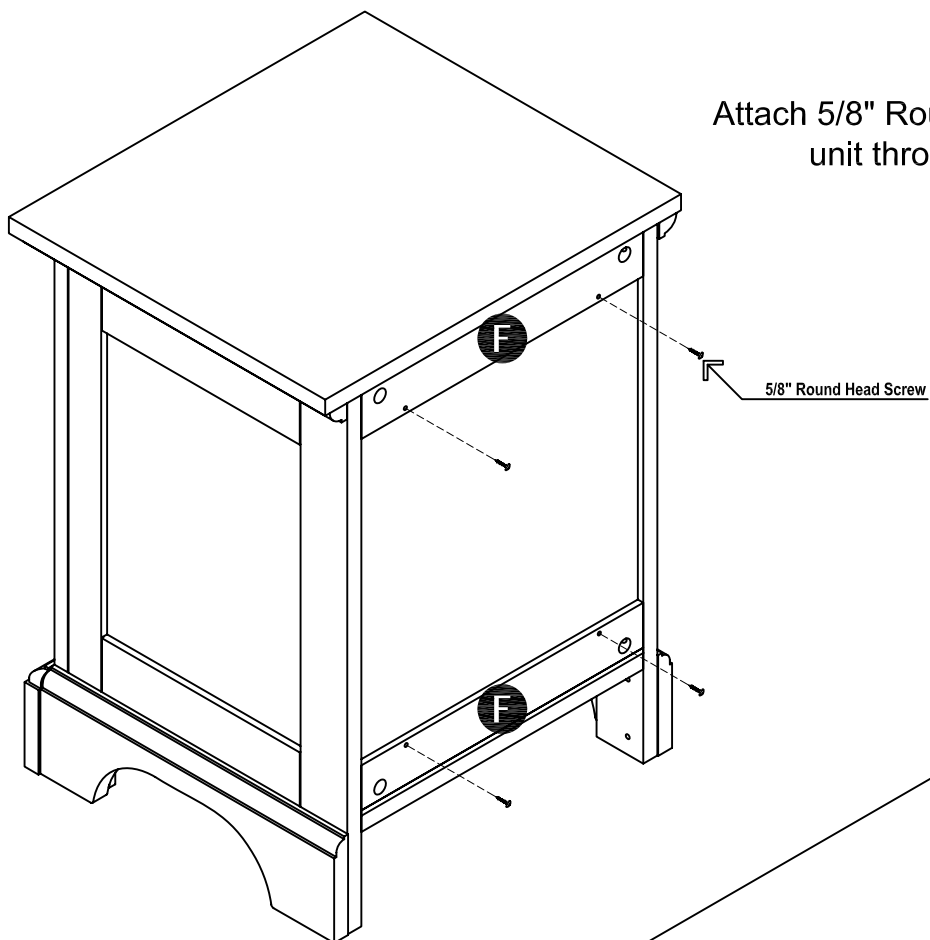

STEP 8

Insert the drawer (I) into unit.

Drawer (I)

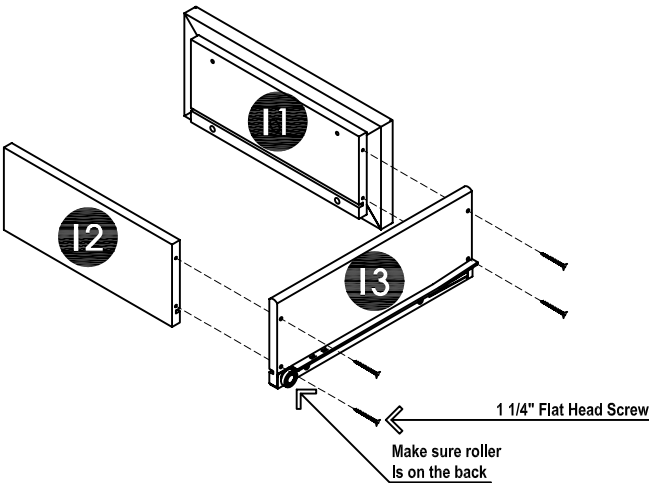



STEP 1

Attach Side Part (I3) to Front Part (I1) and Back Part (I2) using a Phillips screwdriver and 1 1/4" Flat Head Screws.

STEP 2

Insert Base Part (I5) into the groove.

Attach Side Part (I4) to Front Part (I1) and Back Part (I2) using a Phillips screwdriver and 1 1/4" Flat Head Screws.

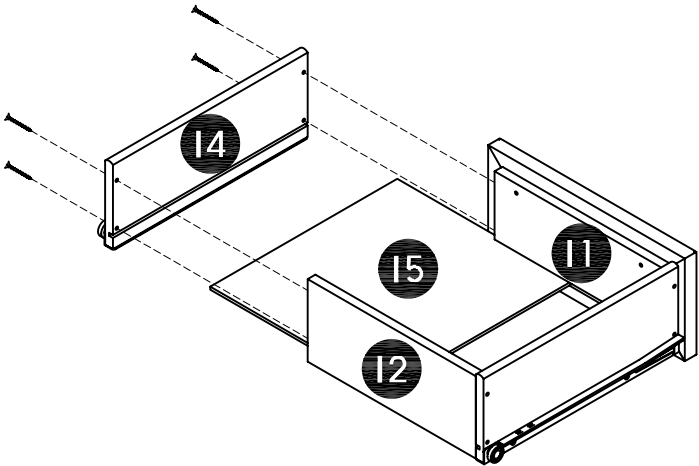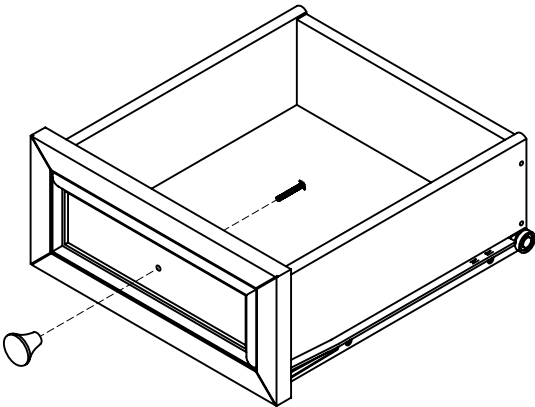



STEP 3

Attach Small Pull Handles with machine screws.

Part List

I1. Front Part 1 pc.	I2. Back Part 1 pc.	I3. Side Part 1 pc.	I4. Side Part 1 pc.	I5. Base Part 1 pc.


Assembly Instructions 6/6

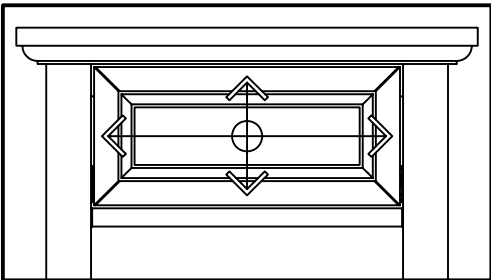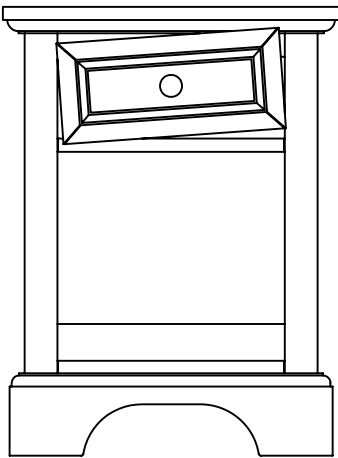

I. IF THE DRAWER DOES NOT ALIGN

STEP 1


Loosen slightly the lower screws.

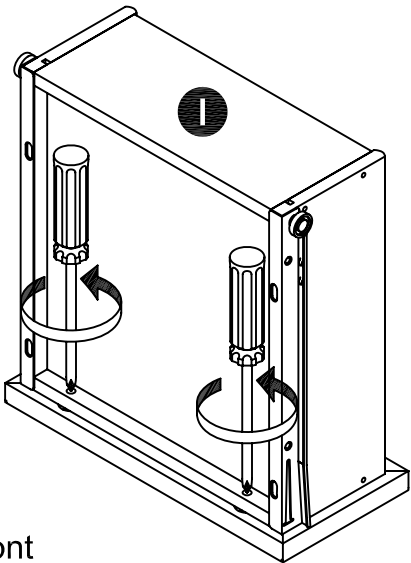

STEP 2

Insert the drawer into the main body, then adjust the drawer front panel left or right and up or down, until the drawer gaps look proportional.

II. IF THE DRAWER ALREADY ALIGNS

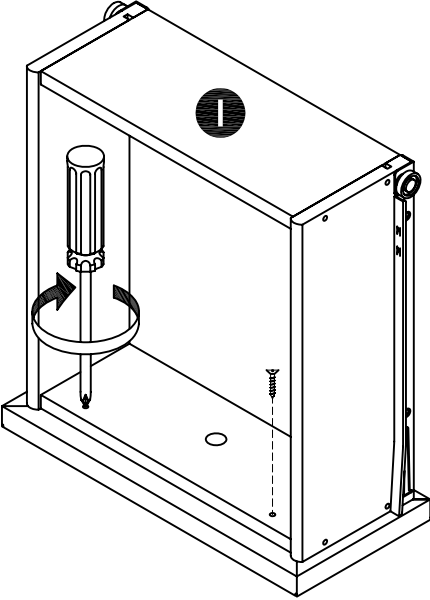

Pull out drawer slowly. Lock the drawer front panel into position with 3/4" Flat Head Screws.

STEP 3

Pull the drawer open slowly and tighten the upper screws. Make sure the front panel does not move and lock the drawer front panel into position with 3/4" Flat Head Screws.

