


Assembly Instruction

Tatiana End Table in Grey

Item # T-6610-3-ET






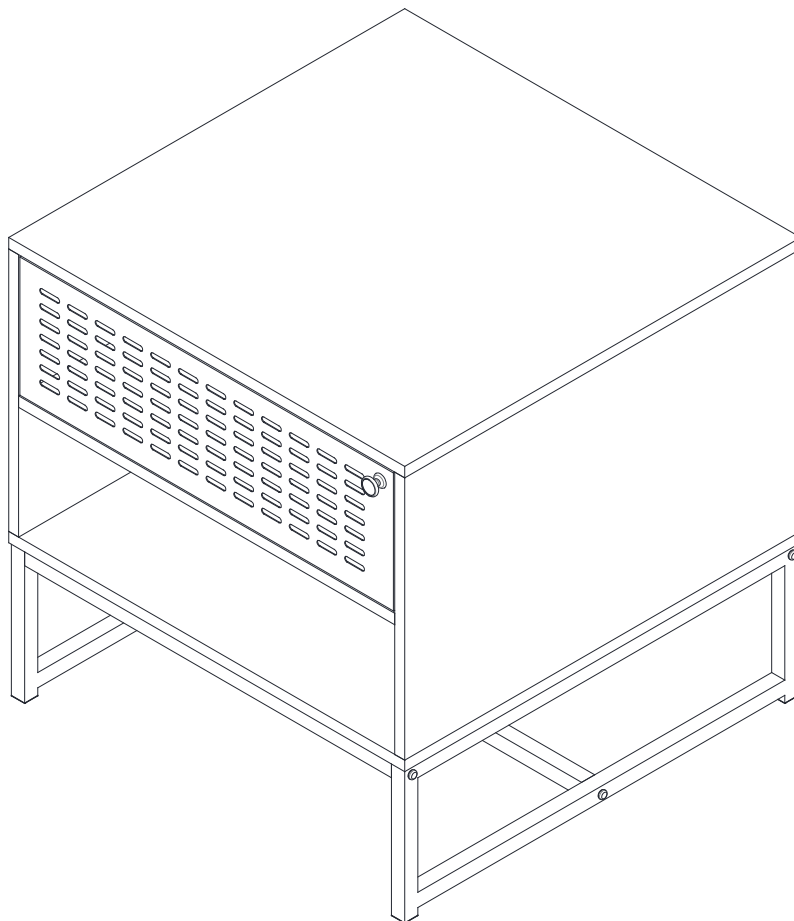


Assembly Instruction for



Item: T-6610-3-ET

CAUTION: Please read instructions thoroughly before unpacking assembly parts.

1. Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment.
2. Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.
3. Please do not tighten screws or bolts until each step is completed or instructed.
4. Please do not over tighten screws or bolts.

PART LIST				
No.	SKETCH	PART DESC	CODE	Q'TY
1		Top Panel	PT-6610-3-ETTOP	1
2		Left Panel	PT-6610-3-ETLPN	1
3		Right Panel	PT-6610-3-ETRPN	1
4		Middle Panel	PT-6610-3-ETMPN	1
5		Back Panel	PT-6610-3-ETBPN	1
6		Bottom Panel	PT-6610-3-ETBTP	1
7		Side Frame	PT-6610-3-ETFRM	2
8		Crossbar	PT-6610-3-ETBAR	3
9		Door	PT-6610-3-ETDOR	1
10		Magnetic Door Catch	PT-6610-3-CAT	1
11		Door Knob	PT-6610-3-KBS	1


HARDWARE LIST

No.	SKETCH	PART DESC	CODE	Q'TY
12		Cam-Bolt	PT-6610-ETHW	8
13		Cam-Lock		8
14		Wood Dowel		19
15		Long Screw		7
16		Short Screw		2
17		Hinge Insert		2
18		Bolt (for Knob)		1
19		Door Pin		1
20		Long Bolt		6
21		Bolt		4
22		Bolt Cover		6
23		Cap		4
24		Glue		1
25		Allen Key		1

Step 1:

Insert Cam-Bolt (12) and Wood Dowel (14) onto the Left Panel (2) and Right Panel (3) as shown.


(12) X 4PCS
(14) X 12PCS

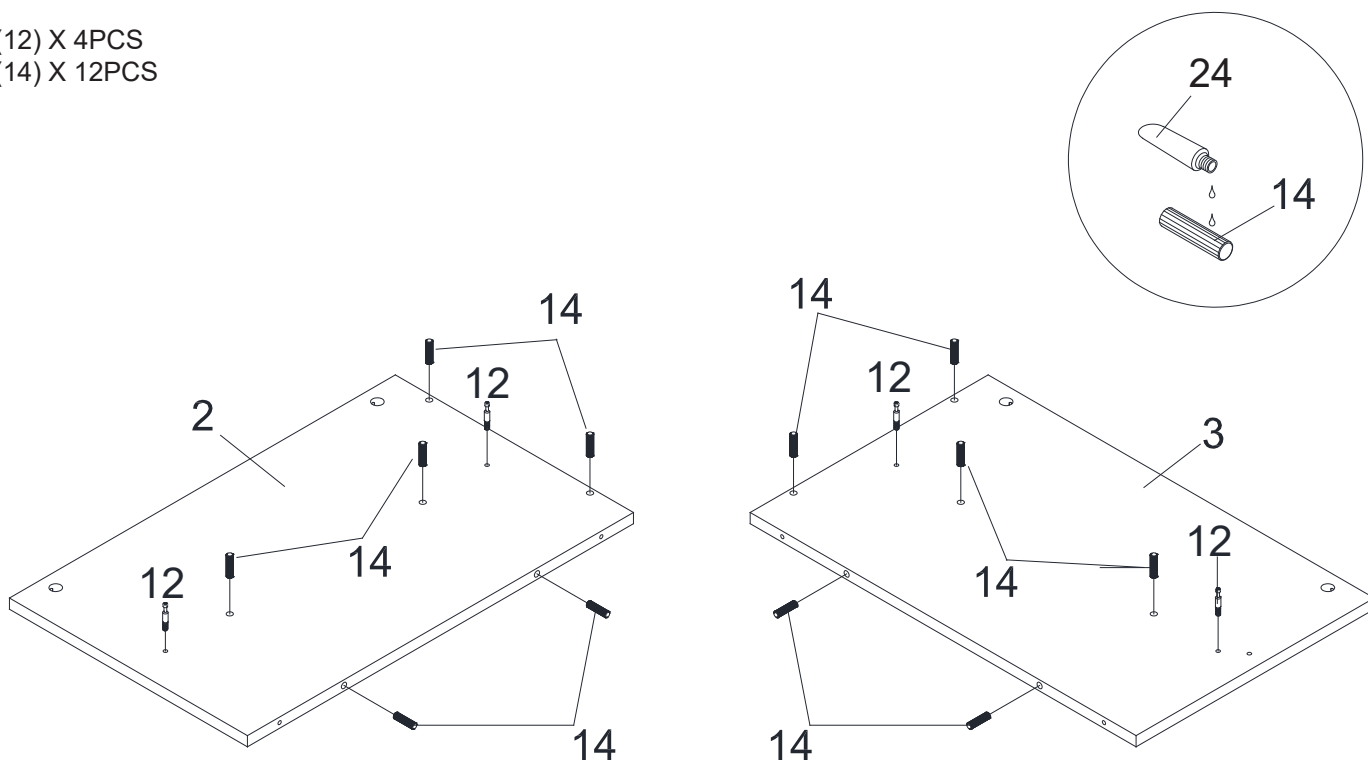

Step 2:


1. Attach Middle Panel (4) and Back Panel (5) to Left Panel (2).

2. Attach Right Panel (3) to the unit and tighten with Cam-Lock (13) as shown by using Allen Key.

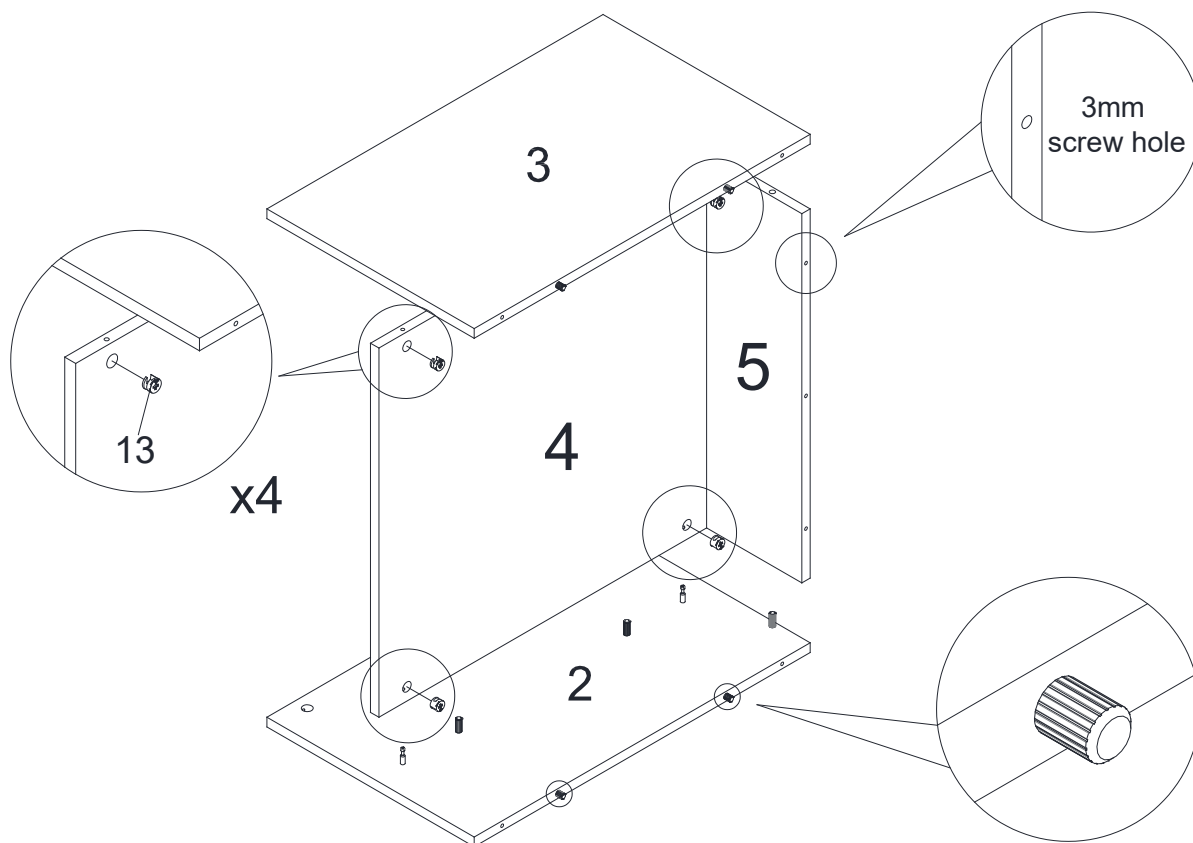

Step 3:

1. Turn the assembly bottom side up as shown.
2. Attach Bottom Panel (6) to the assembled unit with Long Screw (15) and tighten with Allen Key.

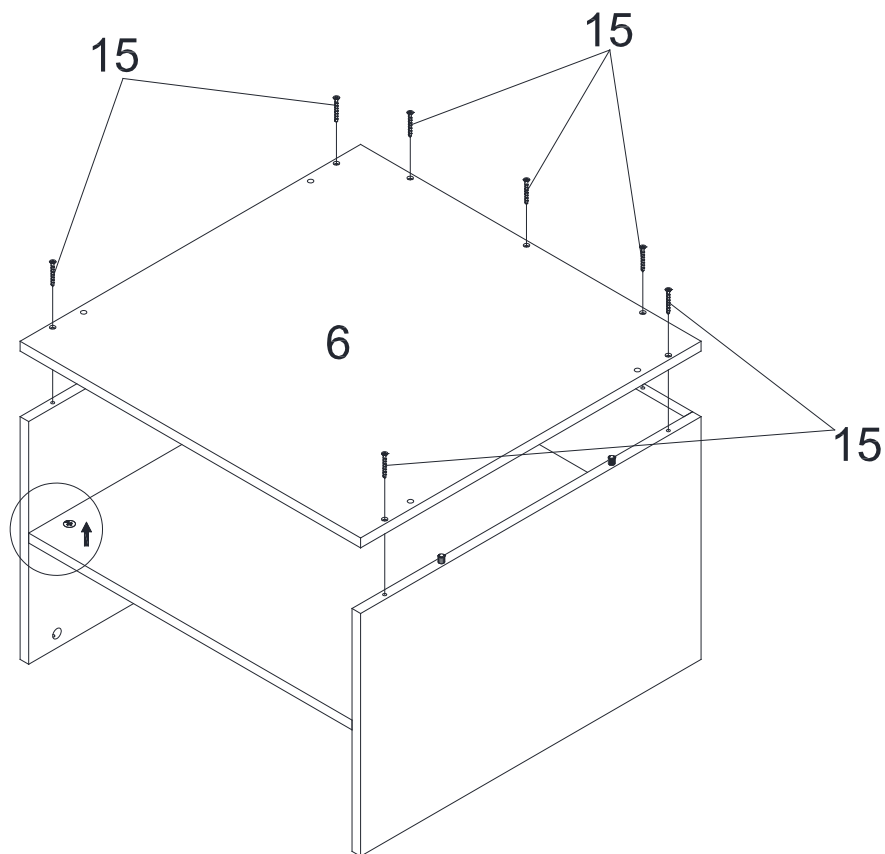


Step 4:

1. Insert Cam-Bolt (12) and Wood Dowel (14) on the Top Panel (1) as shown.
2. Install Magnetic Door Catch (10) on the Top Panel (1) with Short Screw (16) as shown.


(12) x 4PCS

(14) x 7PCS

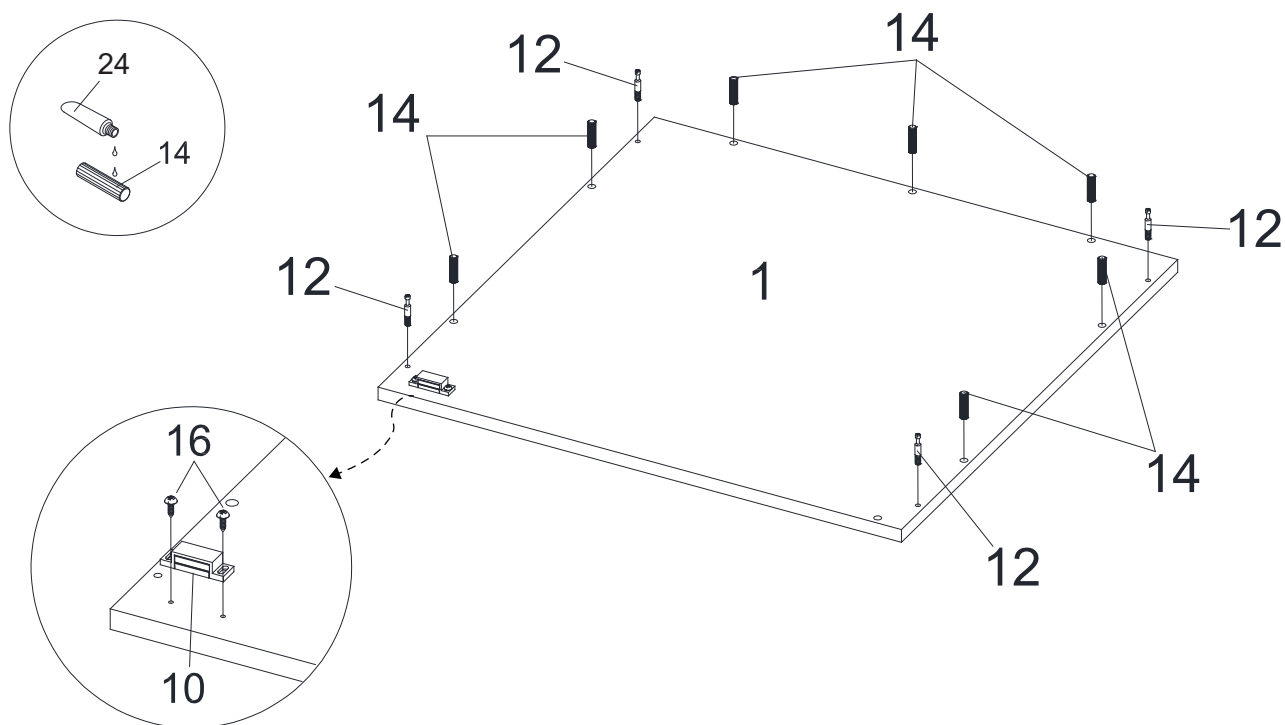


Step 5:


1. Install the Door (9) between Top Panel (1) and Middle Panel (4) with Hinge Insert (17) as shown.

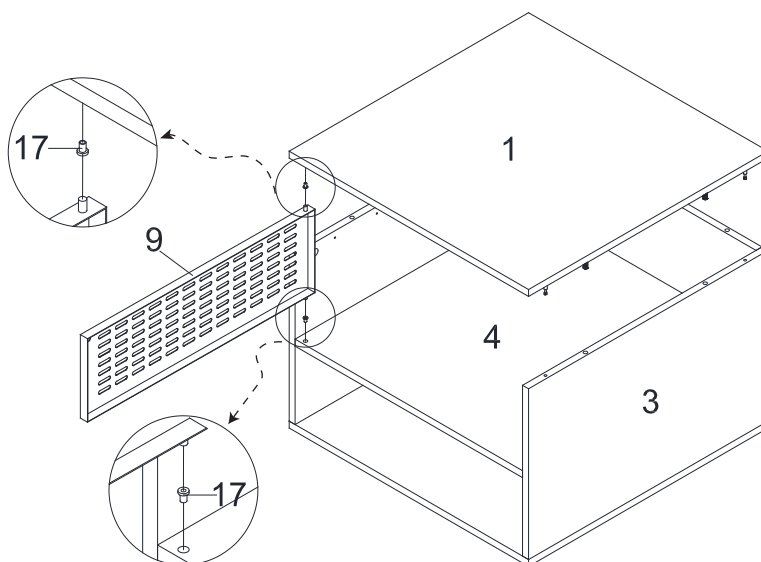

2. Install Cam-Lock (13) into Left Panel and Right Panel and tighten with Allen Key.

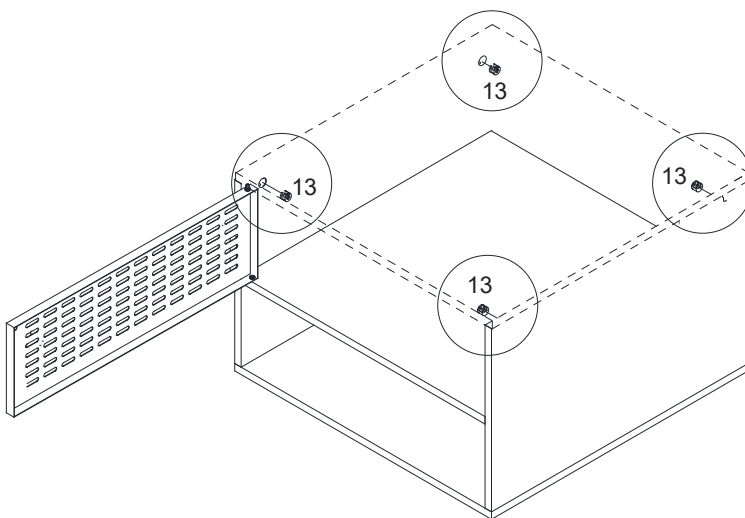


3. Install Door Knob (11) with Bolt (18).

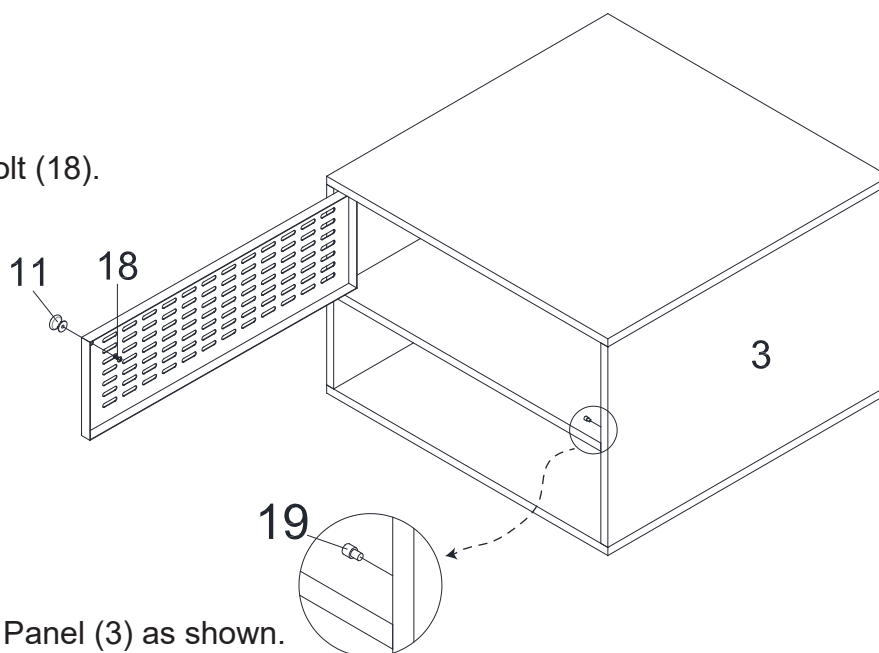

4. Install Door Pin (19) to Right Panel (3) as shown.

Step 6:


1. Install Cap (23) onto Side Frame (7) as shown.

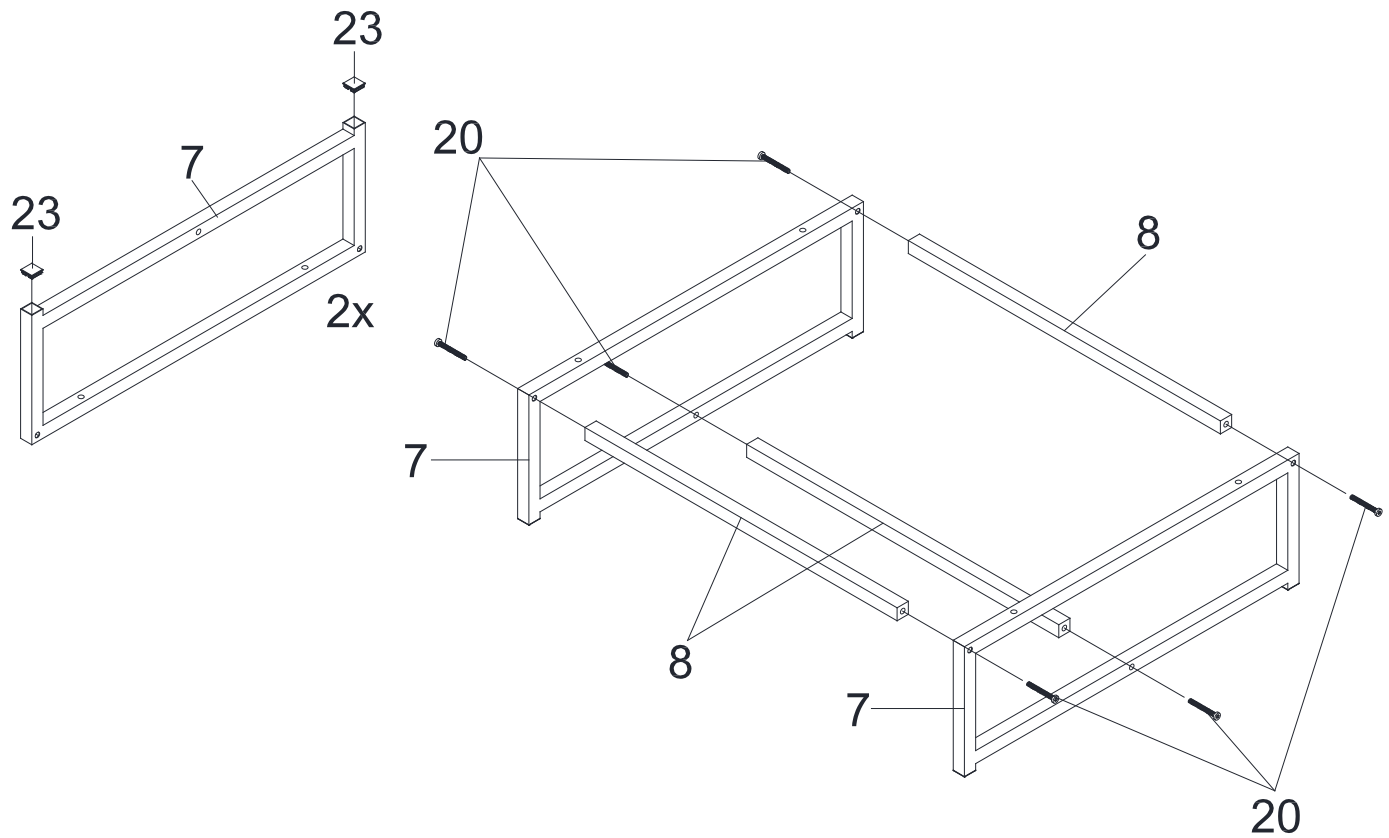

2. Attach Crossbar (8) to Side Frame (7) with Long Bolt (20).



Step 7:

Attach the assembled leg frame to the box with Bolt (21) and tighten by using Allen Key.

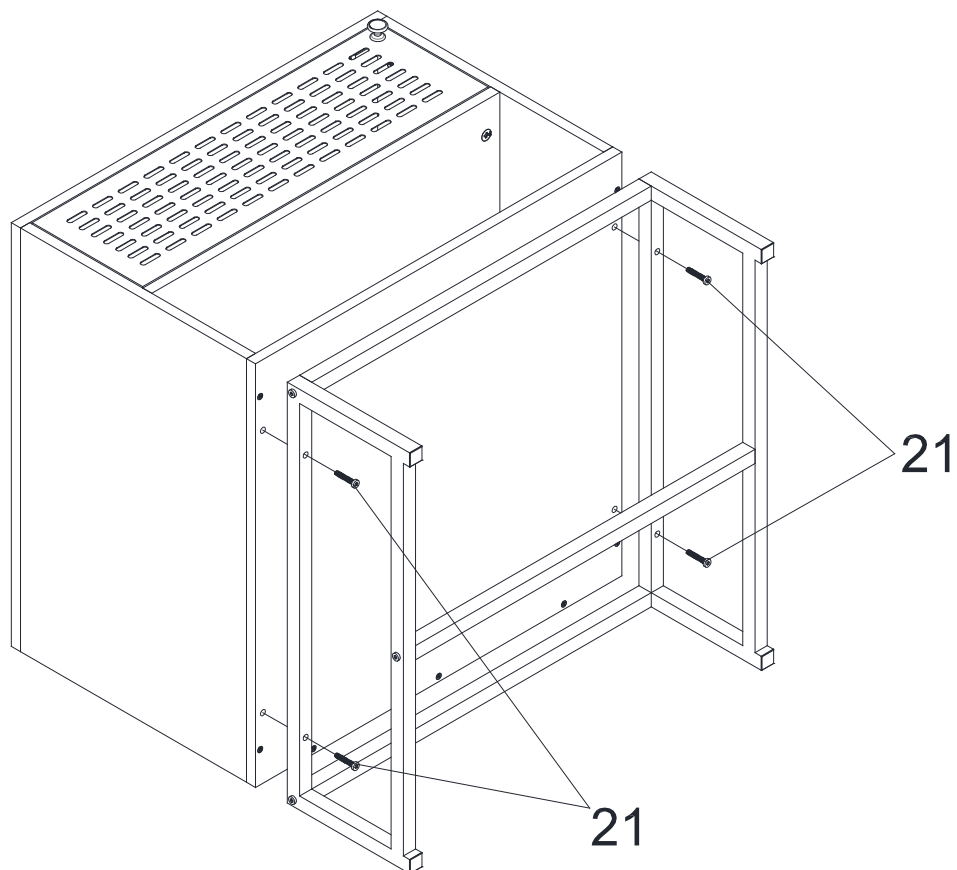

Step 8:

Install Bolt Cover (22) on the bolt as shown.

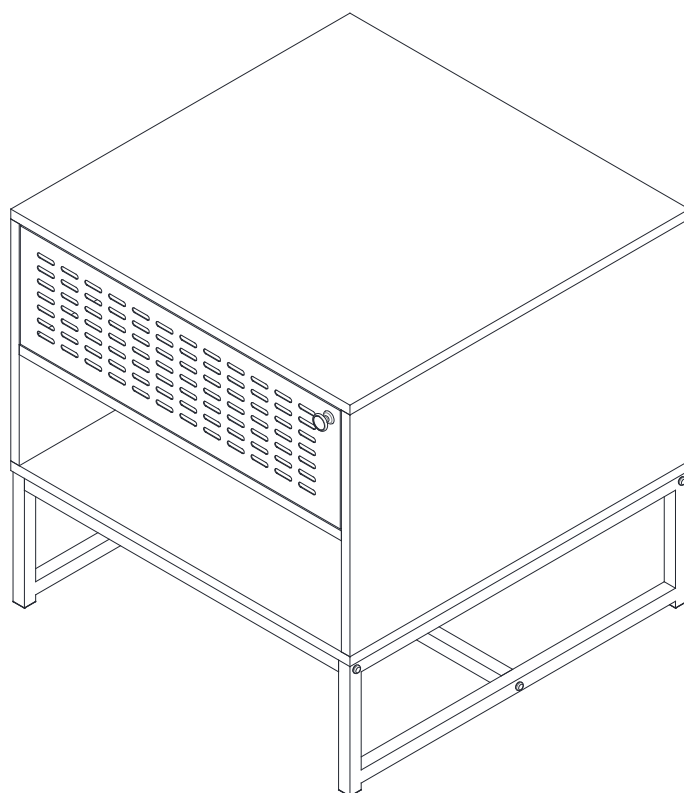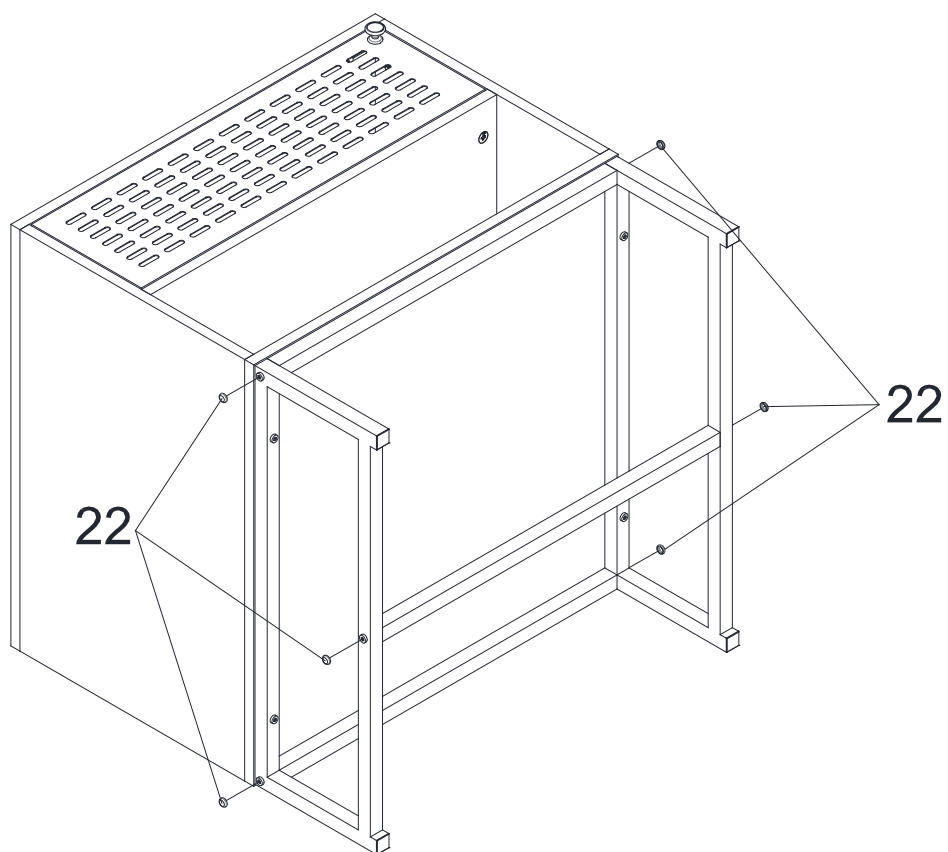

Assembly Completed

MADE IN TAIWAN