




ITEM NO: I249-464-TAL      Round Mirror

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may come loose inside the carton during shipment.


### Option 1: Wall Mount

I249-464

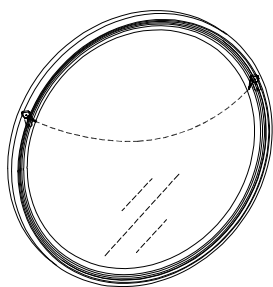



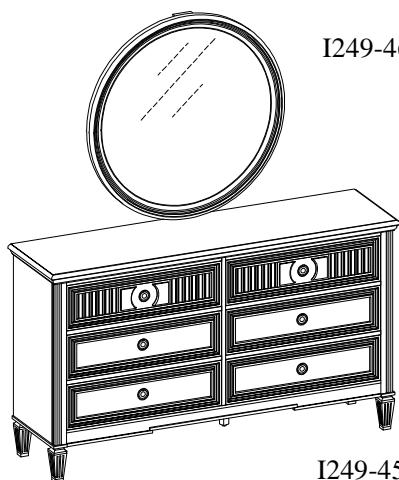


### Option 2: Dresser Mount

I249-464



I249-453



#### HARDWARE LIST:

| No. | Description              | Sketch  | Quantity |
|-----|--------------------------|---|----------|
| A   | Bolt Ø1/4" x 1-9/16"     |  | 4 PCS    |
| B   | Bolt Ø1/4" x 2"          |  | 4 PCS    |
| C   | Lock Washer Ø1/4"        |  | 8 PCS    |
| D   | Flat Washer Ø1/4" x 3/4" |  | 8 PCS    |
| E   | Allen Wrench M4          |  | 1 PC     |

#### TOOLS REQUIRED (NOT PROVIDED)

PHILLIPS SCREWDRIVER

#### COMPONENTS LIST:

| No. | Description | Sketch  | Quantity |
|-----|-------------|---|----------|
| 1   | Mirror      |  | 1 PC     |
| 2   | Wood Strip  |  | 1 PC     |

BEFORE USING THIS PRODUCT PLEASE READ, UNDERSTAND, AND FOLLOW THESE INSTRUCTIONS.  
Save these instructions for future reference.


FOR INDOOR USE ONLY



ITEM NO: I249-464-TAL      Round Mirror


### **FOR OPTION 1 (Wall Mount)**

**STEP 1:** After attaching nail/hanger to wall, place wire over nail/hanger and slowly lower the mirror into place. Make sure the wire catches on the nail/hanger.  
**Note:** Ensure the nail/hanger is in a wall stud or wall solid enough to support mirror.

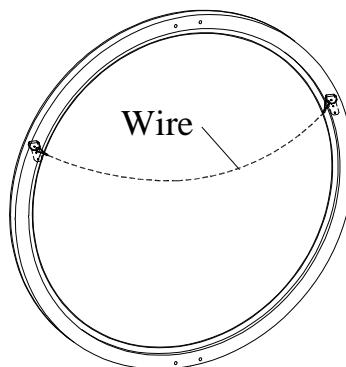

### **FOR OPTION 2 (Dresser Mount)**

**STEP 1:** Attach the wood strip to the dresser by using 4 bolts(B), lock washers(C), and flat washers(D). Do not tighten bolts completely.

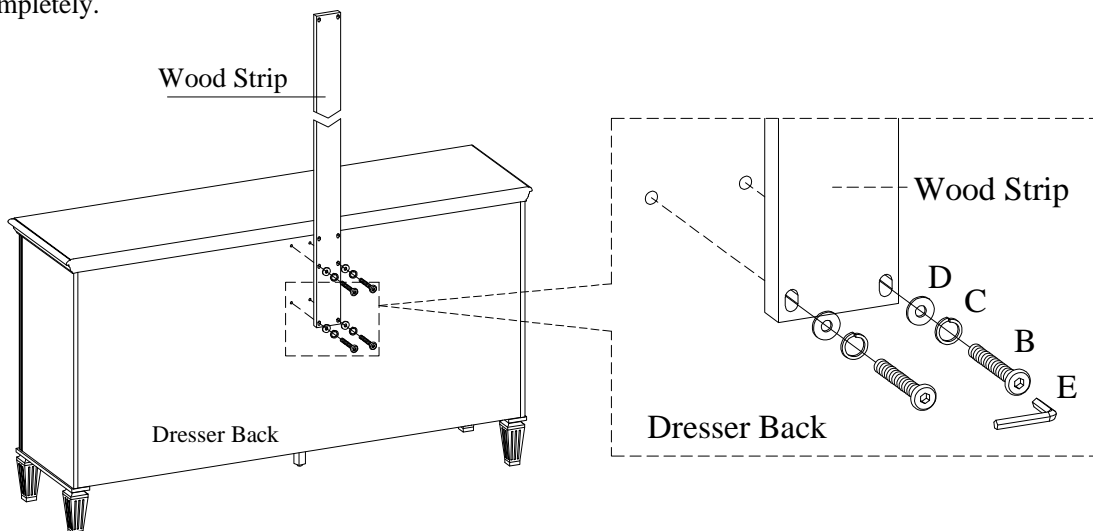

**STEP 2:** Attach the wood strip to the mirror by using 4 bolts(A), lock washers(C), and flat washers(D). Tighten all bolts on dresser and mirror with Allen wrench.

