


**ASSEMBLY INSTRUCTIONS**  
**COASTER FINE FURNITURE**

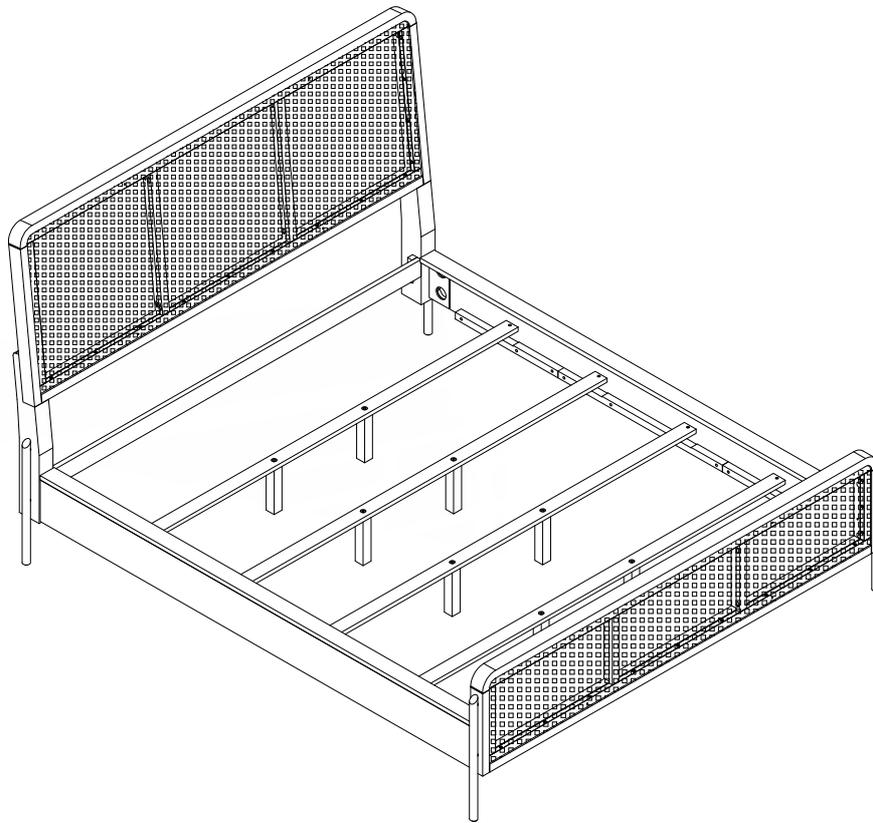

*Fine Furniture for every stage of life*

**224330KW (B1-B3)**  
**California King Bed**

# ITEM: 224330KW(B1-B3)



## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.





ASSEMBLY TIME


25 MINUTES

## PART IDENTIFICATION




### B1 ( BOX 1 )
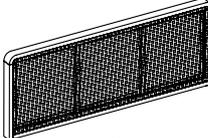
|   |                       |  |     |
|---|-----------------------|--|-----|
| A | HEADBOARD PANEL       |    | 1PC |
| B | LEFT HEADBOARD LEG    |    | 1PC |
| C | RIGHT HEADBOARD LEG   |  | 1PC |
| D | HEADBOARD BOTTOM RAIL |  | 1PC |

### B2 ( BOX 2 )
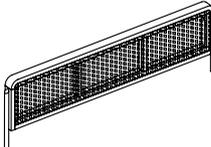
|   |           |  |     |
|---|-----------|--|-----|
| E | FOOTBOARD |  | 1PC |
|---|-----------|--|-----|

### B3 ( BOX 3 )
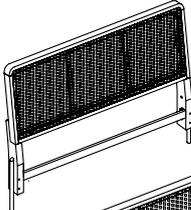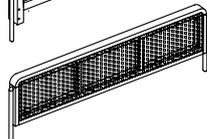
|    |  |   |      |
|----|--|---|------|
| F  | BED RAIL                                       |   | 2PCS |
| G  | BED SLAT                                       |   | 4PCS |
| H  | BED SLAT SUPPORT WITH LEVELER                  |  | 8PCS |
| HB | 224300KW(B1) *FROM BOX 1<br>HEADBOARD COMPLETE |   | 1PC  |
| E  | 224300KW(B2) *FROM BOX 2<br>FOOTBOARD*         |   | 1PC  |

# ITEM: 224330KW(B1-B3)



## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

## HARDWARE IDENTIFICATION

### Z-B1 (BOX 1) - HARDWARE PACK IS LOCATED IN 224300KW(B1)

|   |  |   |      |
|---|--|---|------|
| 1 | <b>BOLT</b><br>(5/16" x 45mm - BLK)      |    | 8PCS |
| 2 | <b>LOCK WASHER</b><br>(1.6 x 14mm - BLK) |    | 8PCS |
| 3 | <b>FLAT WASHER</b><br>(1 x 18mm - BLK)   |    | 8PCS |
| 4 | <b>ALLEN WRENCH</b><br>(M5 x 65mm - BLK) |  | 1PC  |
| 5 | <b>WOOD DOWEL</b><br>(10 x 40mm - BRW)   |  | 4PCS |

### Z-B3 (BOX 3) - HARDWARE PACK IS LOCATED IN 224300KW(B3)

|    |   |   |      |
|----|---|---|------|
| 6  | <b>FLAT HEAD SCREW</b><br>(8 x 38mm - BLK)      |  | 8PCS |
| 7  | <b>THREADED BOLT</b><br>(5/16" x 80mm - WHT)    |  | 8PCS |
| 8  | <b>HEX NUT</b><br>(5/16" x 13mm - WHT)          |  | 8PCS |
| 9  | <b>HALF ROUND NUT</b><br>(22 x 17 x 10mm - WHT) |  | 8PCS |
| 10 | <b>WRENCH</b><br>(13mm - WHT)                   |  | 1PC  |


### NOTE :

Philips head screw driver is required in the assembly process; however, manufacturer does not provide this item.


# ITEM: 224330KW(B1-B3)

## ASSEMBLY INSTRUCTIONS

### STEP 1

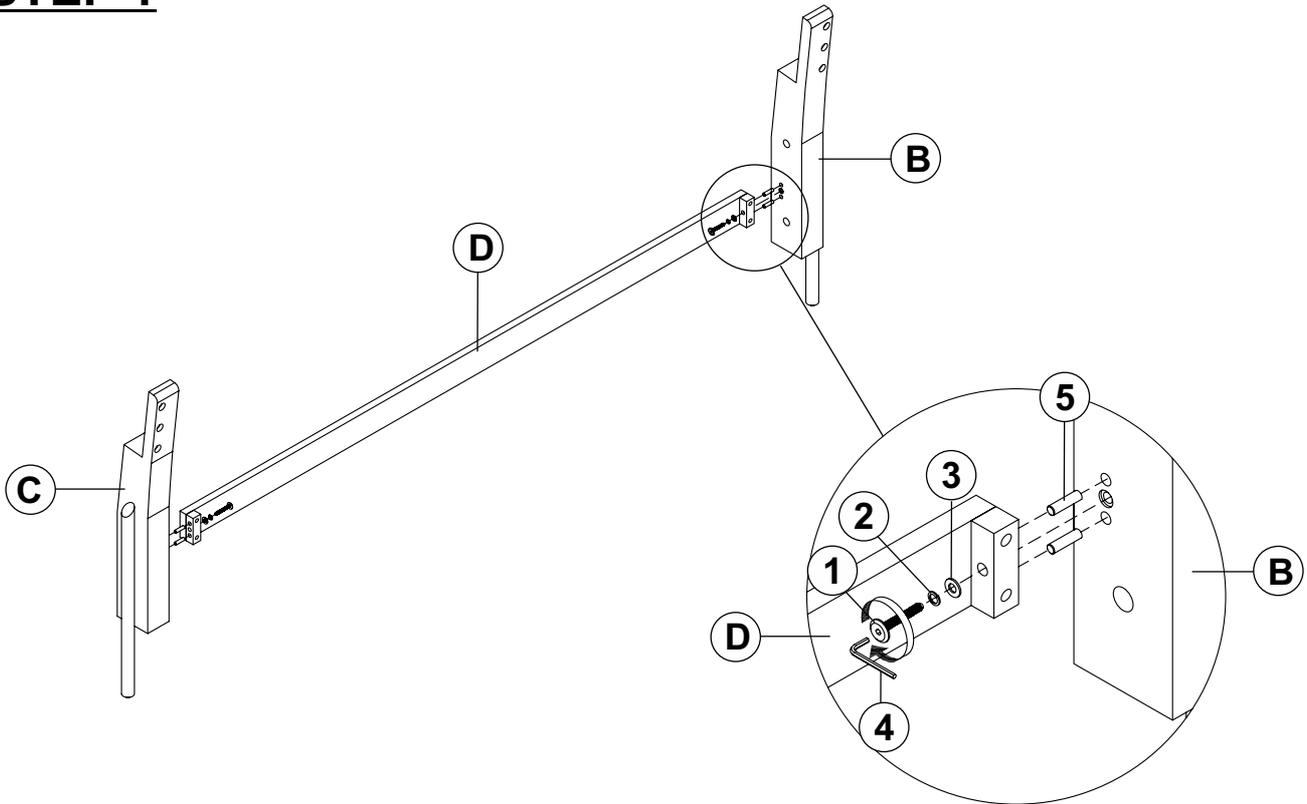


### STEP 2

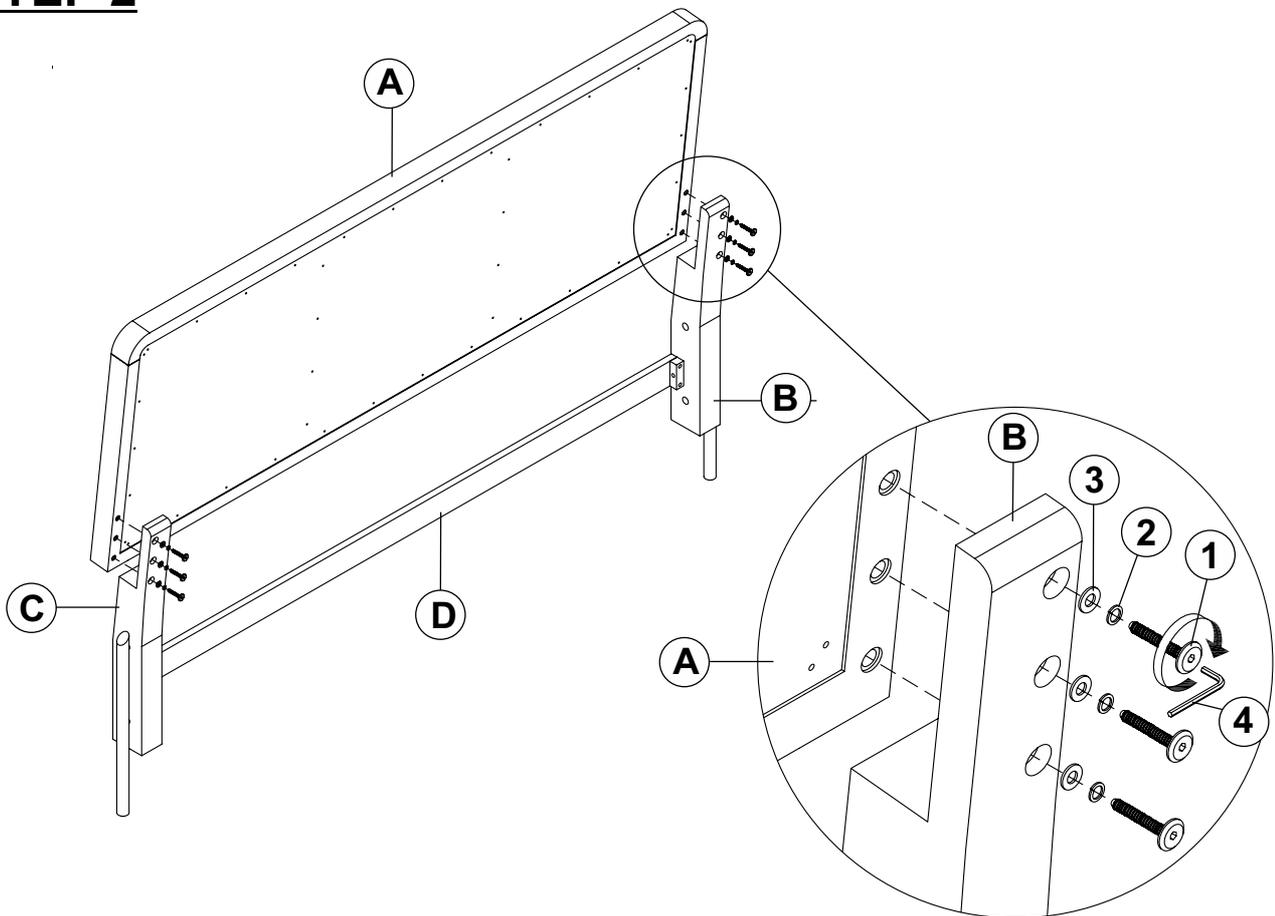


# ITEM: 224330KW(B1-B3)

## ASSEMBLY INSTRUCTIONS

### STEP 3

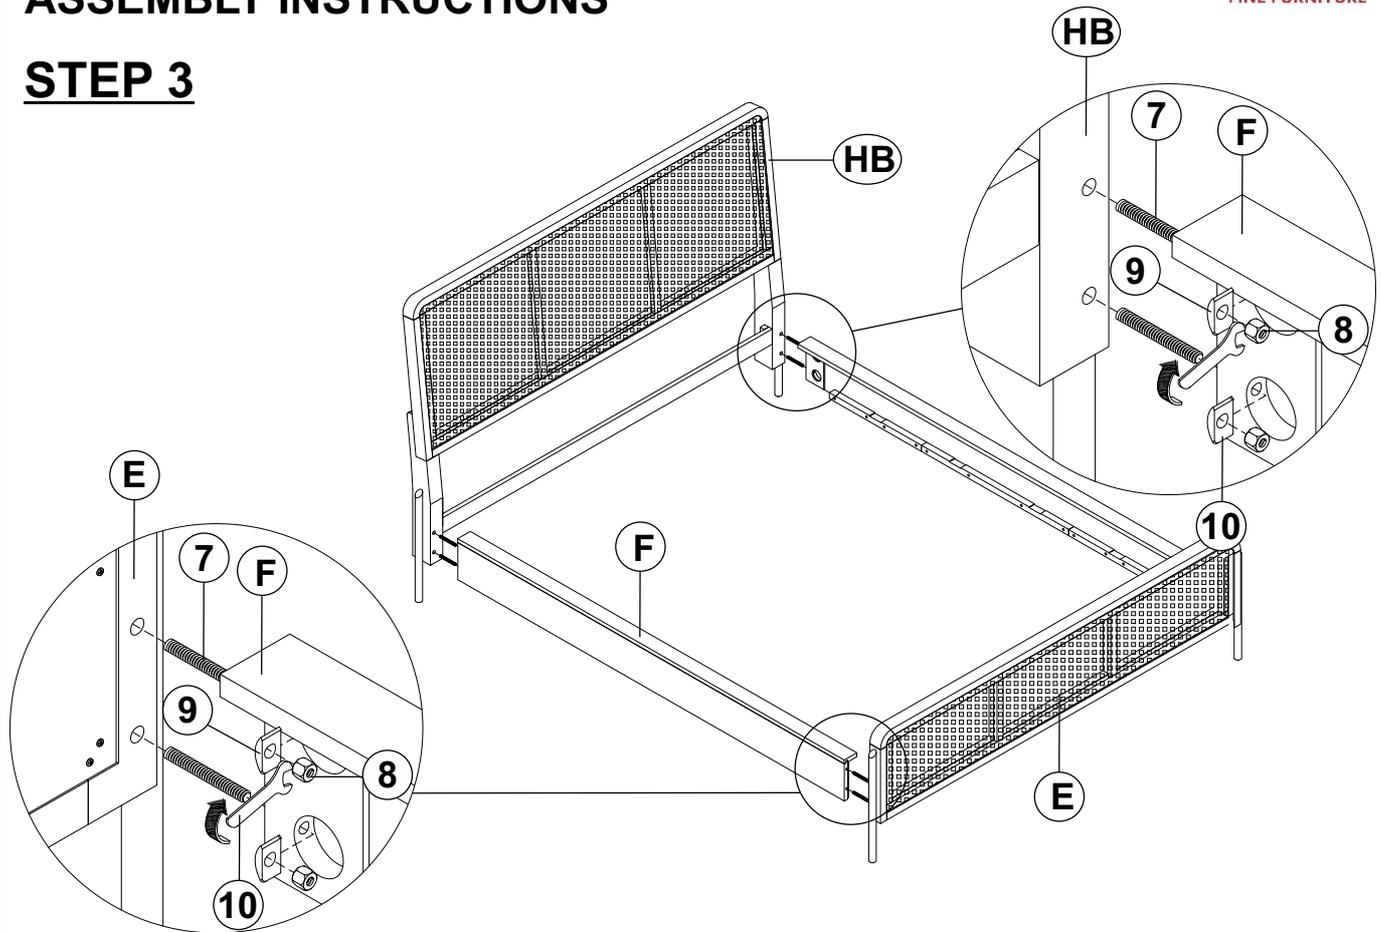

### STEP 4

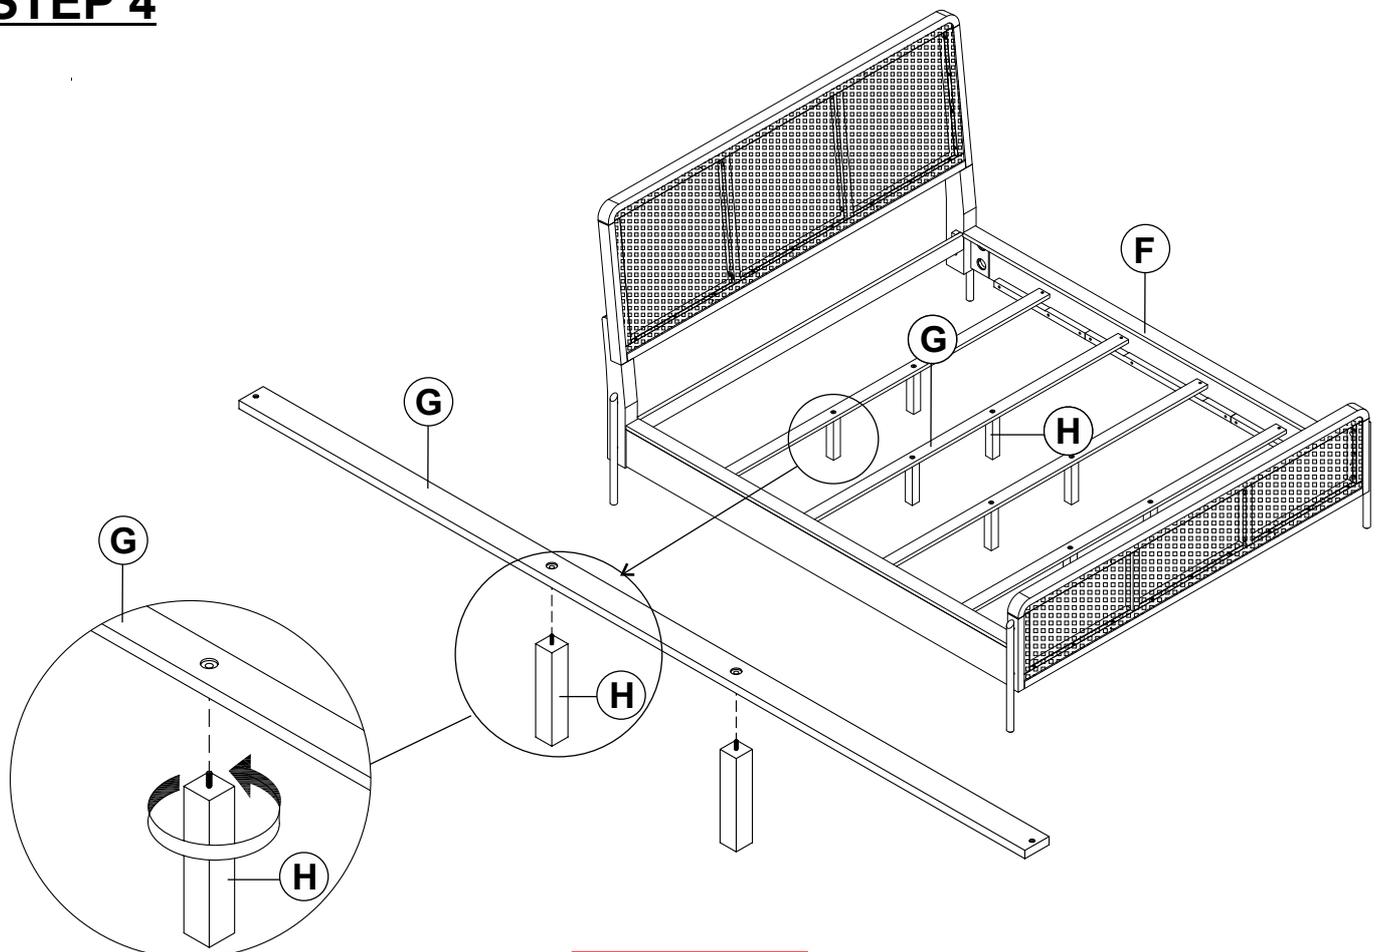


ITEM: **224330KW(B1-B3)**



**ASSEMBLY INSTRUCTIONS**



**STEP 5**

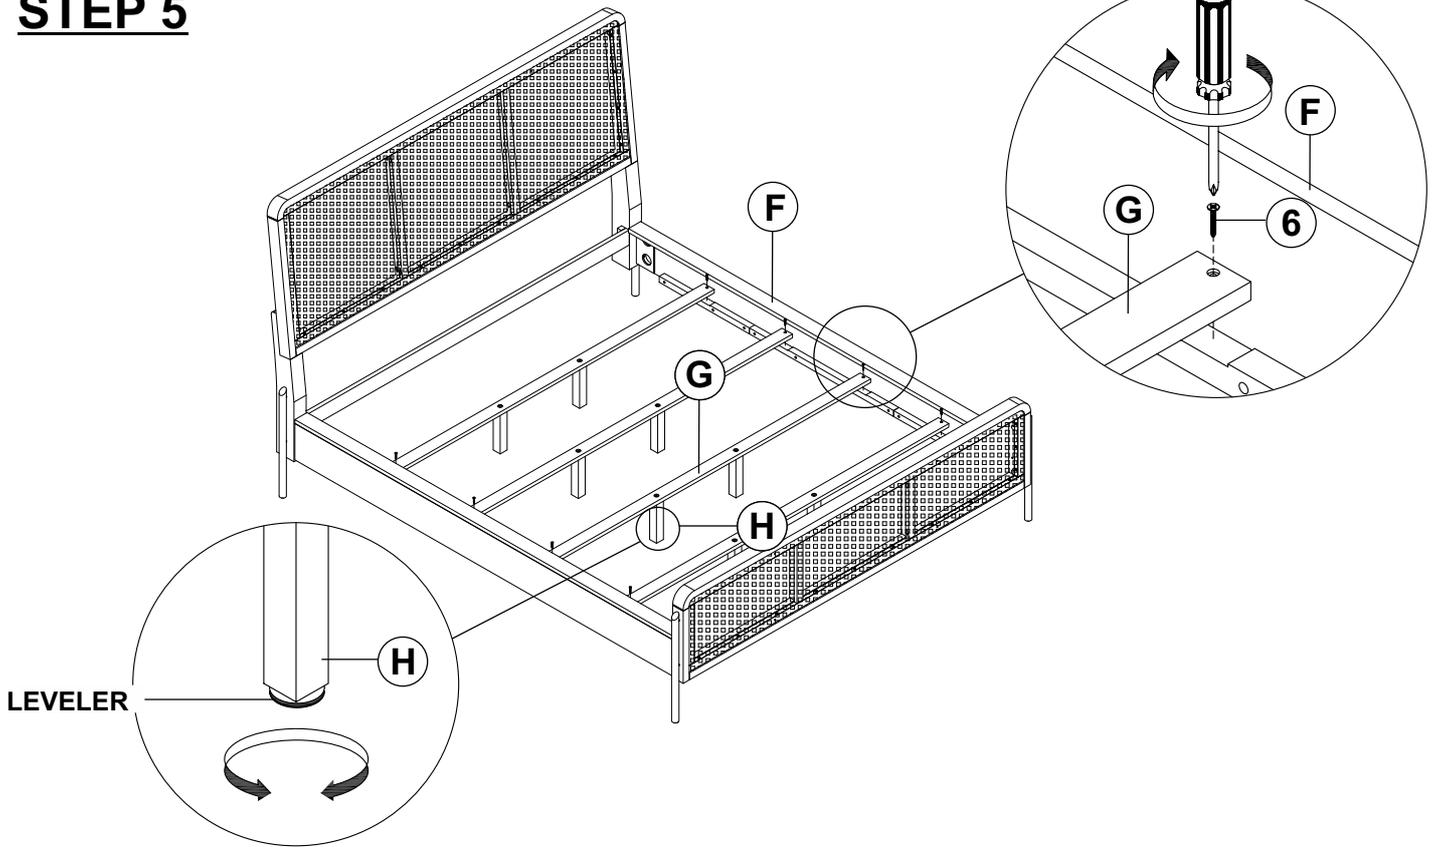


**STEP 6**  
**COMPLETE**

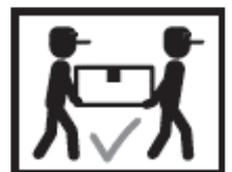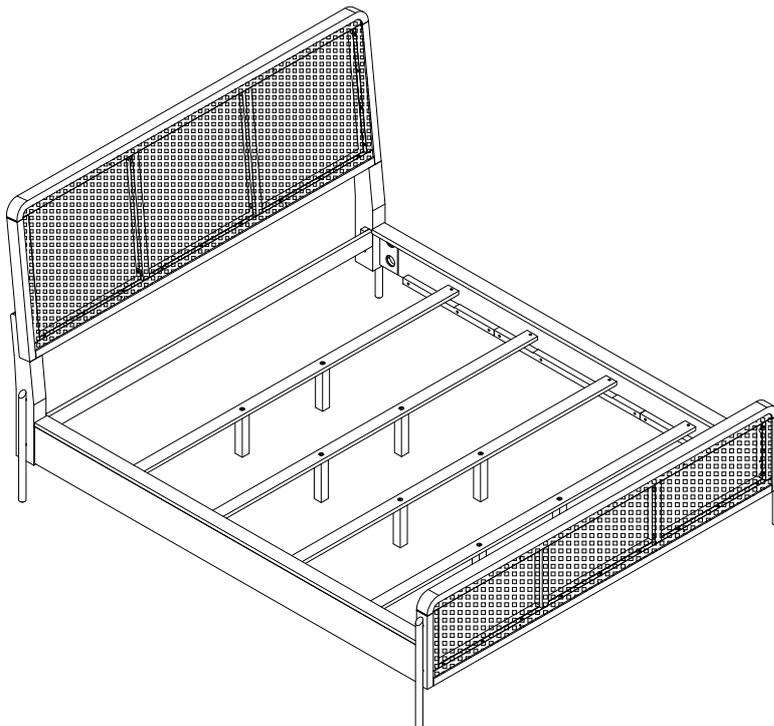

ITEM: **224330KW(B1-B3)**



Inner Size : 73.00"W x 86.00"D

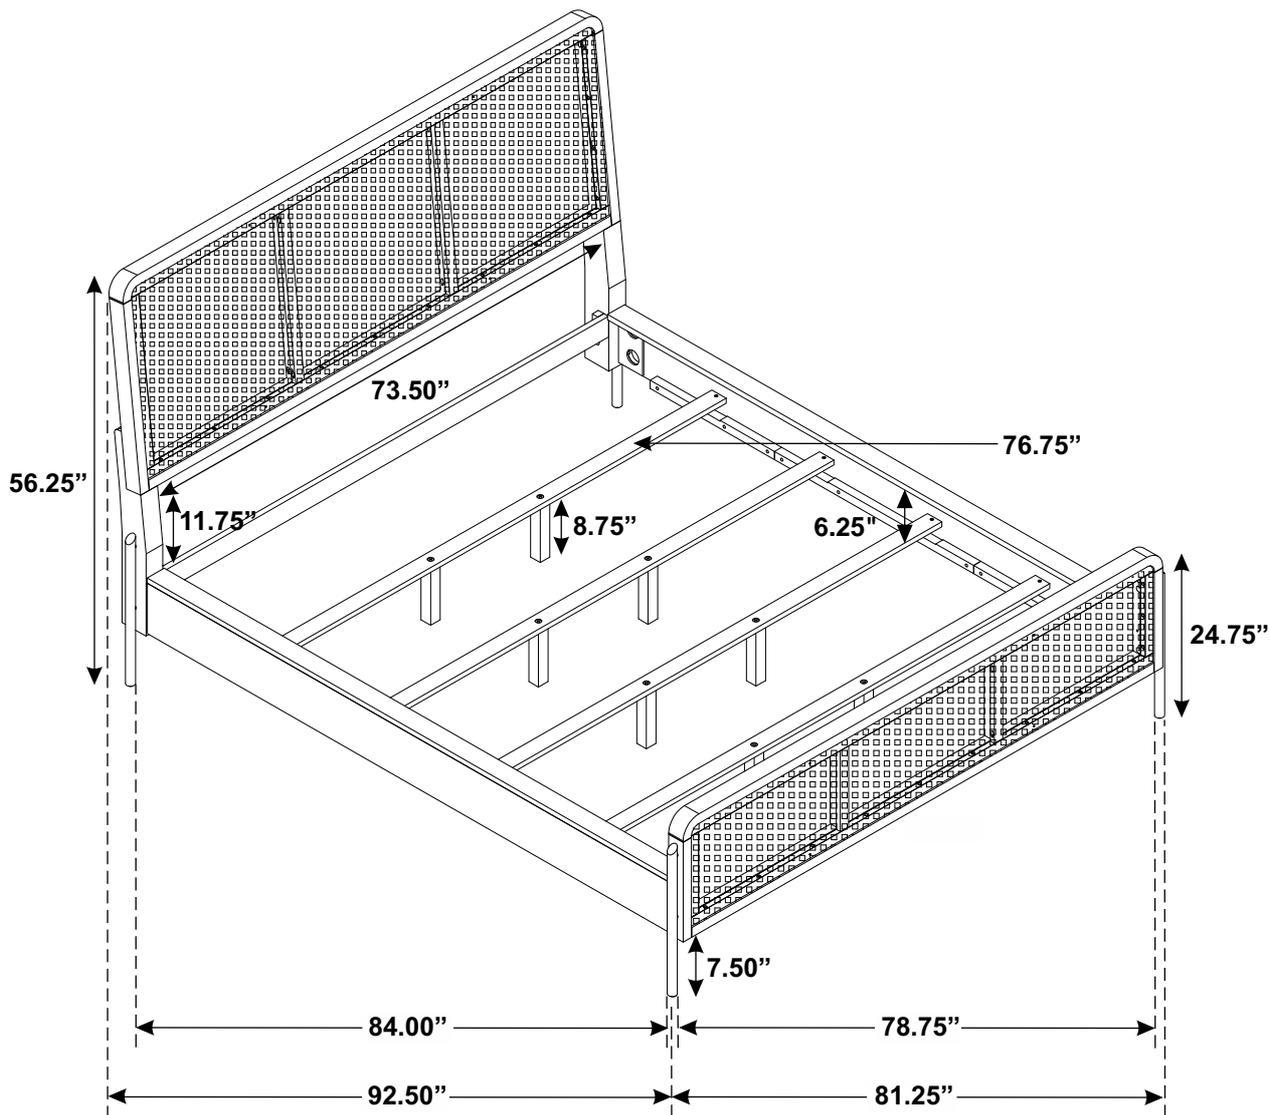

Note: Dimension tolerance  $\pm 5\%$