CARACOLE CLASSIC

ASSEMBLY INSTRUCTIONS


PLEASE UNPACK ALL PARTS AND CHECK QUANTITY AGAINST PARTS LIST BEFORE DISCARDING PACKING CARTON!

- 1) Place the product on soft ground;
- 2) Place 4 Pcs of clear bumpers (A) into the metal top frame, then put the glass top (1) in;
- 3) Place 4 Pcs of clear bumpers (A) into the middle shelf frame, then put the glass shelf (2) in;
- 4) Place mirror (3) into the bottom shelf frame, And the installation is completed;

*** NOTE KEEP THIS SHEET ***

In the unlikely event that you would need a replacement part for your furniture, please contact your local authorized Schnadig International dealer. If you need replacement hardware quickly, it could be purchased from your local hardware store.

	CLA-021-411							
	THIRD TIMES A CHARM							
Part List								
Hardware List			Part Number	QTY				
1		Glass Top	CLA-021-411-029	1				
2	(II)	Glass Shelf	CLA-021-411-028	1				
3		Mirror	CLA-021-411-072	1				
4	•	Adjustable Floor Glide	CLA-021-411	4				

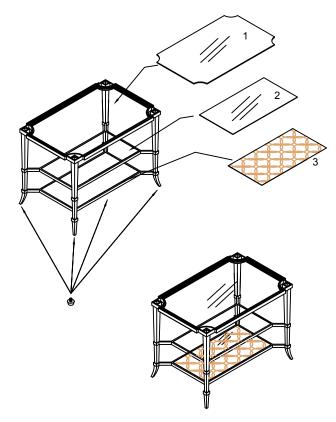

RTA Hardware							
Hardware List							
А	0	Clear Bumper		8			

Created on: 2022-02-24 Page 1 of 1