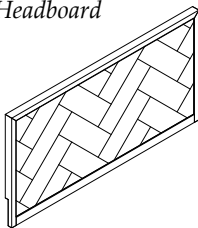

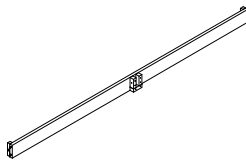




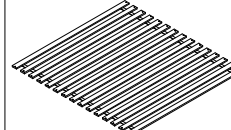








Hardware and Parts packed with the Headboard

58076 4/6-5/0 Uph/Pnl Headboard		Headboard Post		Headboard Stretcher			
							
(H-A) 1 pc.		(H-B) One Left & One Right		(H-C) 1 pc.			
Ø5/16" x 2" Allen Head Bolt	Ø5/16" x Ø12mm Spring Washer	Ø5/16" x Ø19mm Flat Washer	Ø1/4" x 1-1/2" Allen Head Bolt	Ø1/4" x Ø10mm Spring Washer	Ø1/4" x Ø16mm Flat Washer	M4 x 2"-1/2 Allen key	M4 x 4" Straight Allen key
							
(H-D) 6 pcs.	(H-E) 6 pcs.	(H-F) 6 pcs.	(H-G) 2 pcs.	(H-H) 2 pcs.	(H-I) 2 pcs.	(H-JI) 1 pc.	(H-J2) 1 pc.


Hardware and Parts packed with the Footboard

58071 4/6-5/0 Panel Footboard & Slats	5/0 Roll Slat 60-7/8" long	Slat Support Leg	Center Slat	Ø1/4" x 2" Allen Head Bolt	Ø1/4" x 1-1/2 Allen Head Bolt	Ø1/4" x Ø10mm Spring Washer
						
(F-A) 1 pc.	(F-B) 15 pcs.	(F-C) 1 pc	(F-D) 2 pcs	(F-E) 2 pcs.	(F-F) 2 pcs.	(F-G) 4 pcs.
			Ø1/4" x Ø16 Flat Washer	M4 x 2-1/2 Allen Key	M4 x 4" Straight Allen key	Ø4 x 30mm Wood Screw
						
			(F-H) 4 pcs.	(F-I1) 1 pc	(F-I2) 1 pc	(F-K) 32 pcs.


Hardware and Parts packed with the Bed Rails

58073 -- 5/0-6/6 Storage Rail 1In  (R-A4) 1pc.	Ø5/16"-18 Arc Washer & Nut  (R-B) 4 pcs.	13 mm Open Wrench  (R-C) 1 pc.	Ø5/16" x 3" Long Bolt  (R-D) 4 pcs.
58074 -- 5/0-6/6 Panel Rail 1In  (R-A5) 1 pc.	Ø5/16"-18 Arc Washer & Nut  (R-B) 4 pcs.	13 mm Open Wrench  (R-C) 1 pc.	Ø5/16" x 3" Long Bolt  (R-D) 4 pcs.
58072-- 5/0-6/6 Panel Rails 2In  (R-A6) 2 pcs.	Ø5/16"-18 Arc Washer & Nut  (R-B) 8 pcs.	13 mm Open Wrench  (R-C) 1 pc.	Ø5/16" x 3" Long Bolt  (R-D) 8 pcs.


4/6-5/0 Queen Standard Bed
 58076 -- 4/6-5/0 Panel Headboard
 58071 -- 4/6-5/0 Panel Footboard & Slats
 58072-- 5/0-6/6 Panel Rails 2In
 58073 -- 5/0-6/6 Storage Rail 1In
 58074 -- 5/0-6/6 Panel Rail 1In

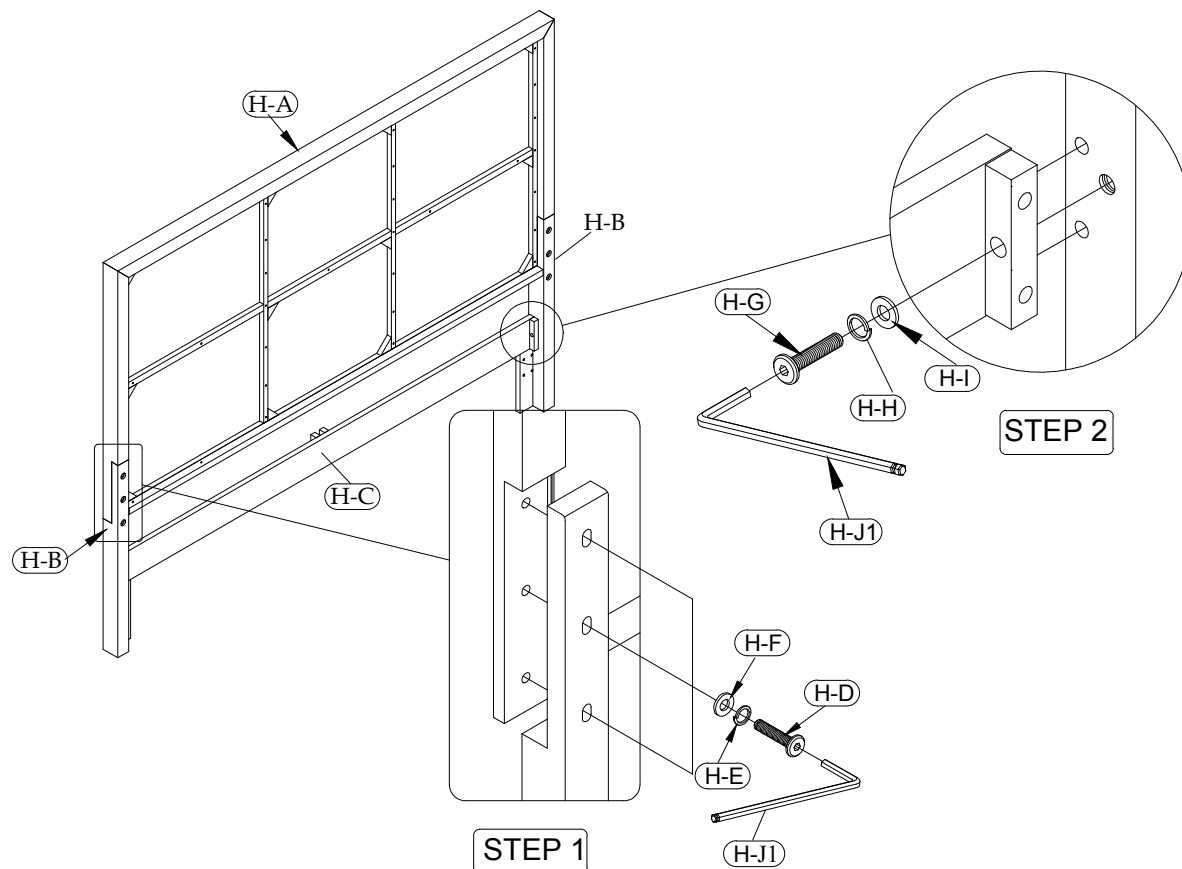


STEP 3

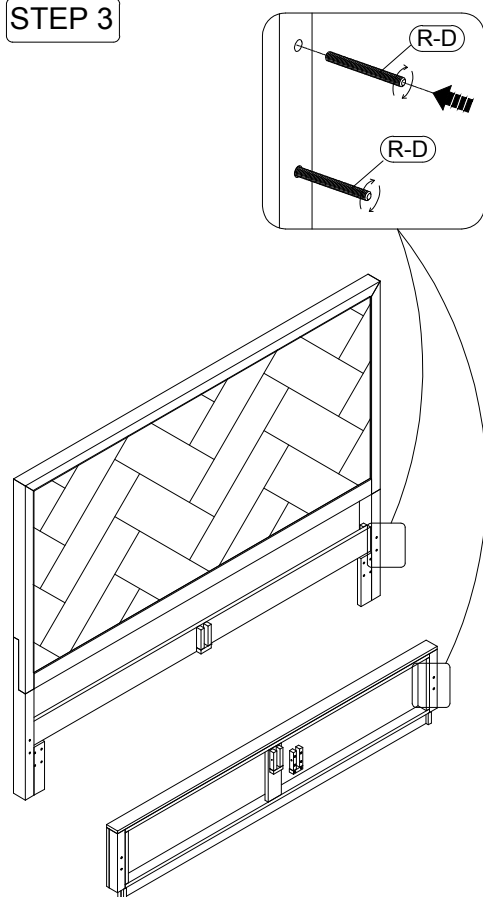


STEP 4

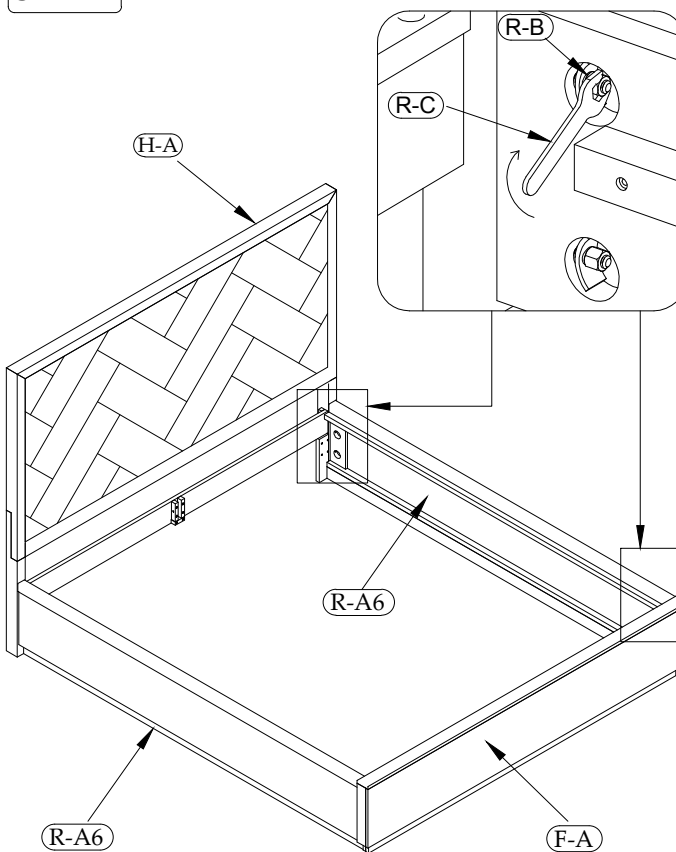


4/6-5/0 Queen Standard Bed
58076 -- 4/6-5/0 Panel Headboard
58071 -- 4/6-5/0 Panel Footboard & Slats
58072-- 5/0-6/6 Panel Rails 2In

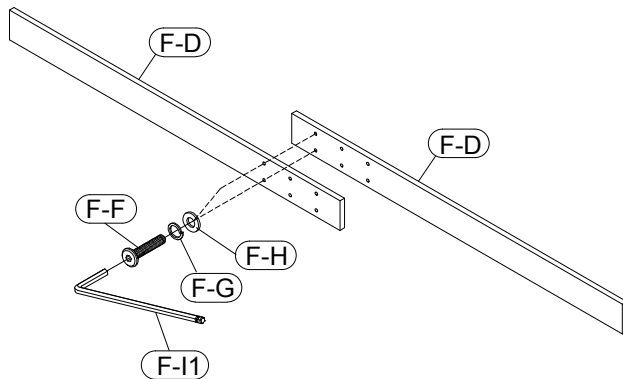

STEP 5

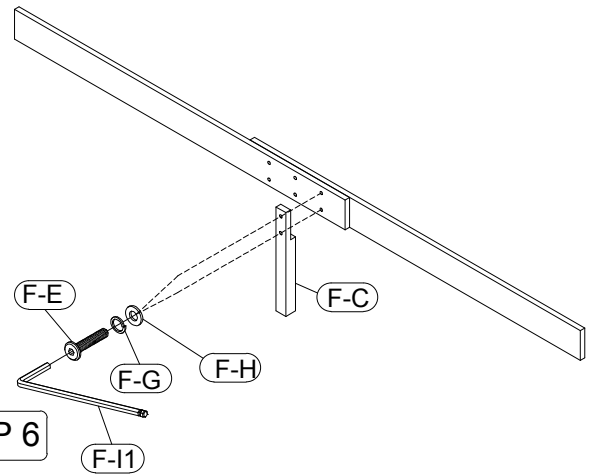


STEP 6

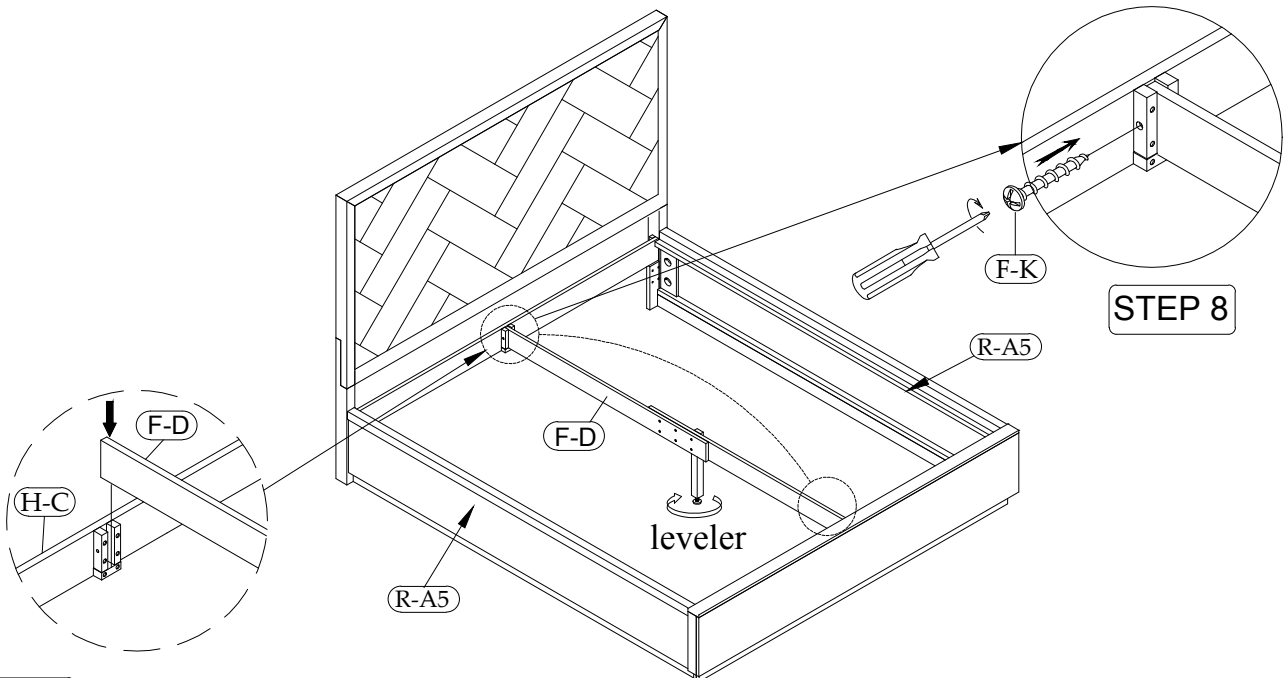


STEP 7

STEP 8


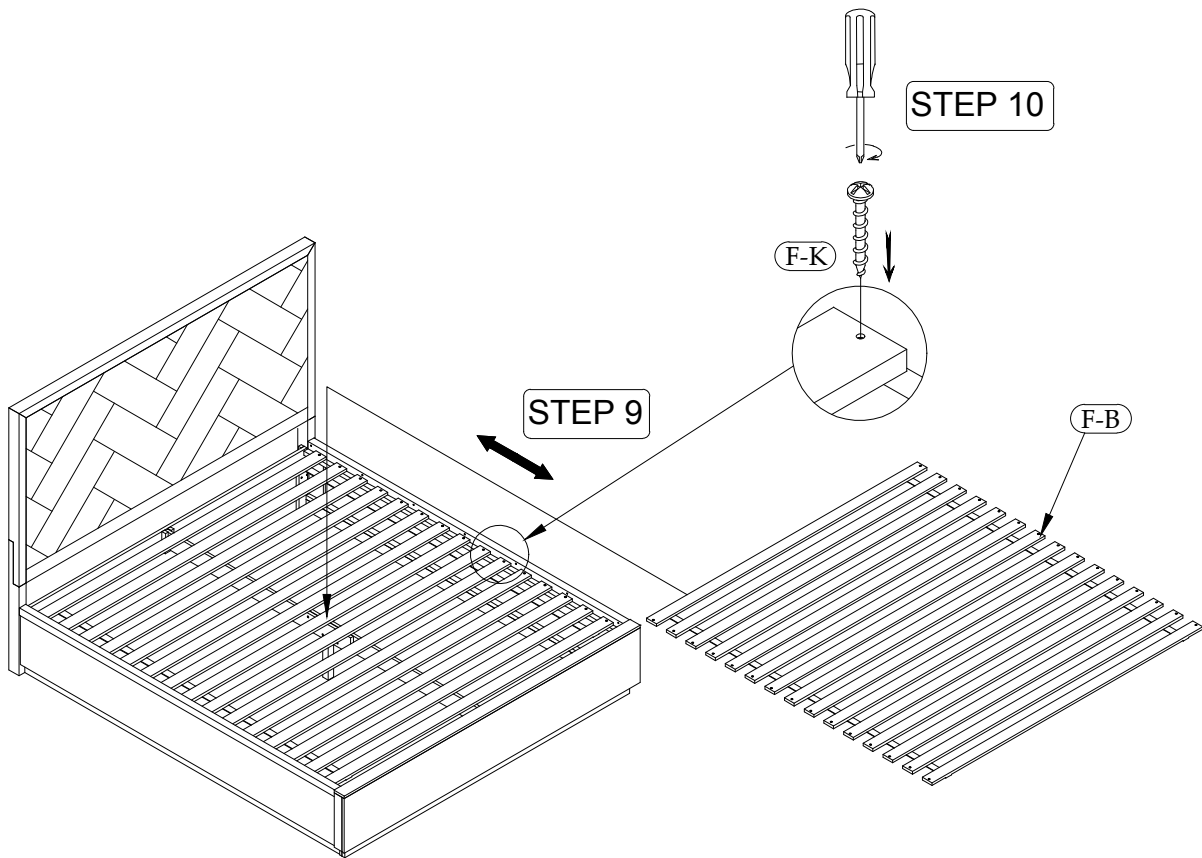


Only use this step for 58082 -- 6/0 Panel Rails 2In


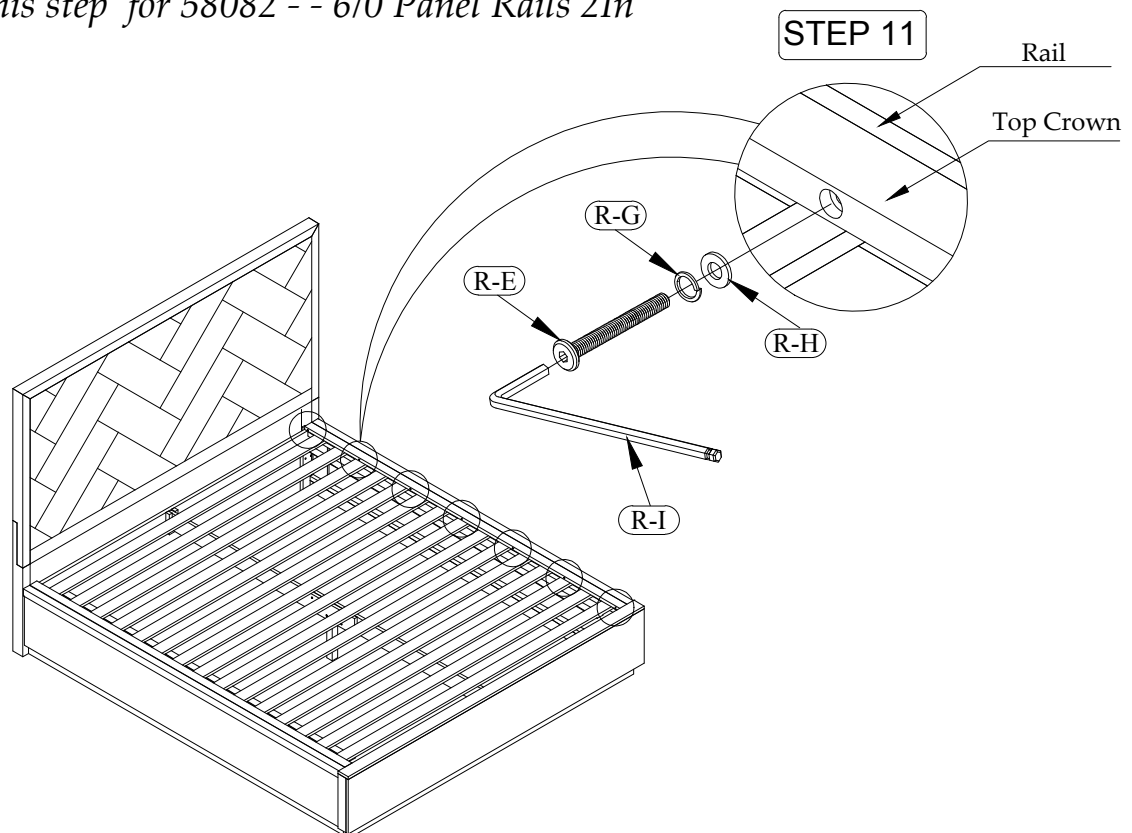



4/6-5/0 Queen Standard Bed
58076 -- 4/6-5/0 Panel Headboard
58071 -- 4/6-5/0 Panel Footboard & Slats
58073 -- 5/0-6/6 Storage Rail 1In
58074 -- 5/0-6/6 Panel Rail 1In

STEP 3

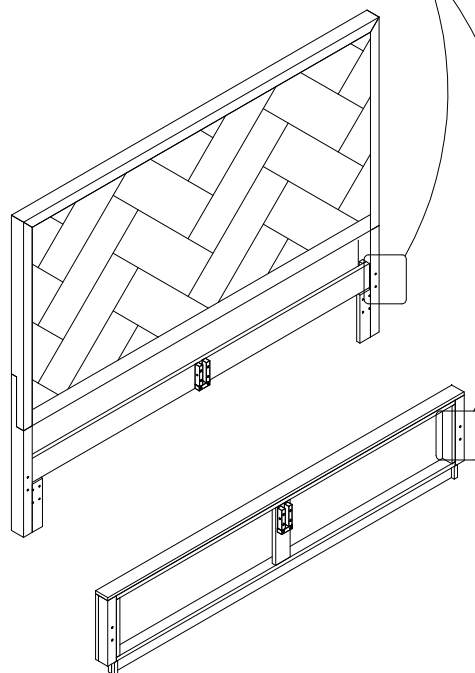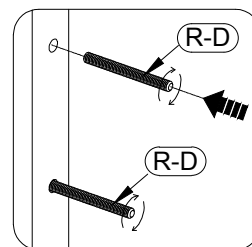


STEP 4

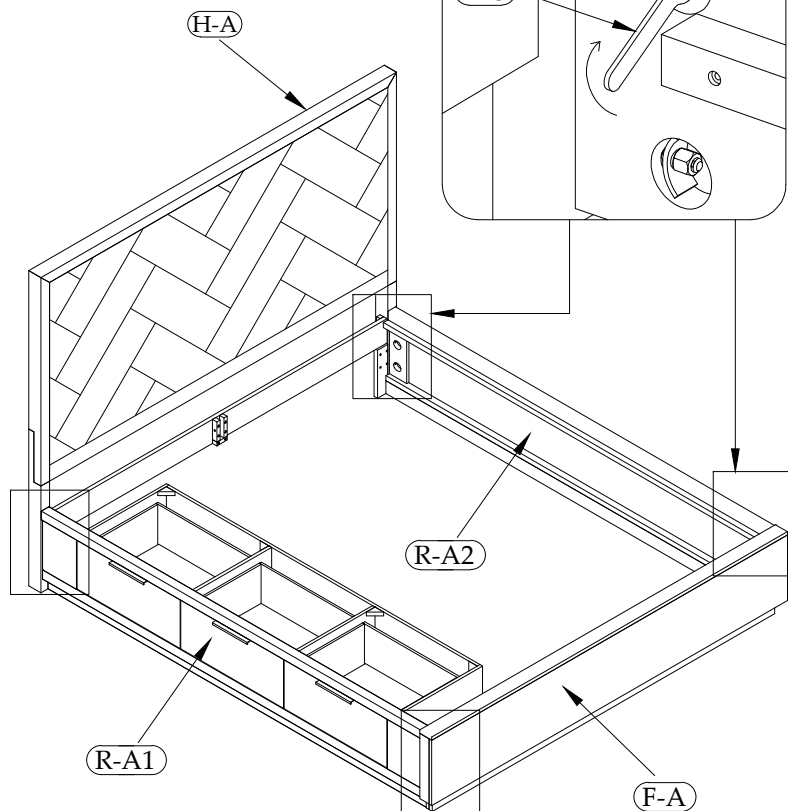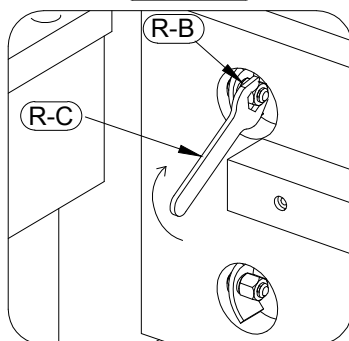


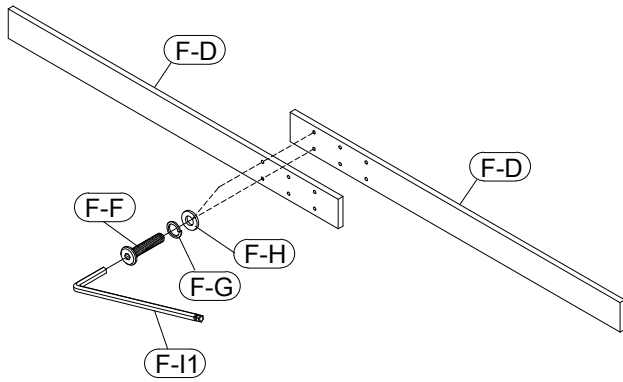

STEP 5

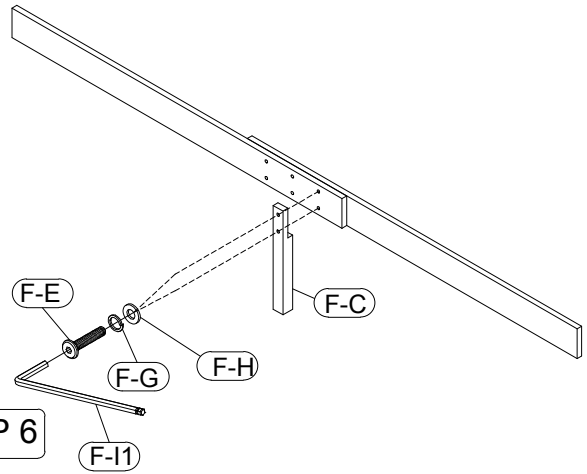


STEP 6

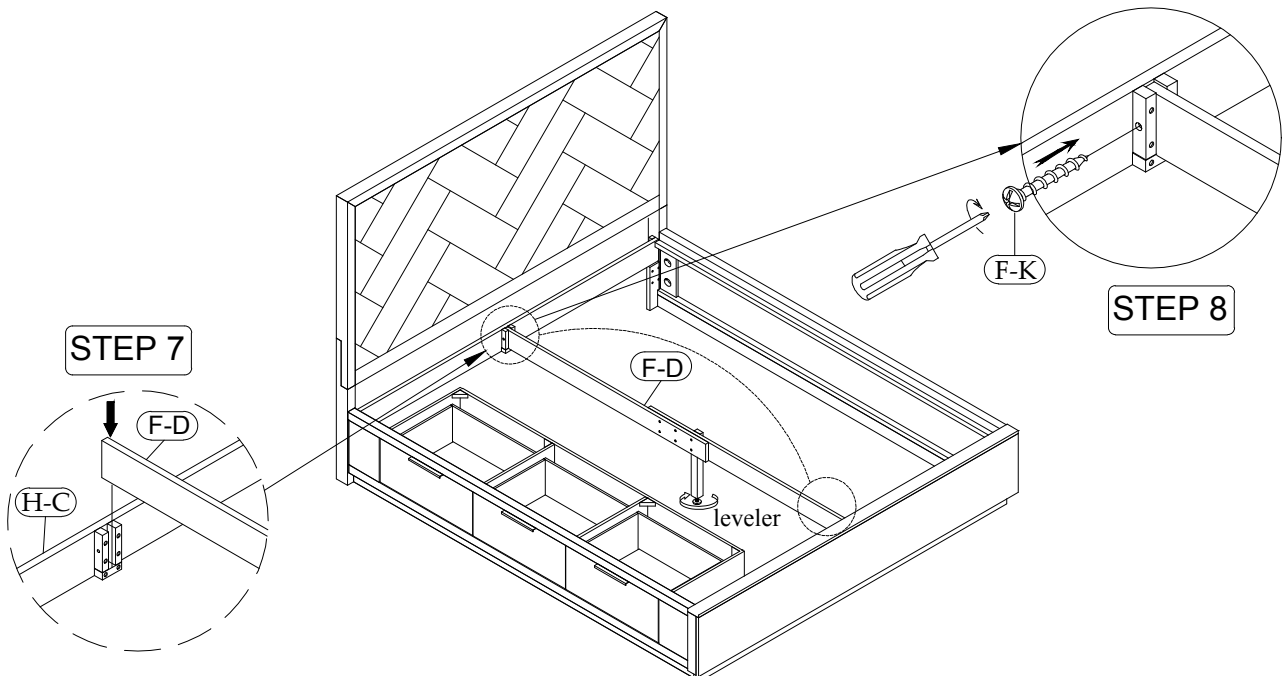

STEP 7

STEP 8

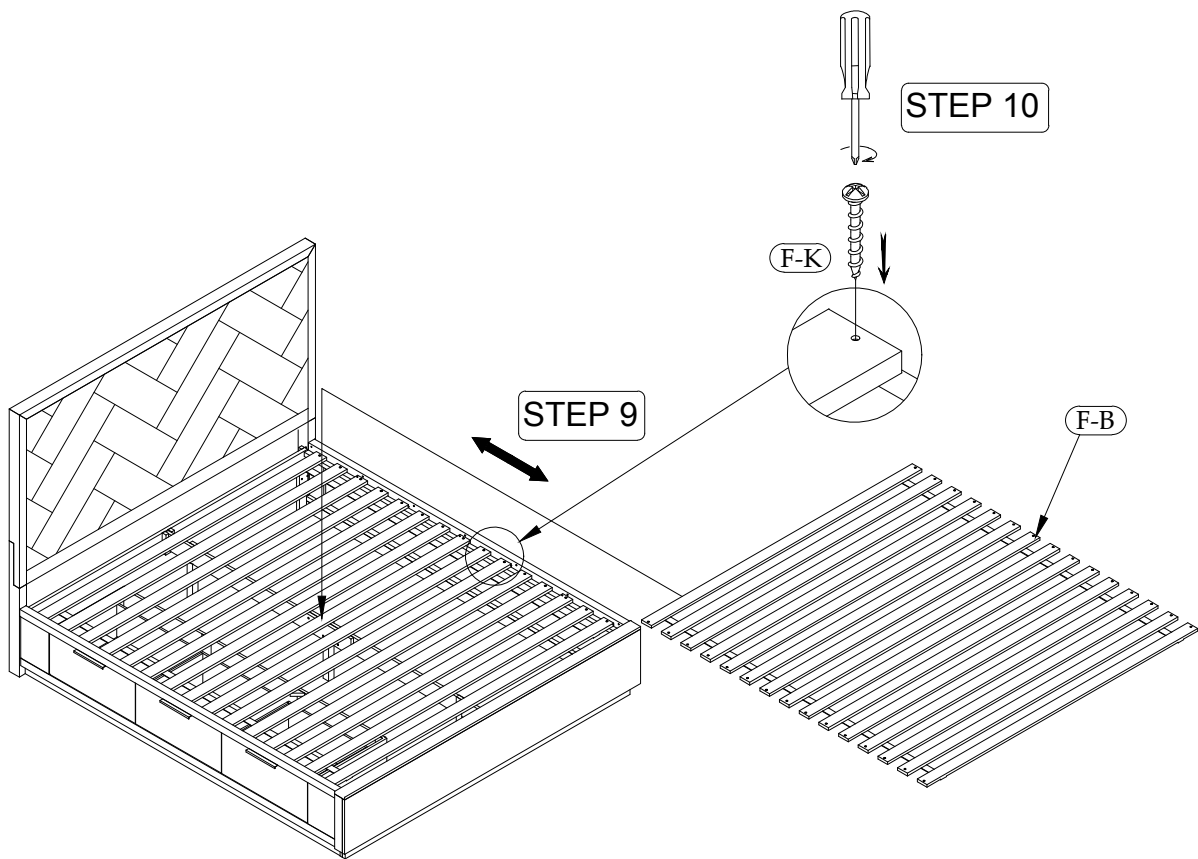

*5/0 Queen Standard Bed
58076 -- 4/6-5/0 Panel Headboard*

