

# ASSEMBLY INSTRUCTIONS

**npd**  
furniture and more

19000155

Bjorn KD Accent Chair

## Part Identification

## Hardware

(1)×1



(7)×1



(2)×2



(3)×2



(4)×8




(5)×8



(6)×8



1:

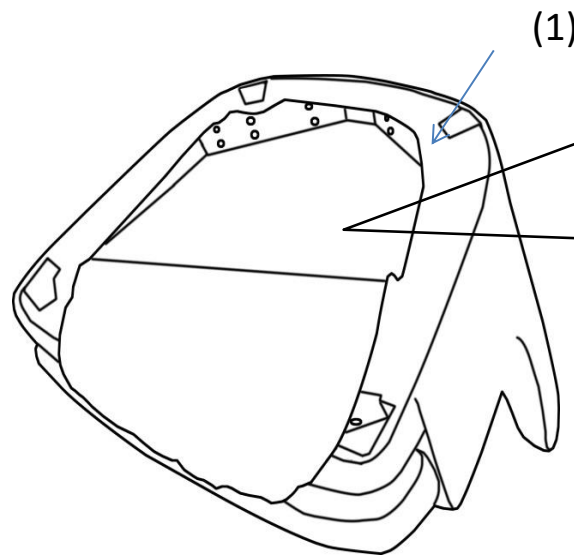

(1)



\*2



\*2



\*8



\*8




\*1



\*8

2:

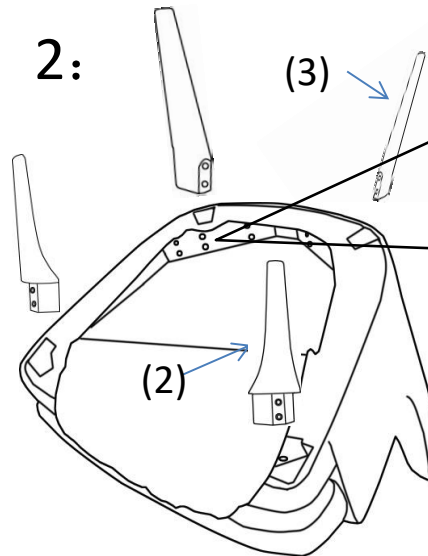

(2)


(3)

(4)

(5)

(6)

(7)

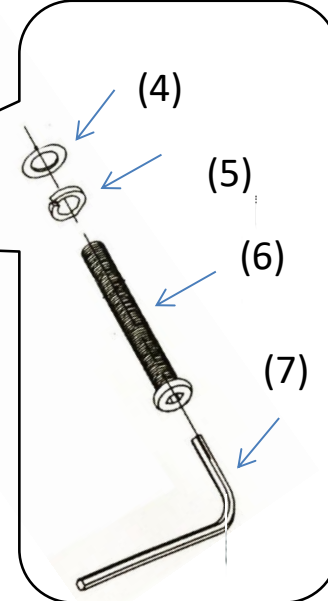

3:

