Bed Assembly Instructions (B-BED)

Contents: Sizes vary depending on model

(A) 1x Headboard (height varies depending on model)

(B) 1x Footboard (height varies depending on model)

(C) 2x bed rails (75" or 80" long)

(D) 9x slats (Twin=40-1/4", Full=55-1/4", Queen=61-1/4" long)

Right assembly

(E) 24x screws 1-1/4" long --(F) 22x screws 1-1/2" long

(G) 4x bed fitting plates


(H) 4x bed fitting brackets (2 left, 2 right)





Side view Front view

Plate (4 included)

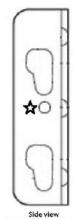


Left bracket (2 included)



Tools required: #2 Robertson or Phillips screwdriver

A power driver or hammer drill is recommended.

Front view (H)

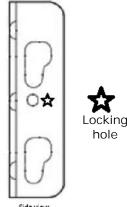

hole

Right bracket (2 included)

Loosely secure 4x bed fitting brackets (H) to bed ends (A & B) using 3x 1-1/4" screws (E) for each bracket (refer to Figure 1 for marking locations) making sure to position brackets as shown in images of assemblies above. Tilt the screws slightly (5 degrees) towards the centre of the bed to allow clearance for a power driver. Brackets are kept loose until step 3 & 4 are completed, being loose allows for easiest installation.

Secure bed fitting plates (G) to bed rails (C) using 3x 1-1/4" screws for each plate (refer to Figure 2 for marking locations). Important: a 1/16" gap between edge of bed fitting plate and bed rail end is needed to make the bed rail connect tightly to bed end (refer to Figure 4).

Position 2x bed rails on to headboard inserting bed fitting plates into bed fitting brackets.

Position 2x bed rails on to footboard inserting bed fitting plates into bed fitting brackets.

Tighten all brackets.

Left assembly

Bed fittings are connected properly when locking holes 🕱 are aligned, add 1x 1-1/2" screw through each locking hole.

Slide nine slats (D) into grooves of bed rails positioning each with equal spaces no greater than 3-1/2" in between and secure each slat with 2x 1-1/2" screws (F) using pre-drilled holes at the ends (refer to Figure 3).

