

### ITEM: 509281 ASSEMBLY INSTRUCTIONS

#### ASSEMBLY TIPS:



- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.




- WARNING!
- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.




#### ASSEMBLY TIME 20 MINUTES

# PARTS IDENTIFICATION

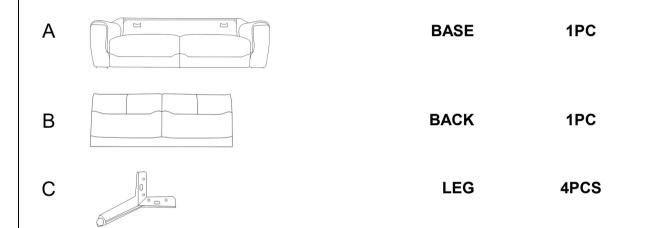


## Z HARDWARE PACKAGE

NO	DESCRIPTION	FIGURE	Q'TY		
1	BOLT Ø8MM*30MM	O	8		
2	SCREW Ф8MM*30MM	Dumman	16		
3	SPACER Φ10MM	$\bigcirc$	8		
4	WRENCH Ф4MM		1		

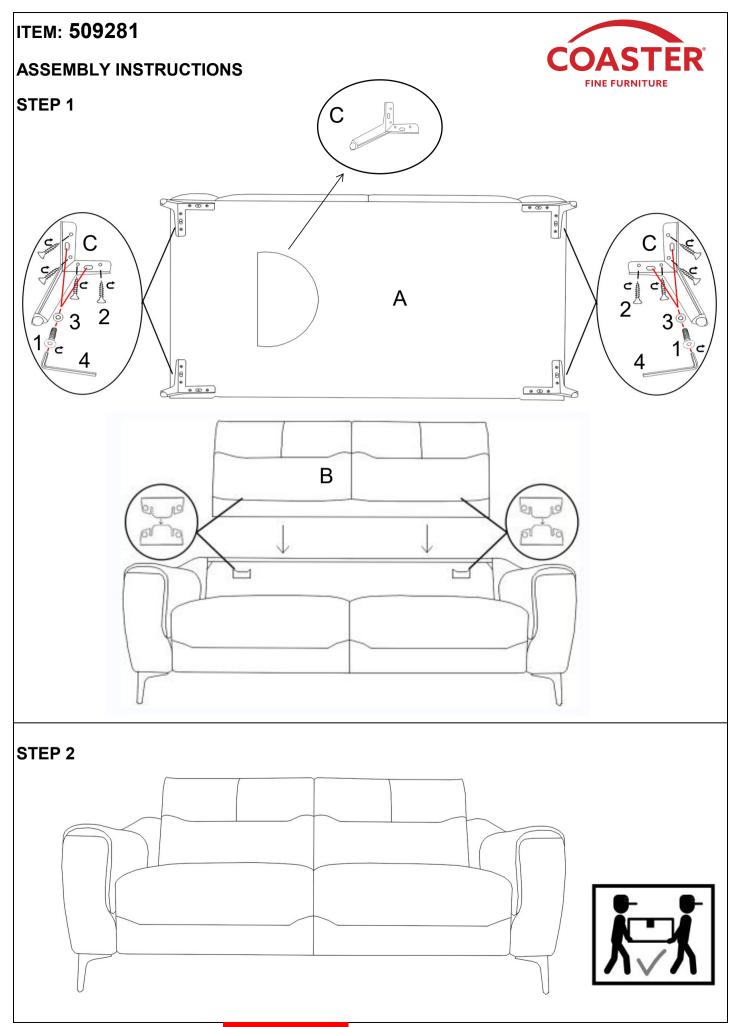

PAGE 3 OF 4

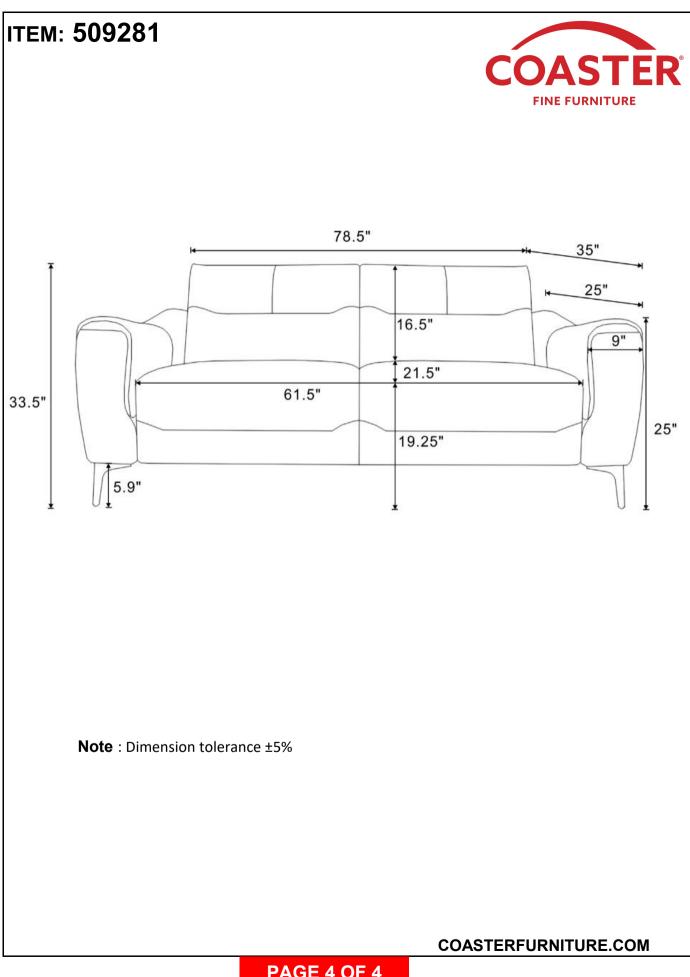

PAGE 4 OF 4



# ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life




COASTERFURNITURE.COM

REVISION 0: 02/18/2025

PAGE 1 OF 4

#### ITEM: 509282 ASSEMBLY INSTRUCTIONS

#### ASSEMBLY TIPS:



- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



- WARNING!
- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.




#### ASSEMBLY TIME 15 MINUTES

# PARTS IDENTIFICATION



## Z HARDWARE PACKAGE

	t	· · · · · · · · · · · · · · · · · · ·	
NO	DESCRIPTION	FIGURE	Q'TY
1	BOLT Ø8MM*30MM		8
2	SCREW Ф8MM*30MM	Outputute	16
3	SPACER Φ10MM	$\bigcirc$	8
4	WRENCH Ф4MM		1

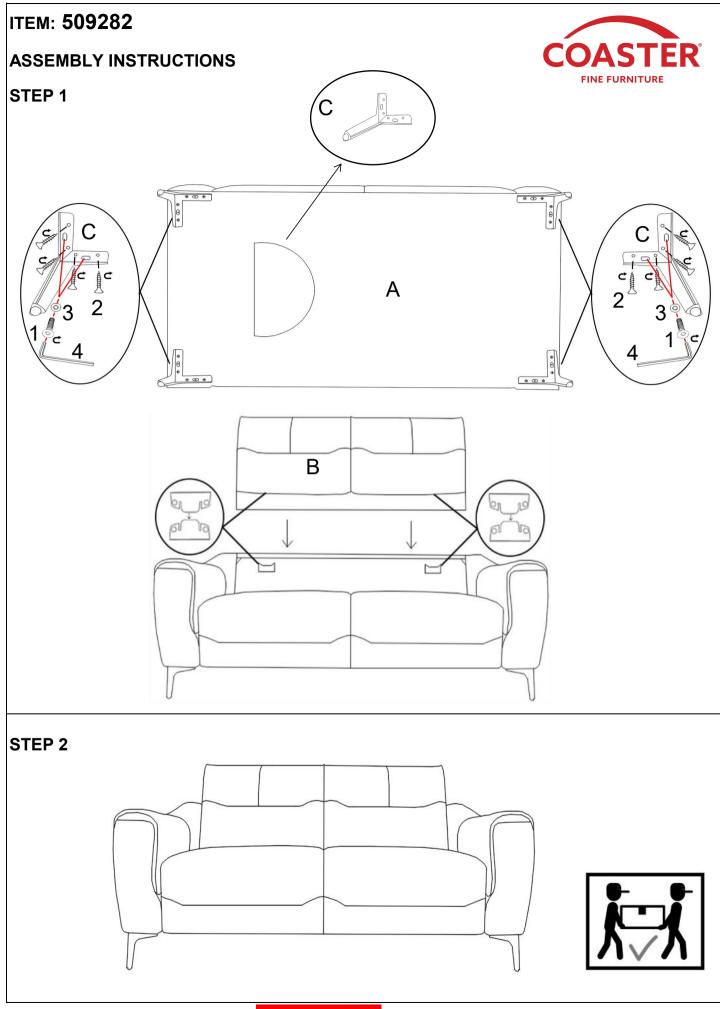

PAGE 3 OF 4

