

ASSEMBLY INSTRUCTIONS

ITEM # 60570-63-01/02 UPH COUNTER HEIGHT STOOL







Thank you for purchasing this product. Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment.








Before You Assemble: Please read all instructions carefully before beginning assembly. It is recommended that 2 people work together during assembly to prevent personal injury and to ensure that heavy or cumbersome parts are not damaged during the process.

CAUTION: For your safety, this product requires two people to lift.


PLEASE NOTE: Screws may loosen over time with use and periodically require tightening.

60570-63-01/02 UPH COUNTER HEIGHT STOOL PART LIST

PART	DRAWING	DESCRIPTION	QTY
A		Stool Back	1
B		Seat	1
C		Left Leg	1
D		Right Leg	1
E		Front Stretcher	1
F		Side Stretcher (R/L)	2

PART	DRAWING	DESCRIPTION	QTY
H1		Allen Bolt $\phi 5/16"$ x 40 mm	2
H2		Allen Bolt $\phi 5/16"$ x 50 mm	4
H3		Allen Bolt $\phi 5/16"$ x 80 mm	4
H4		Lock Washer $\phi 5/16"$ x $\phi 11$ mm	10
H5		Flat Washer $\phi 5/16"$ x $\phi 19$ mm	10
H6		Wood Screw 4 x 38 mm	6
H7		Allen Key 4mm	1

ADDITIONAL TOOLS REQUIRED: PHILLIPS HEAD SCREWDRIVER 

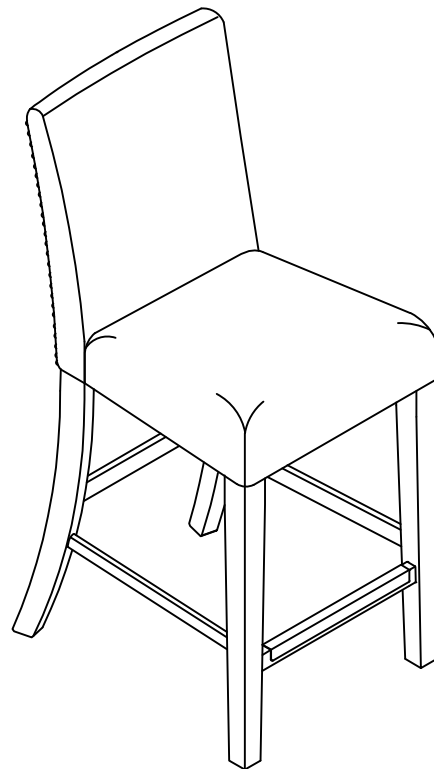

COMPLETED COUNTER UPH HEIGHT STOOL ASSEMBLY




MADE IN VIET NAM


STEP 1

Important:

1. Please lay the Table on a clean, soft surface to assemble.
2. Do not over-tighten screws/ bolts until assembly is completed.
Do not use an impact drill. Please only assemble bolt and washers with included H7 tool.

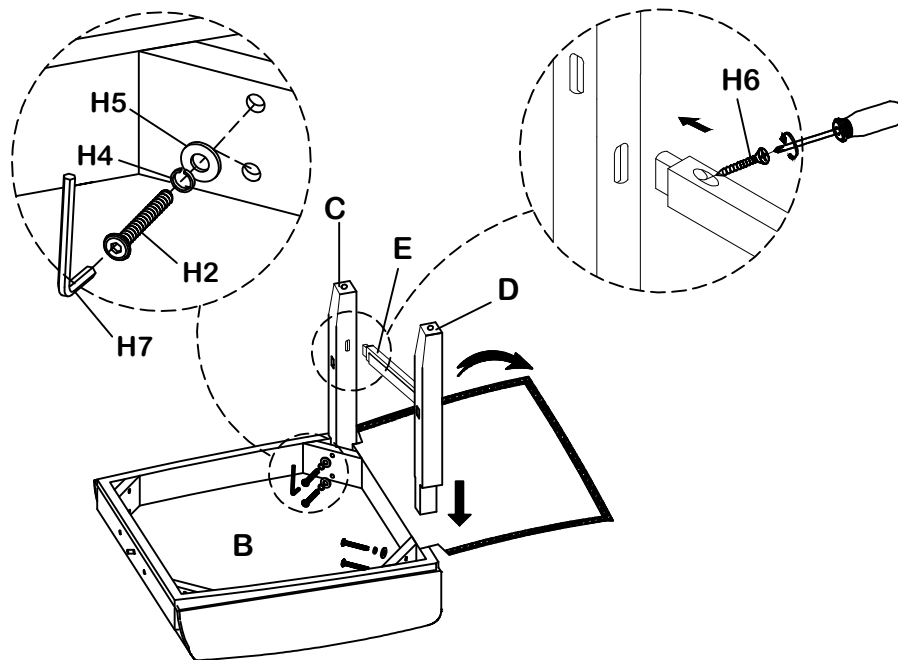


STEP 2

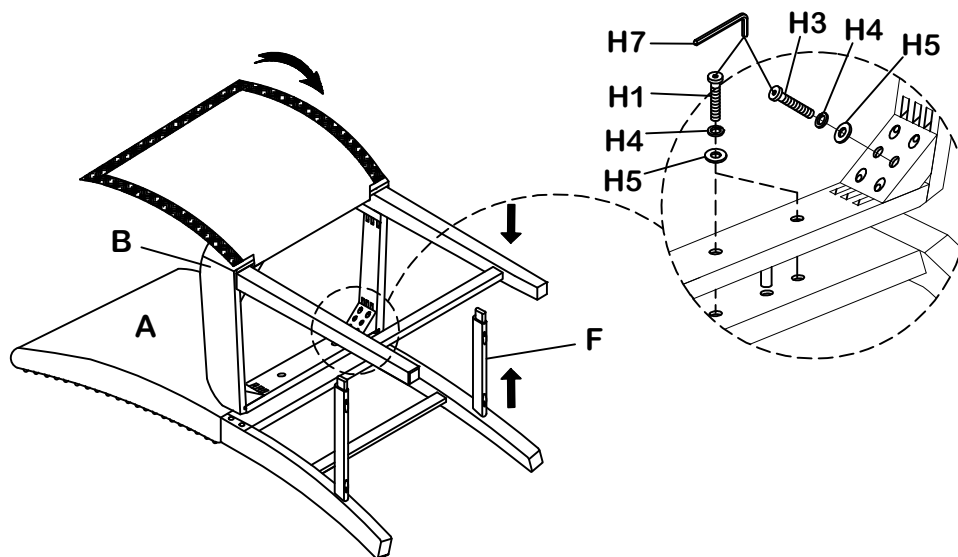


PLEASE NOTE: Screws may loosen over time with use and periodically require tightening.

STEP 3

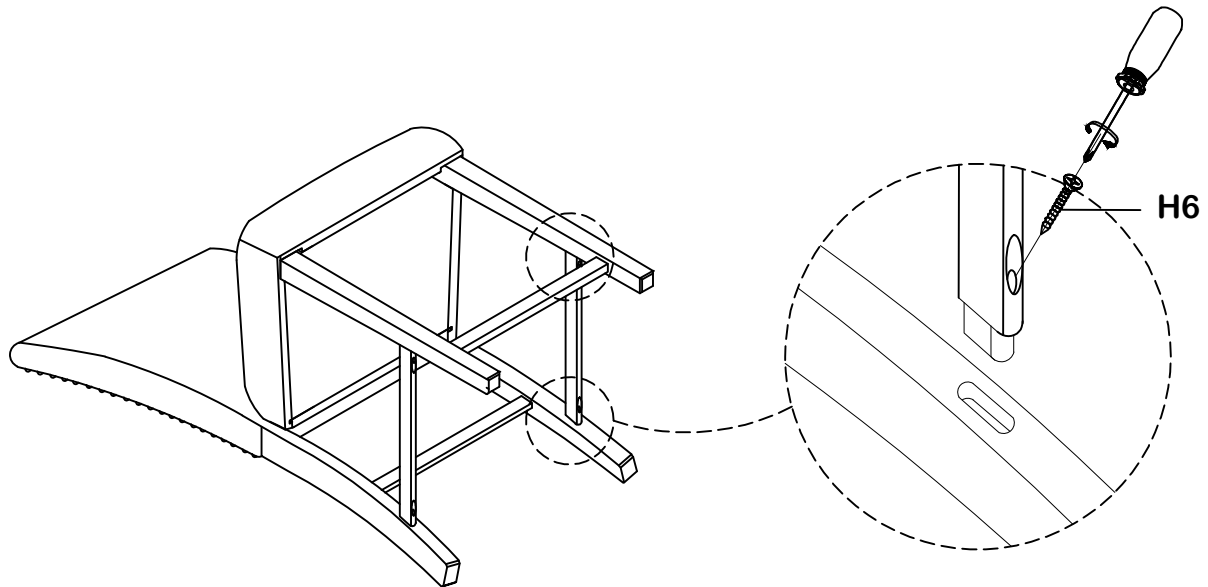

STEP 4

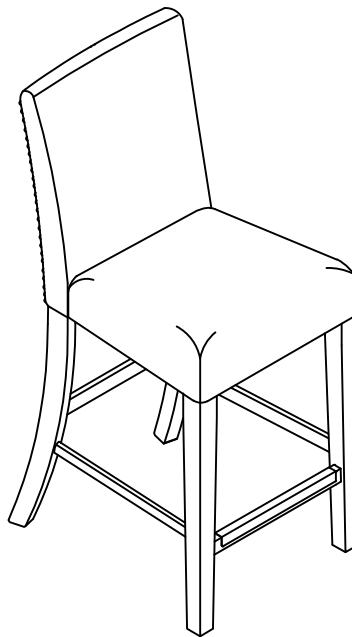

PLEASE NOTE: Screws may loosen over time with use and periodically require tightening.