


ASSEMBLY INSTRUCTIONS



Bath Storage Hutch with 2 Doors & Open Lower Shelf

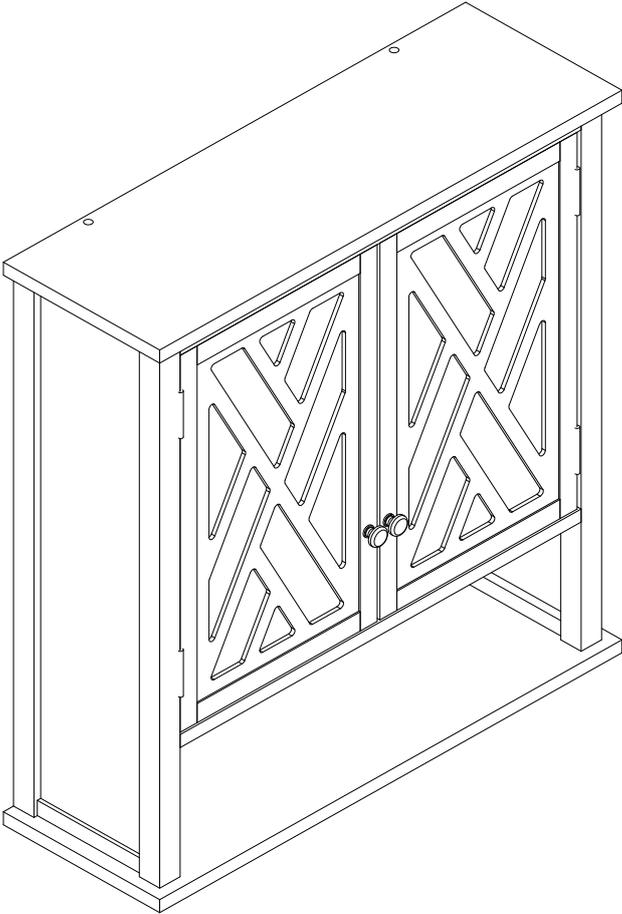

REPLACEMENT PARTS


Please do not contact the company purchased from as we can help you faster.

Order replacement parts and hardware at "boltonfurniture.com"


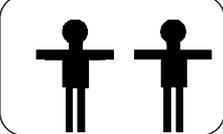
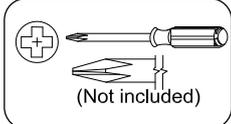
 <p>. Use of power tool to assemble this product will invalidate any claim and damage this product making it unsafe!!! . Please assemble on a clean soft surface to avoid damage.</p>	 <p>+</p>  <p>50 minutes</p>	<p><u>Tool Included</u></p>  <p>(Not included)</p>
--	---	--

www.boltonfurniture.com

Part List-Bath Storage Hutch with 2 Doors & Open Lower Shelf

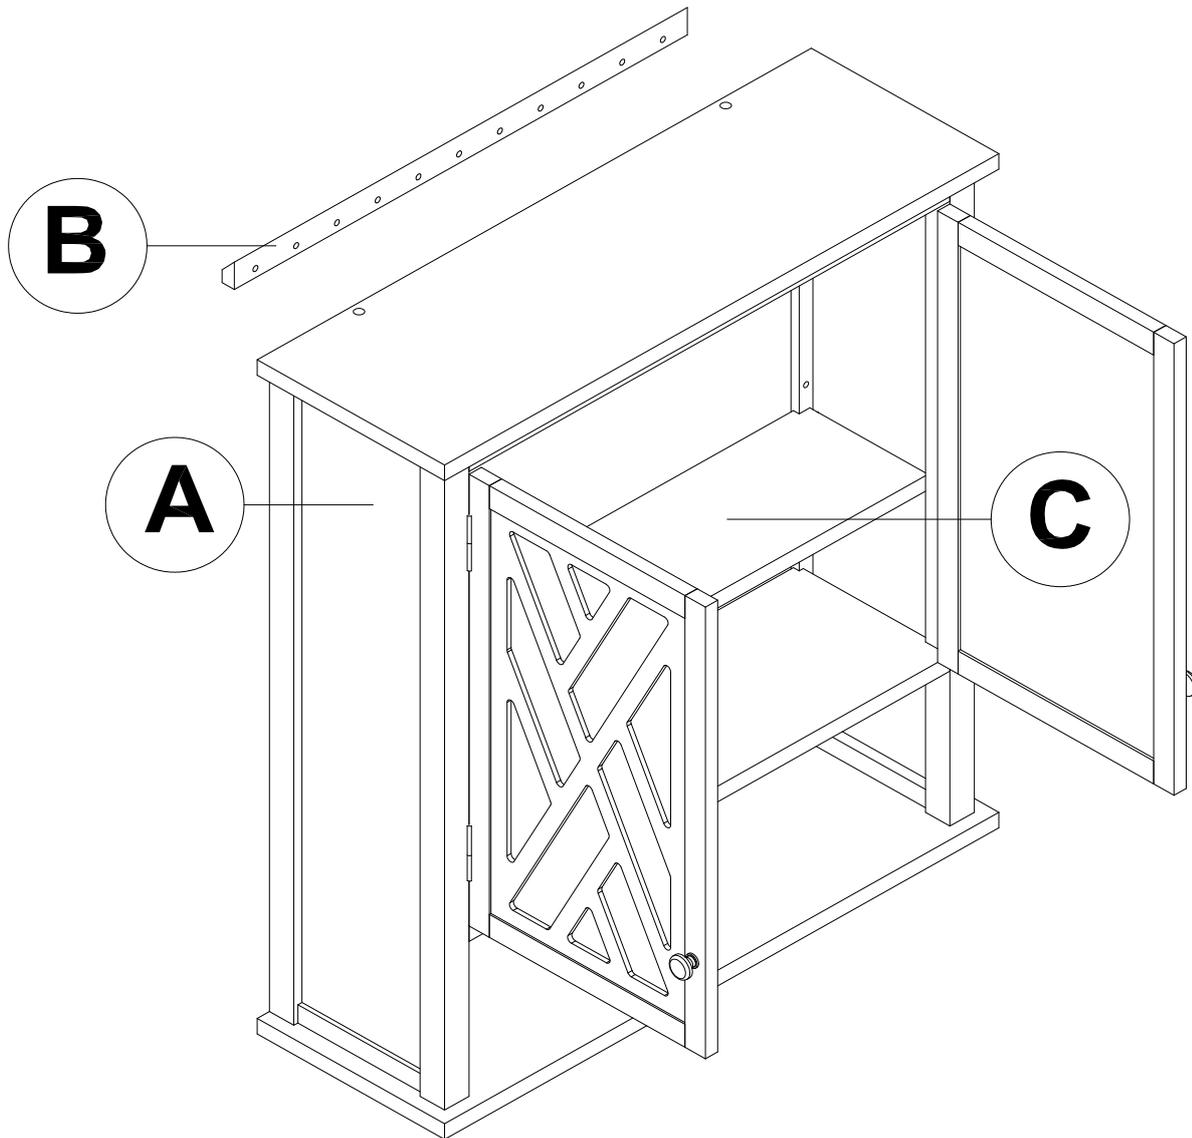


Identifying the hardware-Identify the hardware using the illustrations below.

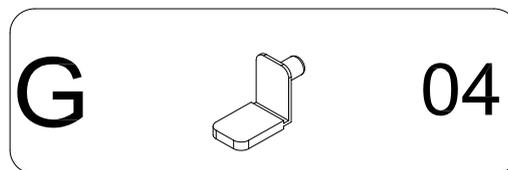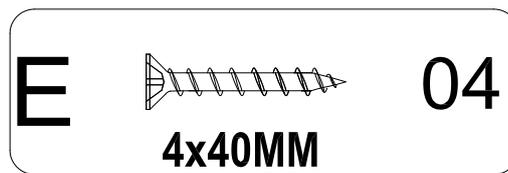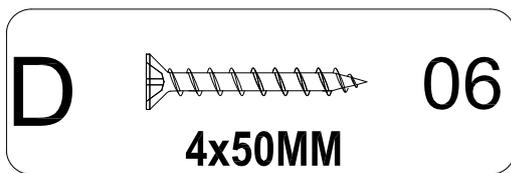


Step 1

Remove Cleat(B) by unscrewing 2 wood screw(D)

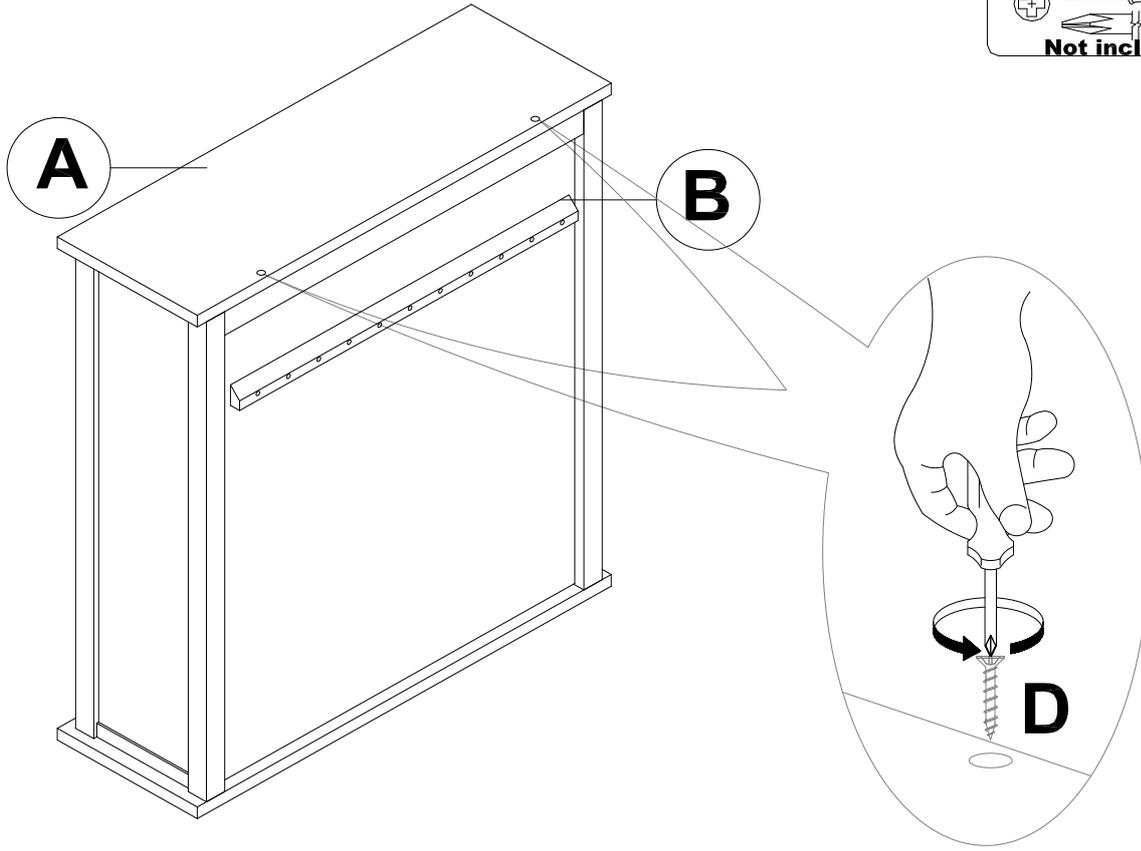

Step 2

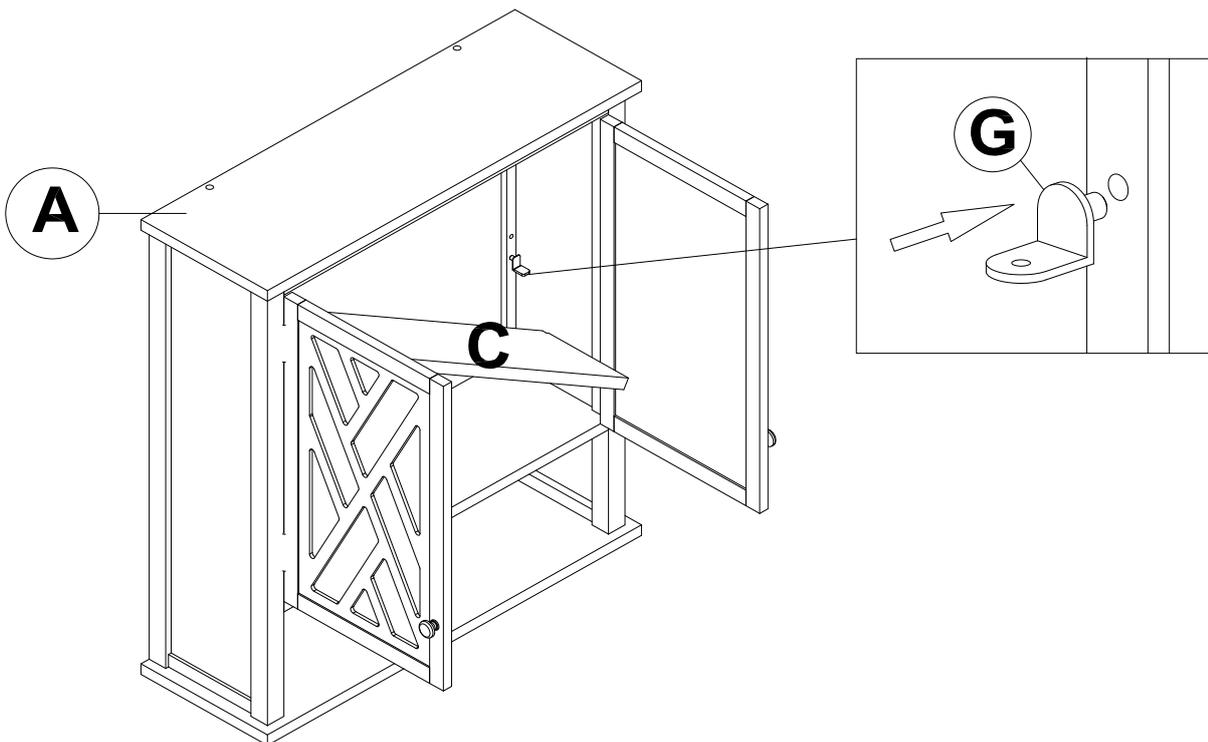

Note: If possible, we recommend that you secure cleat (B) to stud in wall.

Step 3

Position Cleat (B) on wall in desired location where hutch will be hung.

Make sure cleat is level.

Step 4



Using Cleat (B) as template, align holes in cleat to studs in wall. Drill

1/8" pilot holes 3/4" deep.

Step 5

Attach French Cleat (B) to Studs in wall in 4 locations using


wood screws (D)

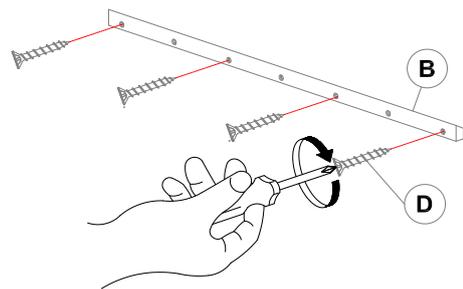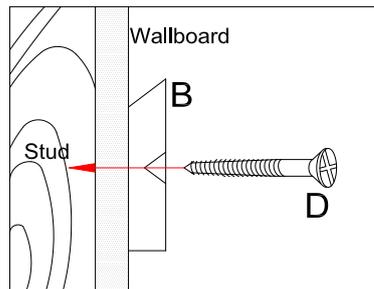

Step 6

If hole locations do not align with stud in wall, install the EZ Anchor(F) in to drywall by tapping it in to the predrilled pilot holes up to the thread, and then screwing the EZ Anchor in to the drywall. Attach Cleat (B) using wood screw (E) to EZ Anchors.

NOTE: Cleat could be secured using combination of Studs and EZ Anchors.

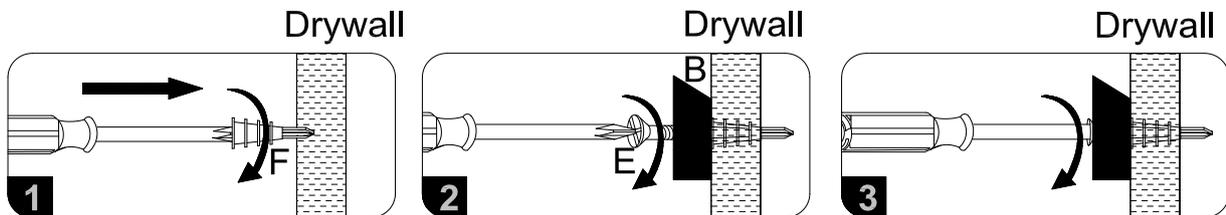

Step 7:

Hang Hutch(A) on cleat. Secure in 2 places using wood screw (D).

