















































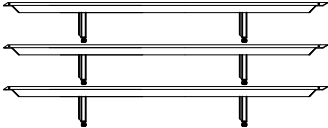





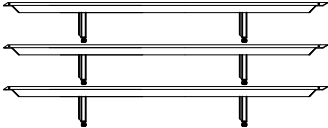





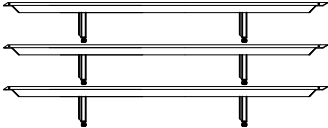







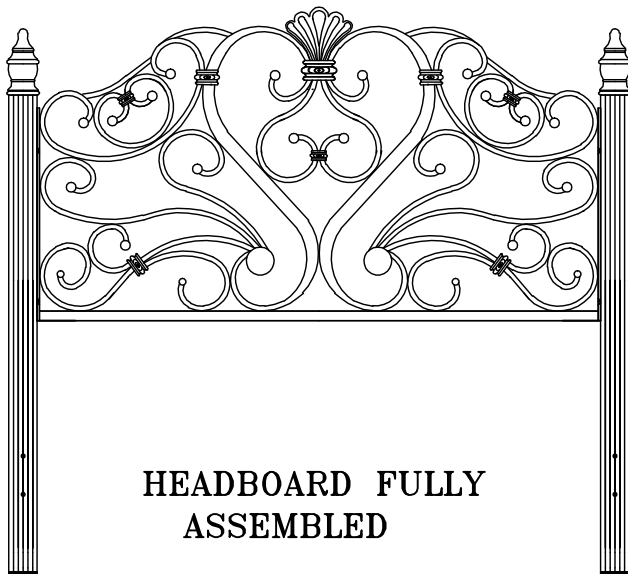
# leggett & platt. fashion bed™

5950 West 51st Street - Chicago, IL 60638

## Parts List For Elegance Bed

GRILL CARTON	POST CARTON	<table><tr><td>1</td><td>2</td><td>3</td><td>4</td><td>5</td><td>6</td><td>7</td></tr><tr><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr></table>							1	2	3	4	5	6	7							
1	2	3	4	5	6	7																
																						
PART #376801 HARDWARE BAG (1) 1/4-20 X 1" COUNTERSUNK ALLEN HEAD SCREW-8 (2) 1/4-20 X 1" FLAT ALLEN HEAD-14 (3) 1/4" ID FLAT METAL WASHER-20 (4) 1/4" ID LOCK METAL WASHER-8 (5) 1/4-20 HEX NUTS-6 (6) ALLEN WRENCH-1 (7) OPEN WRENCH-1  (11) HEADBOARD GRILL-1 (12) FOOTBOARD GRILL-1  (16) PLASTIC GLIDE-4 #379102 NOTE: GLIDES PRE-INSTALLED	(8) FINIAL-4 #379101 (9) HEADBOARD POST-2 (10) FOOTBOARD POST-2  NOTE: FINIAL PRE-INSTALLED-2	<table><tr><td>8</td><td colspan="3">9</td><td colspan="3">10</td></tr><tr><td></td><td colspan="3"> </td><td colspan="3"> </td></tr></table>							8	9			10				 			 		
	8	9			10																	
		 			 																	
SIDE RAILS CARTON	<table><tr><td>11</td><td>12</td><td colspan="5">13</td></tr><tr><td></td><td></td><td colspan="5"> </td></tr></table>							11	12	13							 					
11	12	13																				
		 																				
(13) SIDE RAILS-2 (14) CROSS RAIL-3	<table><tr><td>14</td><td colspan="5">16</td></tr><tr><td>  </td><td colspan="5">  </td></tr></table>							14	16					  	  							
14	16																					
  	  																					

SAVE ALL PACKAGING MATERIALS UNTIL PRODUCT IS FULLY ASSEMBLED. HARDWARE AND SMALL PIECES MAY NOT BE SEEN AND COULD BE ACCIDENTALLY DISCARDED WITH PACKAGING MATERIALS.



**HEADBOARD FULLY  
ASSEMBLED**



**FOOTBOARD FULLY  
ASSEMBLED**

FOR ASSISTANCE IN ASSEMBLY ONLY OF THIS PRODUCT. CALL OUR HELP DESK AT 1-800-324-3415, BETWEEN 8:30 AM & 4:30 PM CENTRAL TIME MONDAY THROUGH FRIDAY. PLEASE HAVE THE STYLE NUMBER AVAILABLE BEFORE YOU CALL. (STYLE # OR NAME CAN BE FOUND ON PACKING CARTON OR SALES RECEIPT.) OUR PRODUCT IS INSPECTED TO ENSURE IT IS IN GOOD CONDITION. IF YOUR FURNITURE APPEARS TO HAVE BEEN DAMAGED IN SHIPMENT OR YOU ARE IN NEED OF REPLACEMENT PARTS PLEASE CONTACT THE DEALER FROM WHOM YOU PURCHASED THE PRODUCT.

# Instruction Sheet

**NOTE: For easy assembly you need a helper.**


## STEP 1– Assemble Grills to Headboard and Footboard Post.

- Align headboard grill (11) holes with threaded holes on headboard post (9). SEE FIGURE 1
- Insert screw (1) through holes on headboard grill (11) and footboard grill (12) into threaded holes on headboard post (9) and footboard post (10).
- Tighten screw (1) with Allen wrench (6).
- Repeat same steps on other side of headboard grill (11) and footboard grill (12). SEE FIGURE 1

## STEP 2– Assembly Finial to Headboard Post.

- Screw finial (8) on top of each headboard post (9).SEE FIGURE 1


**FIGURE 1**

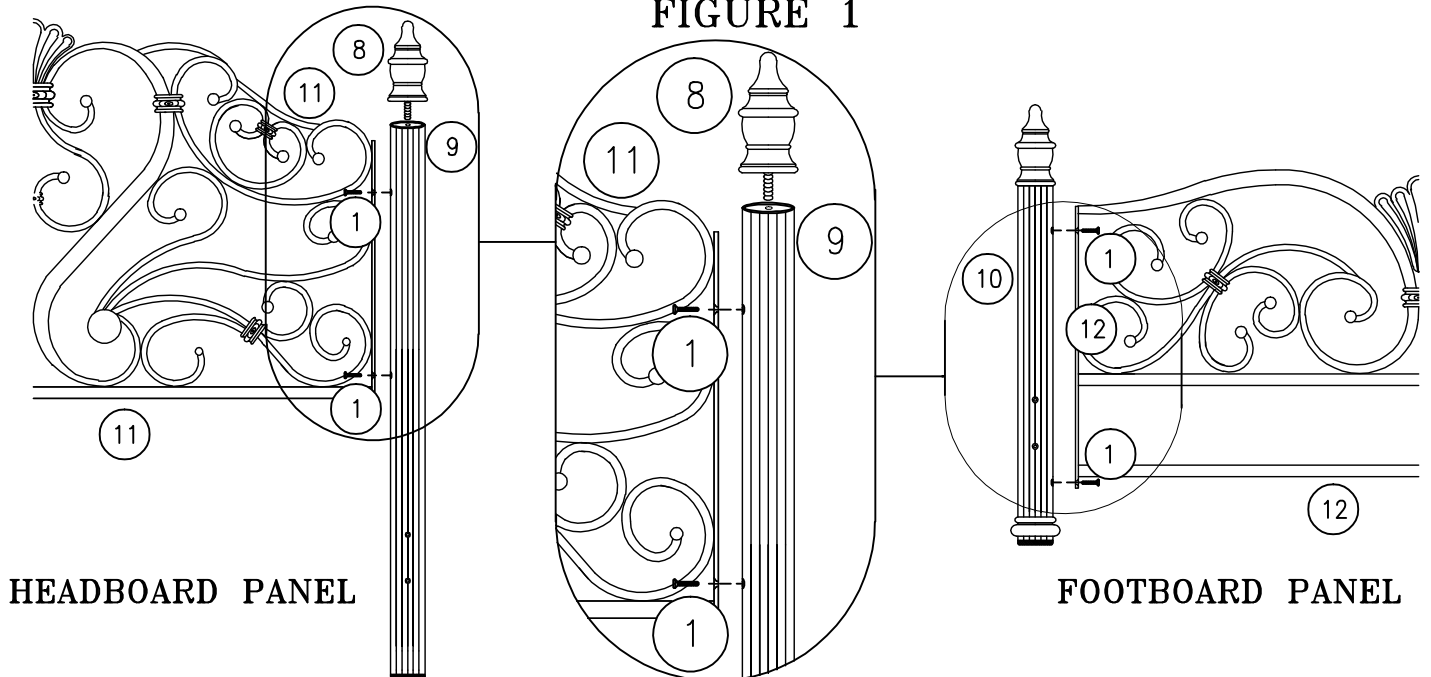

## STEP 3– Assemble side Rails to Headboard and Footboard Panel.

- Place headboard panel and side rail (13) in desired location in room. SEE FIGURE 2
- Insert lock washer (4) and flat metal washer (3) over screw (2).
- Insert screw (2) with washers through holes on side rail (13) and into threaded holes on headboard post (9).
- Tighten screw (2) securely using Allen wrench (6). SEE FIGURE 2
- Repeat same step with Footboard panel.

**FIGURE 2**

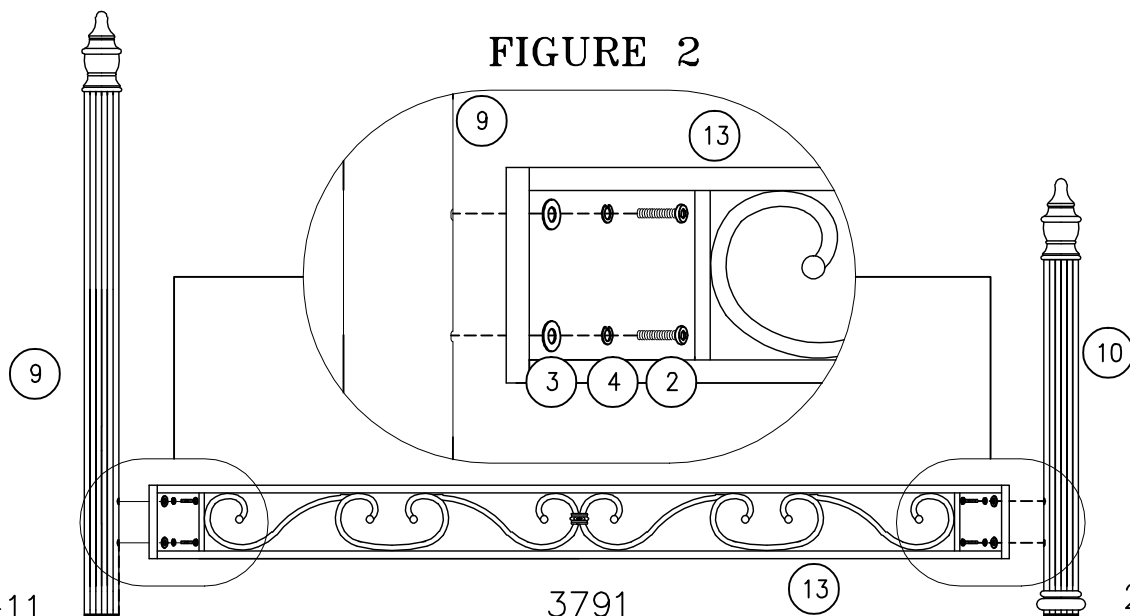

# Instruction Sheet

## STEP 4– Assemble Cross Rails to Side Rails.

- Align holes on cross rails (14) with holes on cleat of side rail (13). SEE FIGURE 3
- Place flat metal washer (3) over screw (2).
- Insert screw (2) with washer through holes on cross rail (14) and into holes on side rail (13) cleat holes. SEE FIGURE 3
- Secure each screw (2) with flat metal washer (3) and hex nut (5).
- Tighten all screws (2) securely using Allen wrench (6) and open wrench (7).



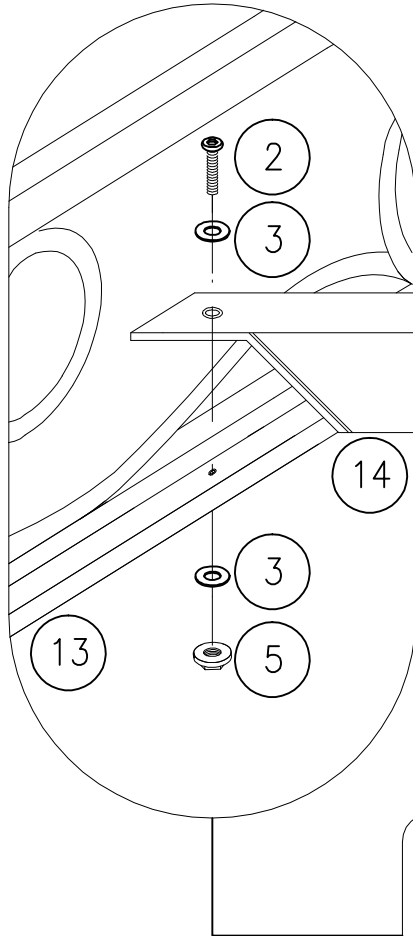


FIGURE 3

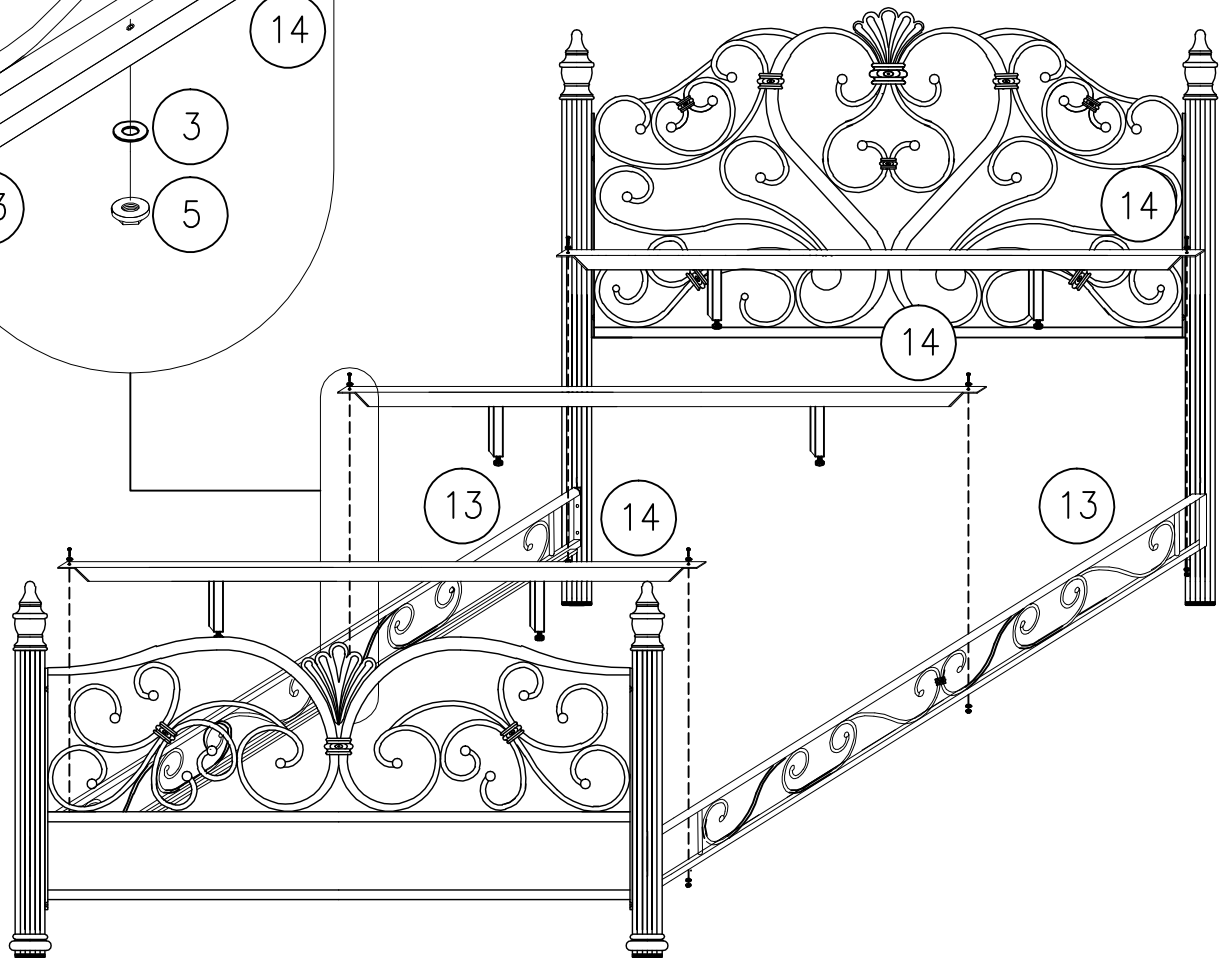

# Instruction Sheet

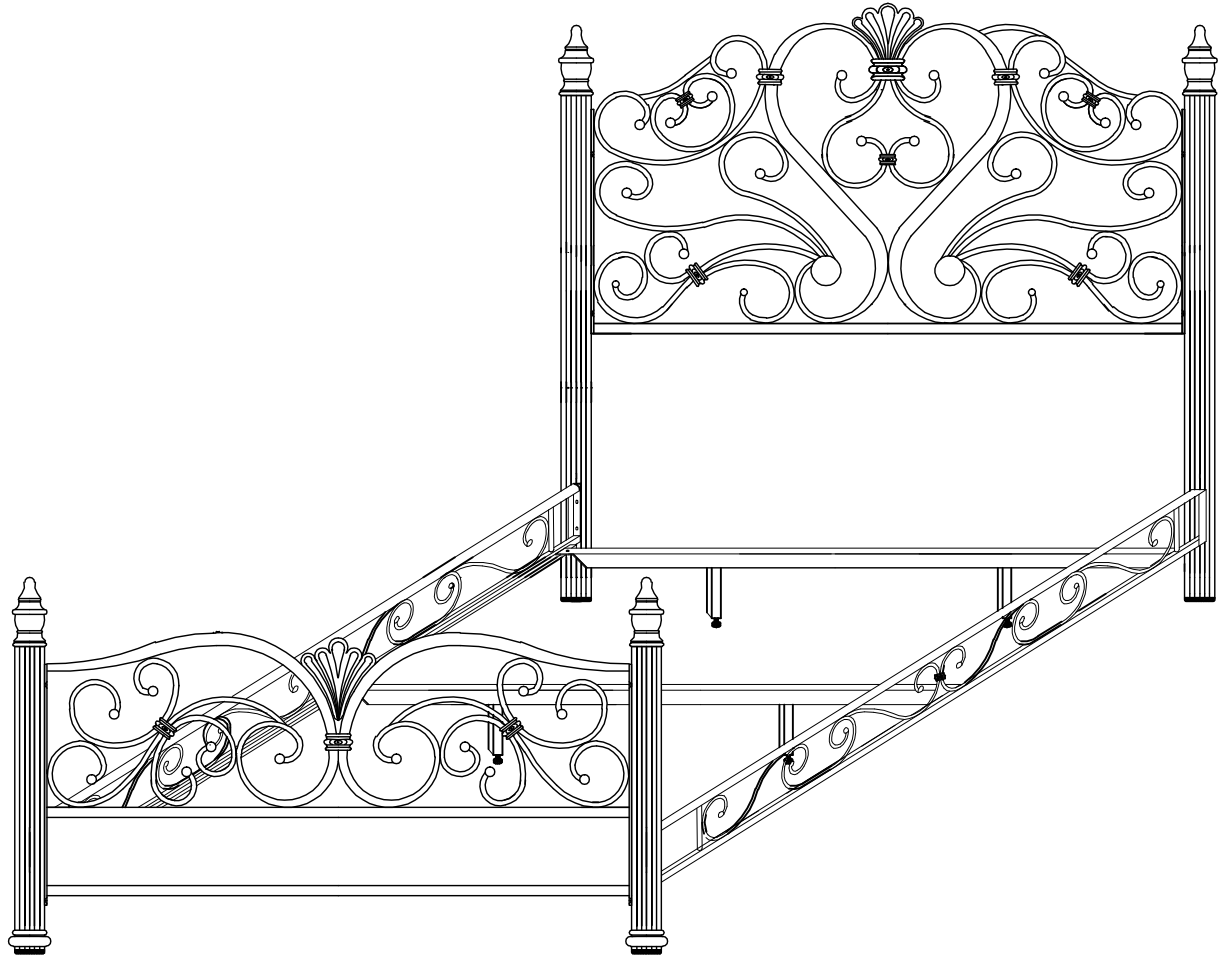

**BED FULLY ASSEMBLED**