

ZLINE

ATTAINABLE LUXURY[®]



Installation Manual

MICROWAVE DRAWER TRIM KIT

www.zlinekitchen.com



ZLINE Kitchen and Bath provides Attainable Luxury, where the kitchen and bath of your dreams is never out of reach. Through our unique designs and unparalleled quality, we're dedicated to providing you an elevated experience in the heart of your home. With an endless selection of features and finishes, our inspiration is your reality.

ZLINE
ATTAINABLE LUXURY®



ZLINE is fueled by a passion for innovation; A relentless pursuit of bringing the highest end luxury designs and professional features into everyone's homes. Because we continually strive to improve our products, we may change specifications and designs without prior notice.

⚠ WARNING: This product can expose you to chemicals including nickel, which is known to the State of California to cause cancer. For more information, go to www.P65Warnings.ca.gov.

IMPORTANT SAFETY INFORMATION

NOTE: This trim kit is available for purchase as a separate accessory for ZLINE's 24" microwave drawer in stainless steel only. The trim kit is only available for the 24" unit; it is not available in black stainless.



- Before installation and operation, please read and follow these important instructions for the safety of your home and the people living in it.
- Disconnect your microwave from power while installing this trim kit.
- Use care when handling the outer trim, support beams and brackets, as sharp edges may lead to injury. Use of gloves during installation is recommended.
- Save this installation manual for local electrical inspector's use and for your own future reference.
- Do not install this trim kit if it has missing or broken parts. If the kit arrives damaged, contact ZLINE Customer Service at 1-614-777-5004 for help.
- When cleaning the stainless steel outer trim after installation, use only mild, nonabrasive soaps or kitchen-safe cleaners applied with a sponge or soft cloth. Do not clean with metal scouring pads.

BEFORE INSTALLATION

TOOLS NEEDED:

- Phillips-head screwdriver
- Marker
- Drill

PARTS INCLUDED:

PART	QUANTITY	IMAGE
Outer trim (1)	1	
Support beam (2)	2	
Front bracket (1)	1	
Rear bracket (1)	1	
Buckle seat (4)	4	
Buckle (4)	4	
Finishing washers (4)	4	
#1 Screw (4)	4	
#2 Screw (16)	16	
#3 Screw (2)	2	

INSTALLATION

1. Lay the support beams flat on the bottom of the cabinet cutout with the open sides facing each other (see Figure 1).

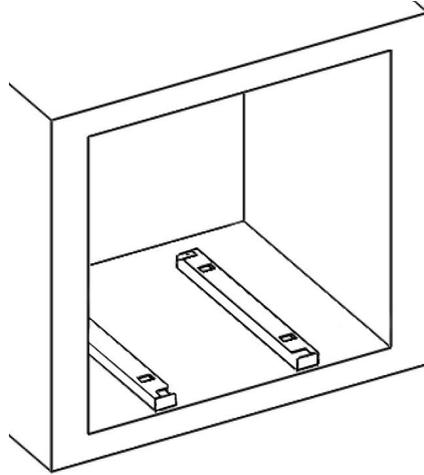


Figure 1

To gauge proper width, temporarily place the rear and front brackets onto the support beams so the rear bracket lips slide into rear holes on top of the beams and the front screw holes match to the front of the beams (see Figure 2).



Figure 2

Once aligned, secure the beams by fastening the four #1 screws with washers into the cabinet base below (see Figure 3).

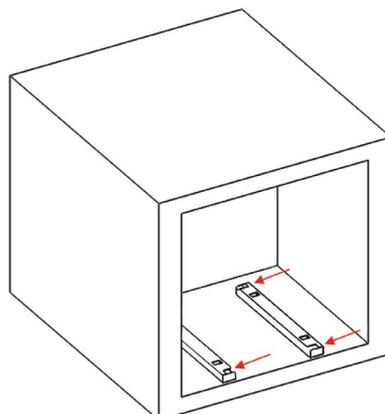


Figure 3

INSTALLATION

2. Remove the screws from the front bottom of your microwave. Using two of those screws, secure the front bracket to the bottom of the microwave, ensuring the lip of the bracket is extending down and facing you. Next, remove the screws from the back bottom of the microwave and fasten the rear bracket, ensuring the two small lips are extended down and facing back (see Figures 4 and 5).

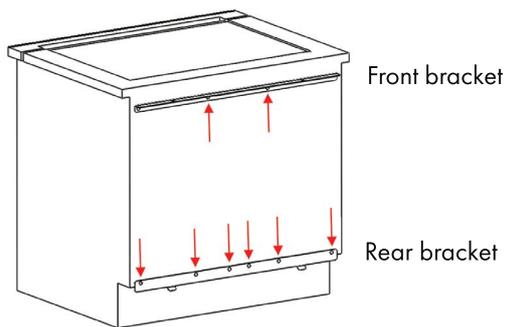


Figure 4

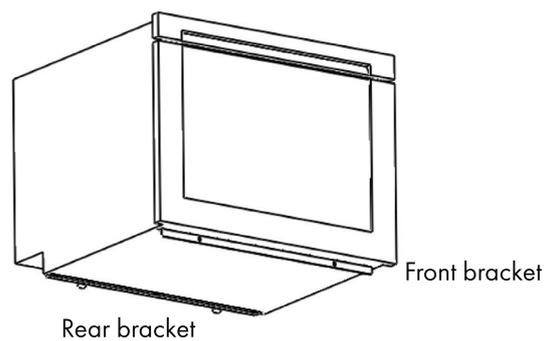


Figure 5

3. Lay the outer trim face down and, using eight of the #2 screws, install the four buckles on the corresponding mounting holes around the trim kit (see Figure 6). Make sure to use the same series of mounting holes on each corner, depending on your cabinet cutout (see Figure 7).

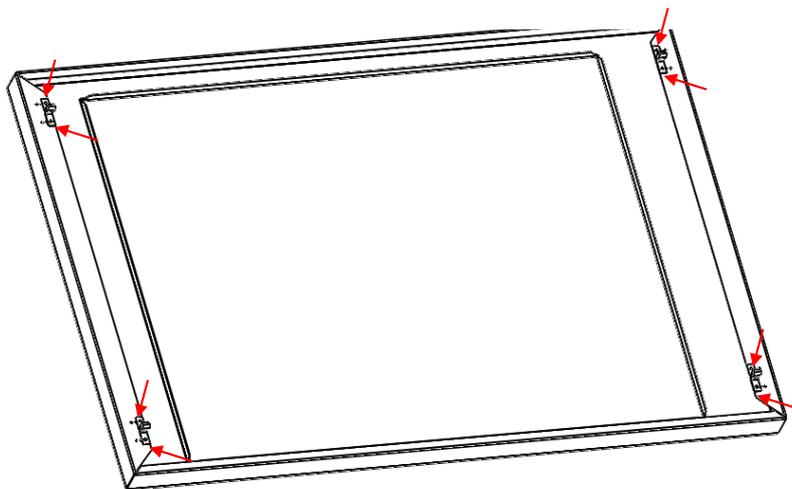


Figure 6

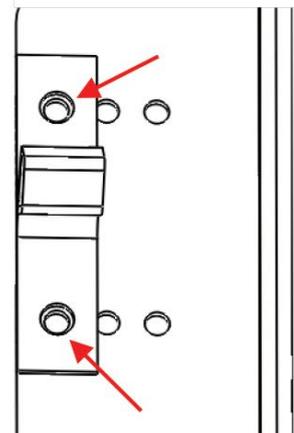


Figure 7

INSTALLATION

- Next, slide the outer trim into the cabinet cutout and use a marker or pencil to mark where the buckles line up. Then, remove the trim and secure the four buckle seats into the cabinet using the other eight #2 screws (see Figure 8). Make sure the clamp of the bucket seats are facing toward you (see Figure 9).

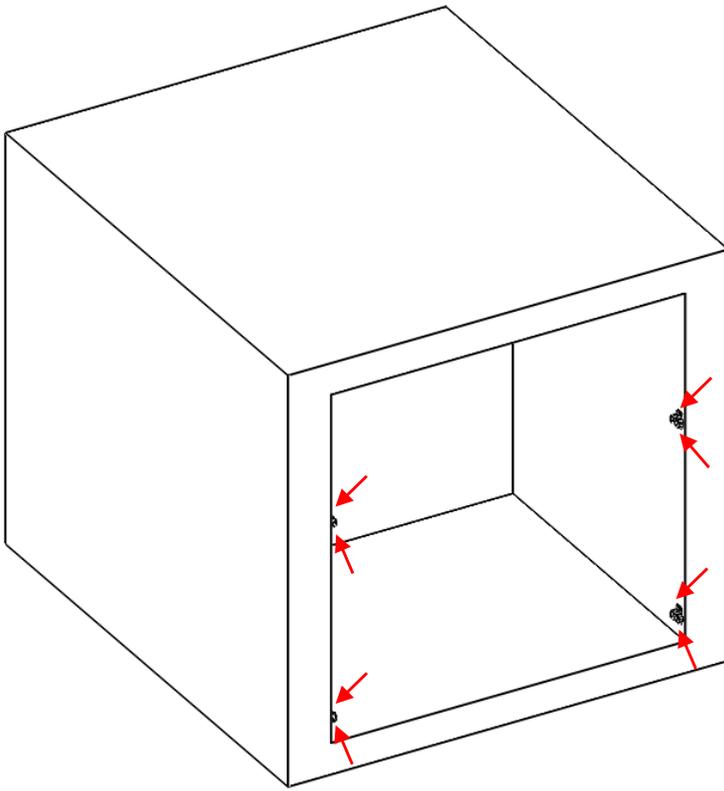


Figure 8




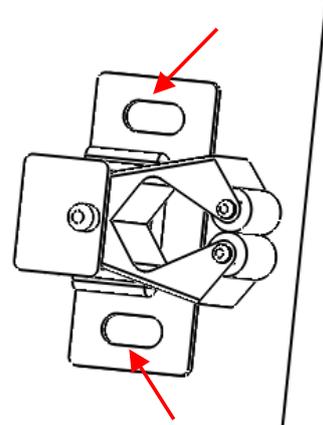


Figure 9

INSTALLATION

5. Using two people, lift the microwave and push it into the cabinet until the two small lips in the rear bracket slide into both holes in the rear of the support beams fastened in Step 1 to the bottom of the cutout (see Figure 10).
6. Use the two #3 screws to fasten the front bracket to the front of both support beams (see Figure 11). The microwave should now be firmly secured inside the cabinet cutout (see Figure 12).

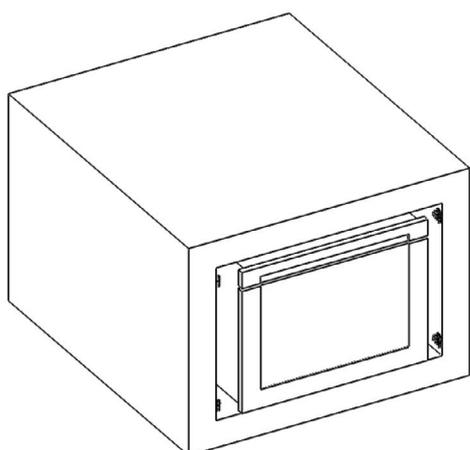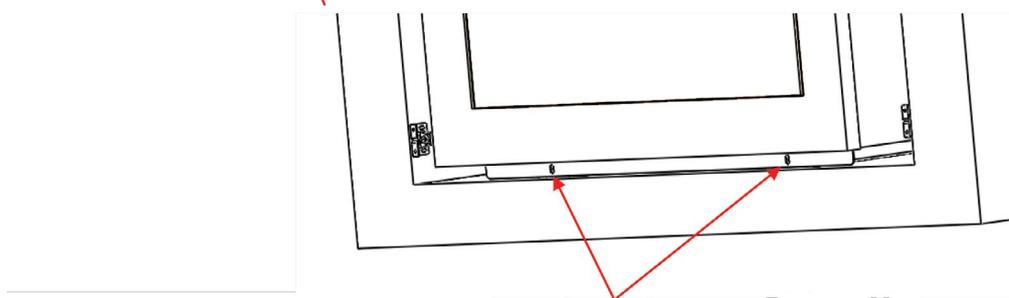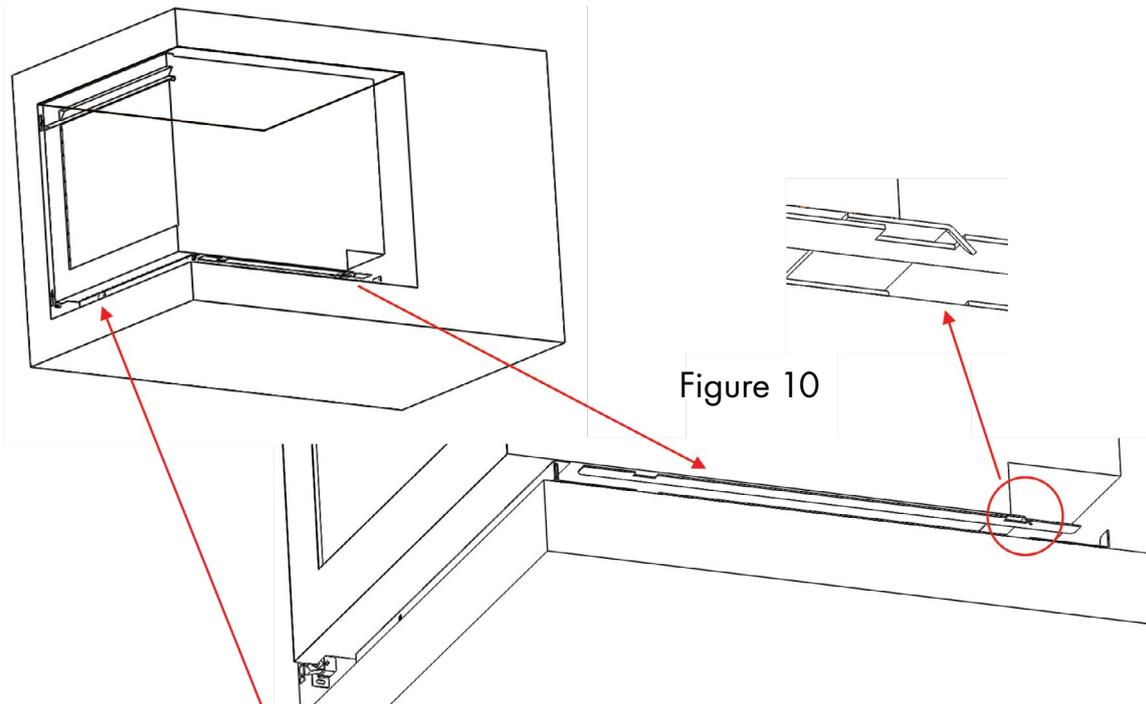

INSTALLATION

7. Insert the outer trim kit into the cutout (see Figure 13). Clip each buckle onto its corresponding buckle seat to complete the trim kit installation (see Figure 14).

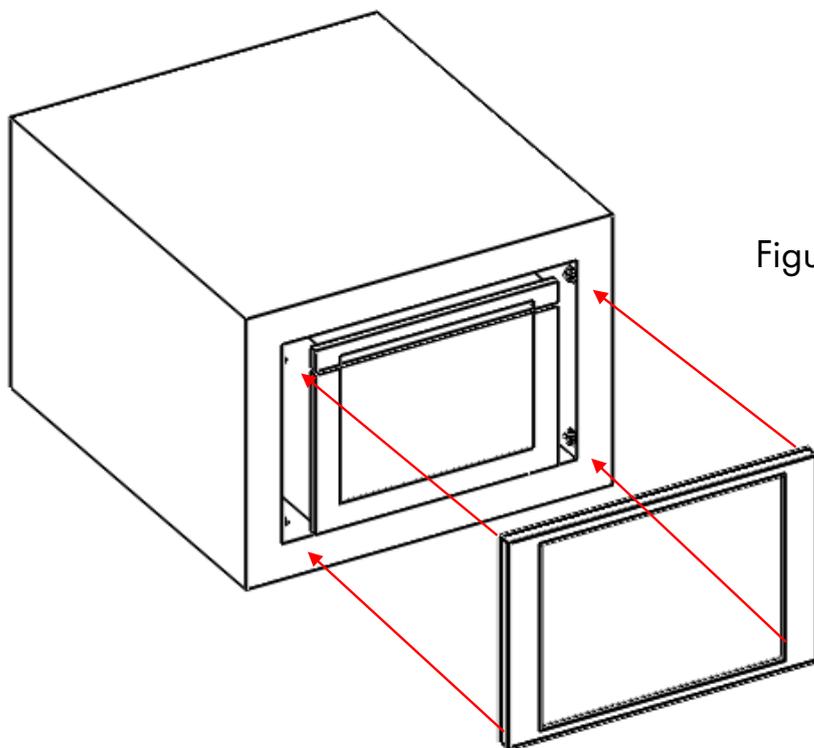


Figure 13

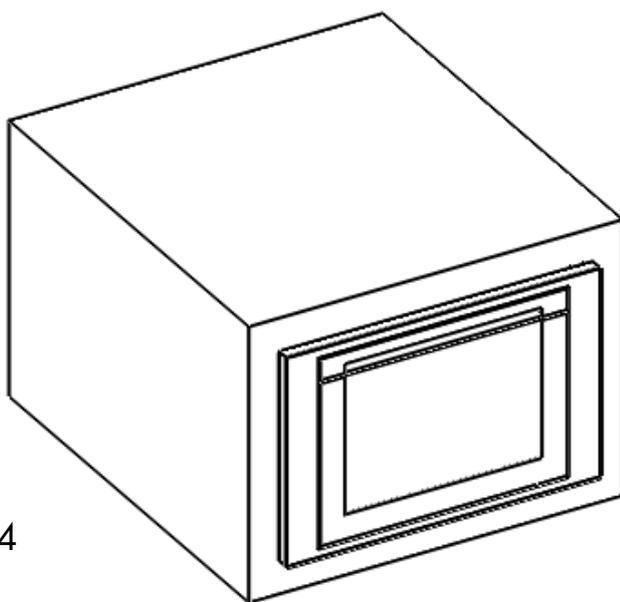


Figure 14

2.0.0

www.zlinekitchen.com

1-614-777-5004

contact@zlinekitchen.com

ZLINE
ATTAINABLE LUXURY®