


ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE

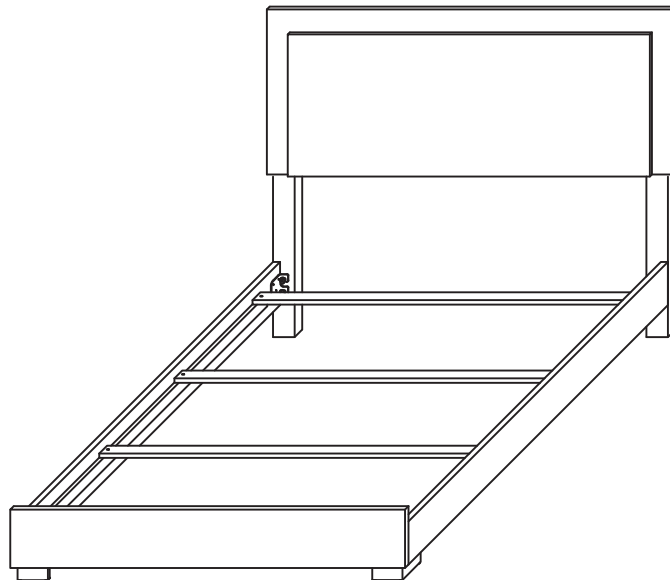

Fine Furniture for every stage of life

222831T(B1&B2)
Twin Bed

ITEM: 222831T(B1&B2)



ASSEMBLY INSTRUCTIONS


ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

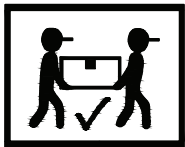


ASSEMBLY TIME

30 MINUTES

PARTS IDENTIFICATION

B1 (BOX 1)

A HEADBOARD PANEL



1PC

B LEFT HEADBOARD
LEG (WITH "L" LABEL)



1PC

C RIGHT HEADBOARD
LEG (WITH "R" LABEL)



1PC

D FOOTBOARD
PANEL



1PC

E LEG



2PCS

F BED SLAT



4PCS

H WOOD CLEAT



2PCS

B2 (BOX 2)

I BED RAIL



2PCS

ITEM: 222831T(B1&B2)



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.














WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

HARDWARE IDENTIFICATION

Z-B1 (BOX 1) - HARDWARE PACK IS LOCATED IN 222831T (B1)

| | | | | | | | |
|---|---|---|-------|----|--|---|-------|
| 1 | BOLT 1 (M8 x 16mm - RBW) |  | 8 PCS | 7 | SMALL ALLEN WRENCH (M4 x 65MM - BLK) |  | 1 PC |
| 2 | BOLT 2 (M8 x 35mm - RBW) |  | 6 PCS | 8 | BIG ALLEN WRENCH (M5 x 65MM - BLK) |  | 1 PC |
| 3 | BOLT 3 (M6 x 35mm - RBW) |  | 8 PCS | 9 | ADAPTER PLUG |  | 1 PC |
| 4 | BIG LOCK WASHER (5/16" x 14ø - RBW) |  | 6 PCS | 10 | SMALL LOCK WASHER (1/4" x 12ø - RBW) |  | 8 PCS |
| 5 | BIG FLAT WASHER (5/16" x 22ø - RBW) |  | 6 PCS | 11 | SMALL FLAT WASHER (1/4" x 19ø - RBW) |  | 8 PCS |
| 6 | FLAT HEAD SCREW (M4 x 32MM - RBW) |  | 8 PCS | | | | |

NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provided this item.

ITEM: 222831T(B1&B2)




ASSEMBLY INSTRUCTIONS

STEP 1

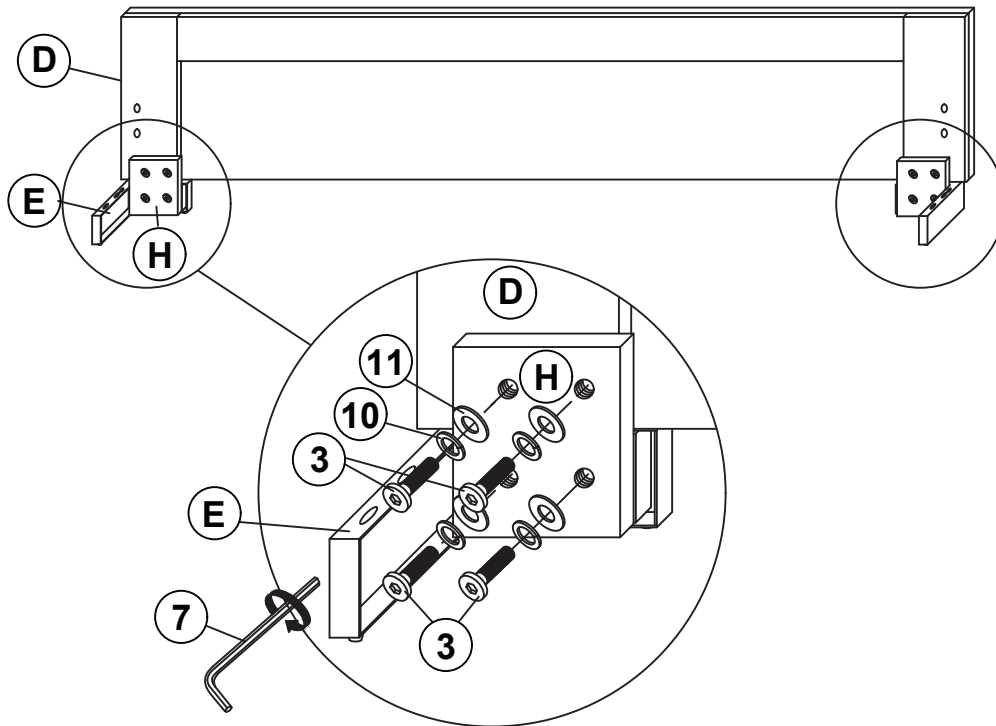

STEP 2

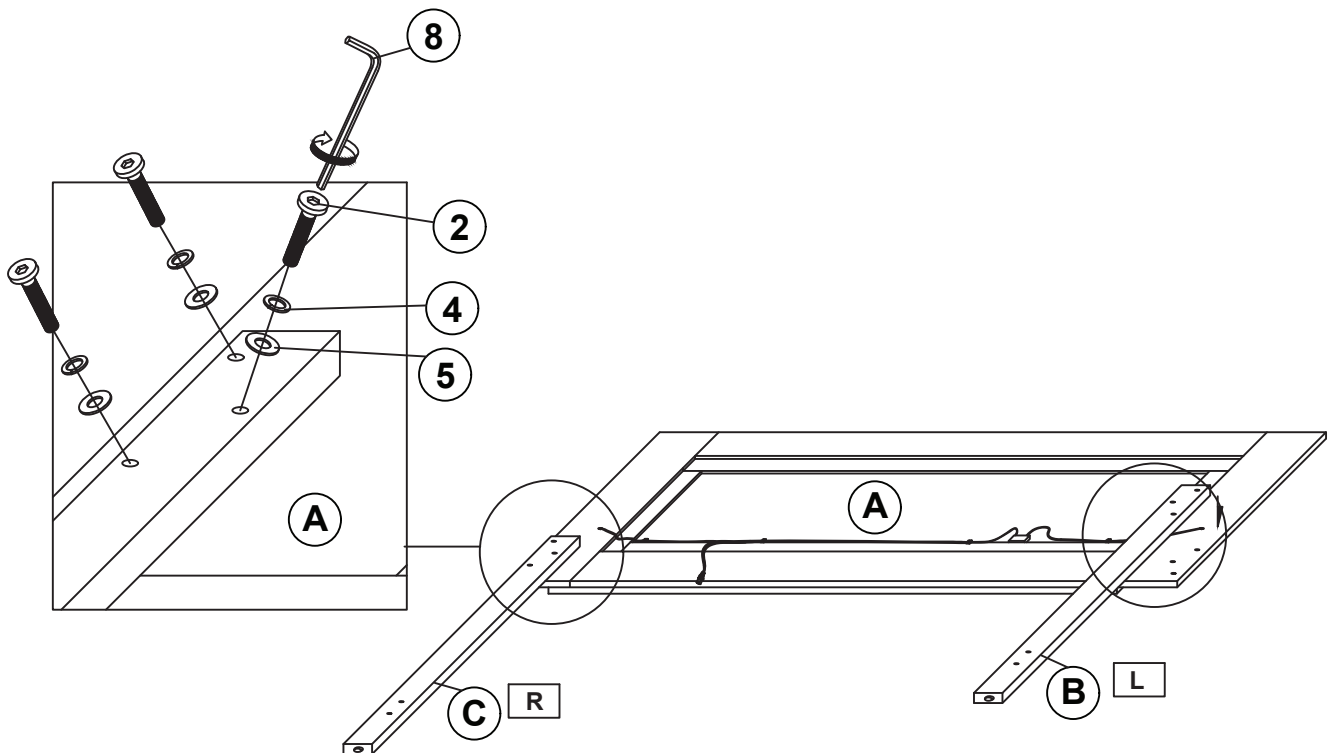


**** BACK VIEW**

ITEM: 222831T(B1&B2)




ASSEMBLY INSTRUCTIONS

STEP 3

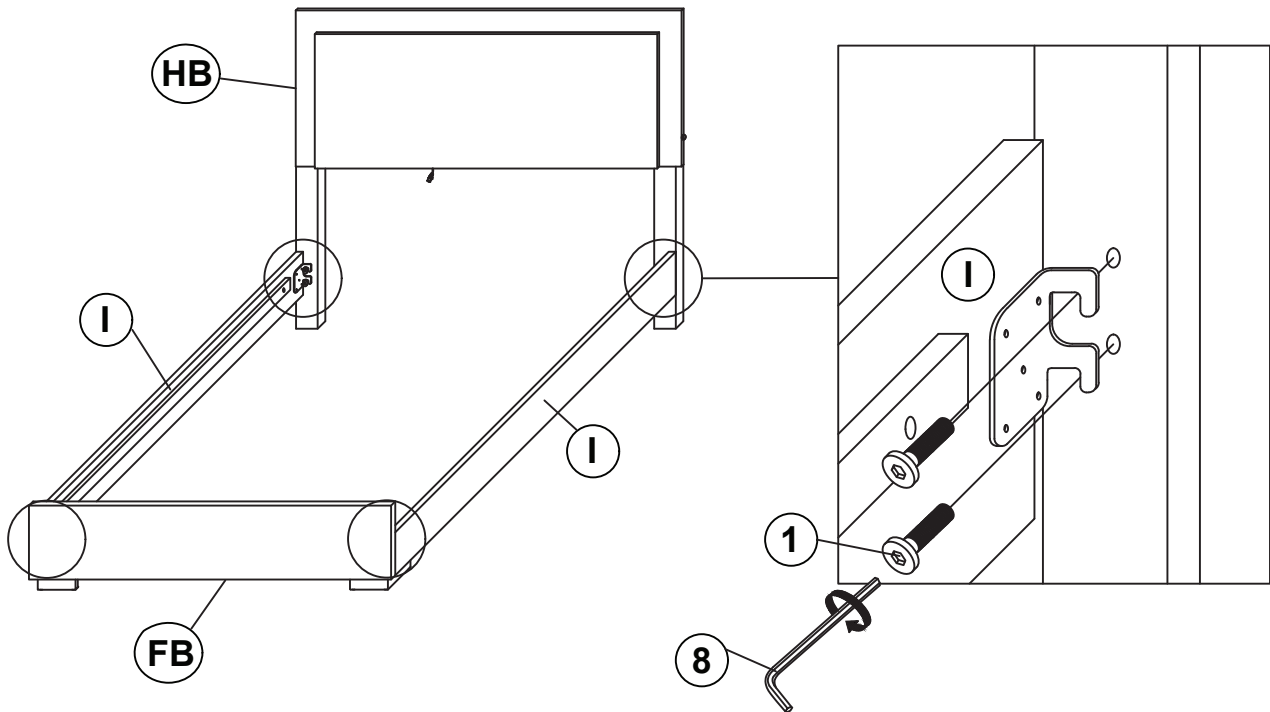

STEP 4


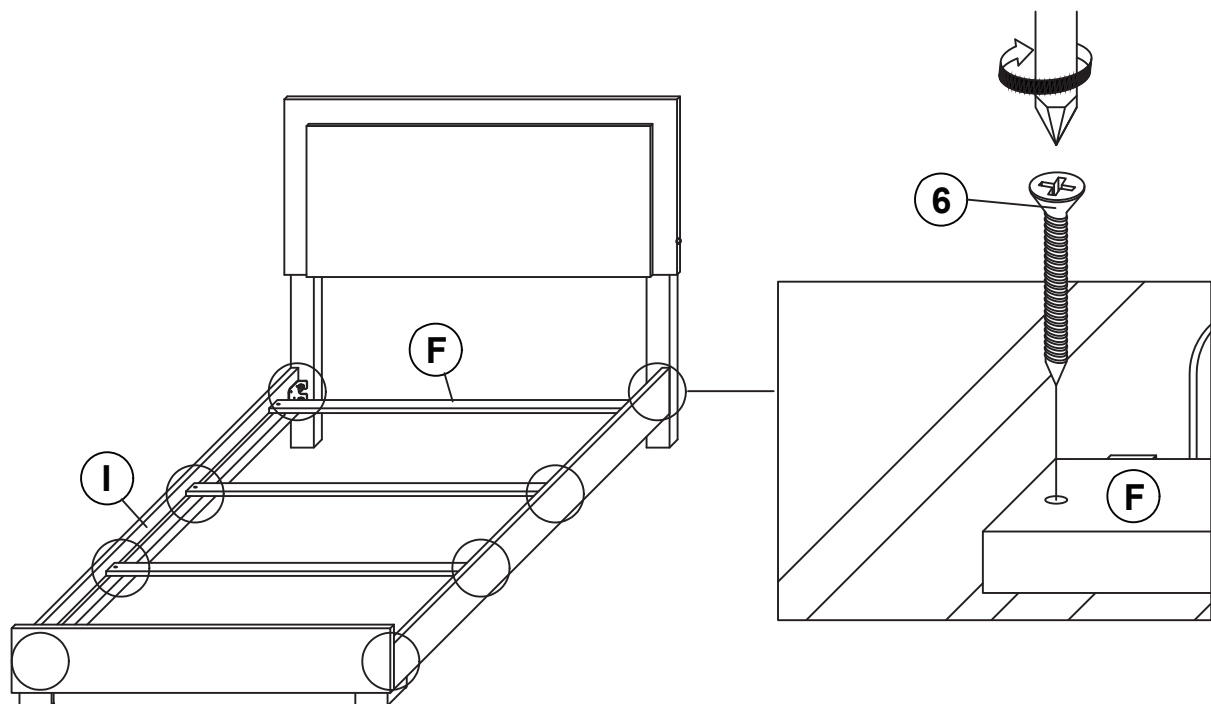


ITEM: **222831T(B1&B2)**

ASSEMBLY INSTRUCTIONS

STEP 5


COMPLETE

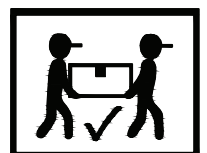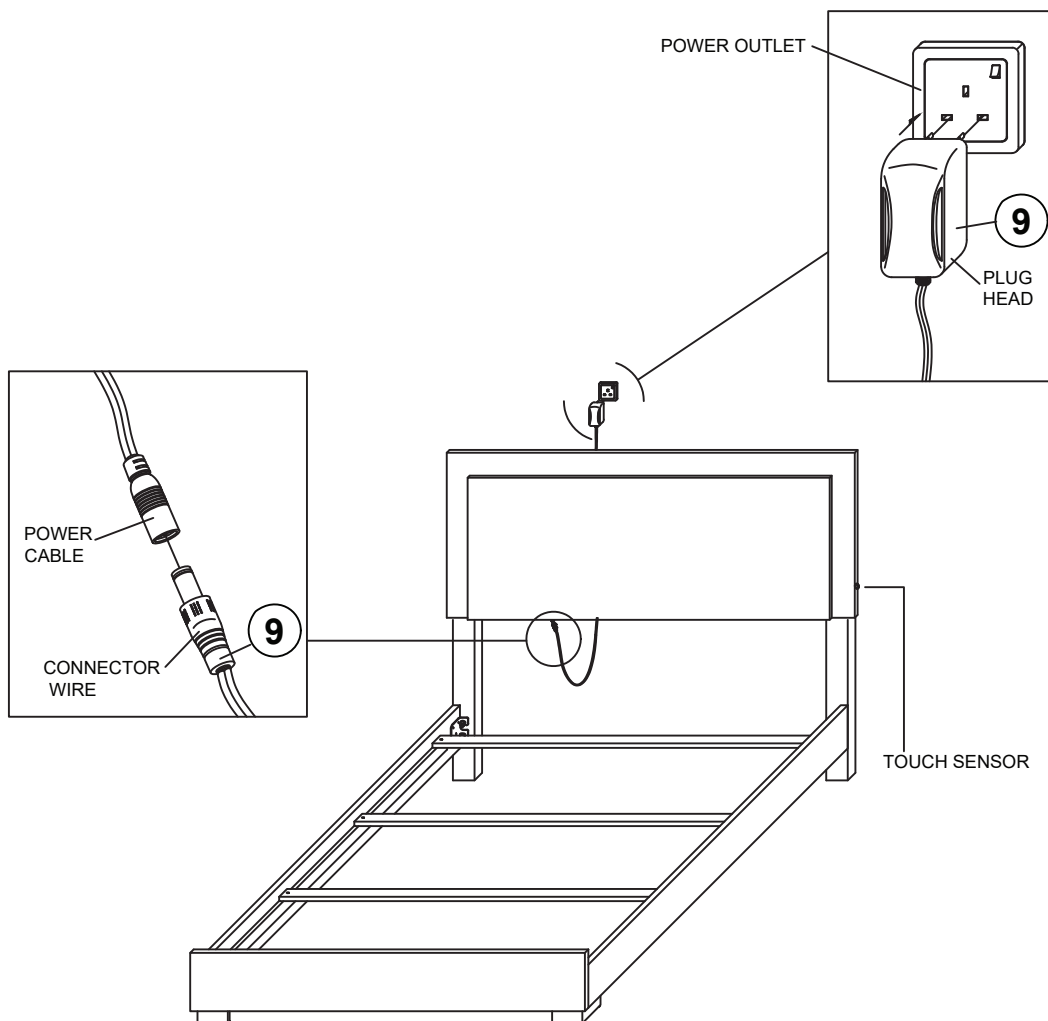

ITEM: **222831T(B1&B2)**



Inner Size : 39.50"W X 75.00"D

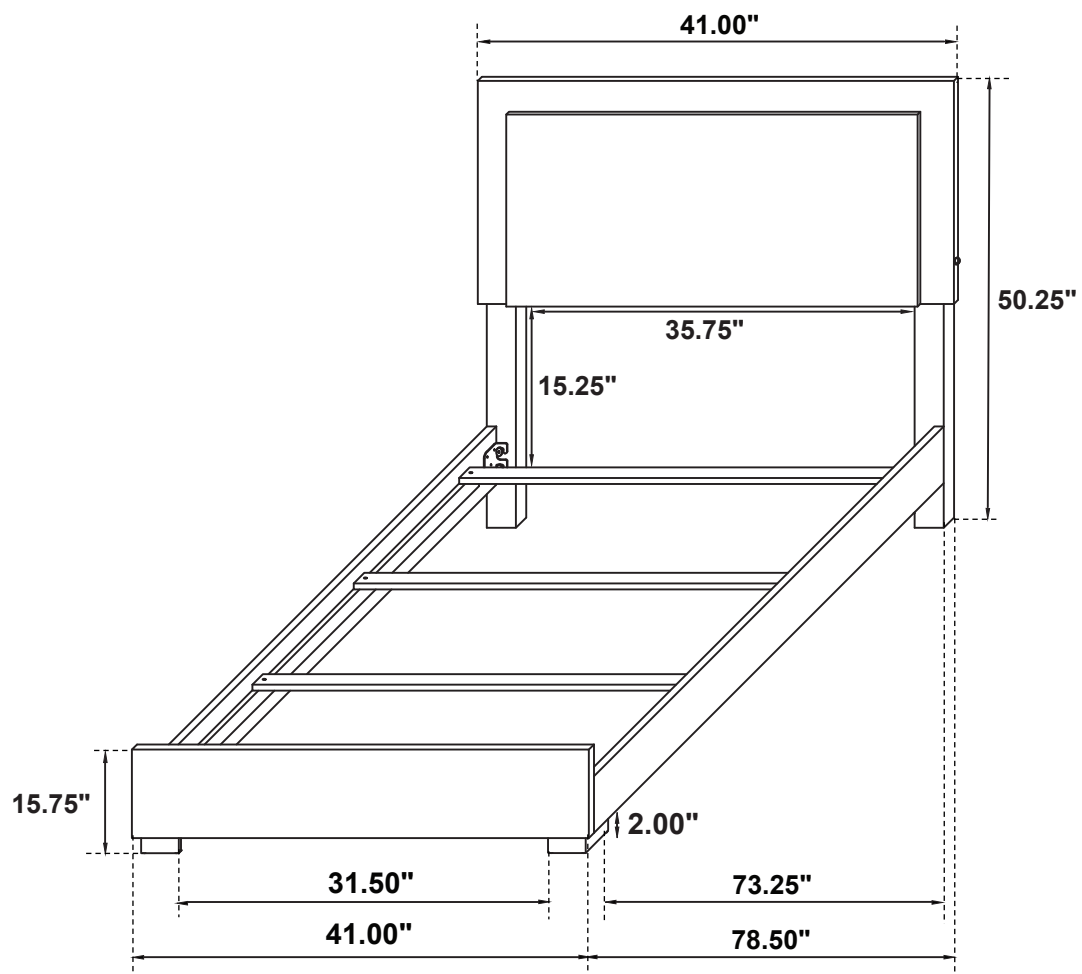

Note : Dimension tolerance $\pm 5\%$