

ASSEMBLY INSTRUCTIONS

CROWN MARK (CRWN)

MODEL: B9100-1 SAWYER DRESSER


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Identify and count all parts and compare with hardware list as below:

STEP 1


(BOX 1) BOX OF DRESSER		
ITEM DRAWING	DESCRIPTION	QTY
A	DRESSER	1
B	BOTTOM LEG	4
C	SUPPORT LEG	1

(BOX 1) BOX OF DRESSER (HARDWARE LIST)			
ITEM DRAWING	DESCRIPTION	DIMENSION	QTY
D	JCBB (M8) WITH WASHER	8 x P1.0 x 50MM	4
E	ALLEN KEY M5	5 x 35 x 55MM	1


Step 1 : Attach and tighten the DRESSER bottom leg (B) to the bottom frame and insert JCBB (D) With Washer (E) as shown.

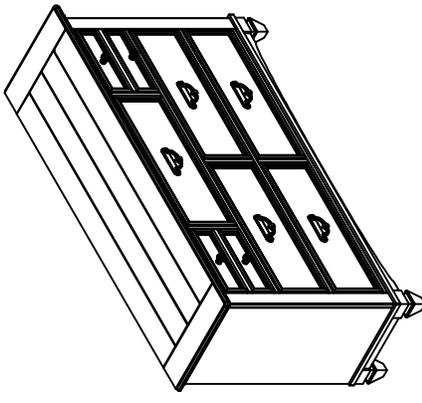


COMPLETED ASSEMBLY

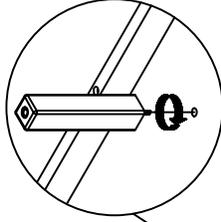


B



C

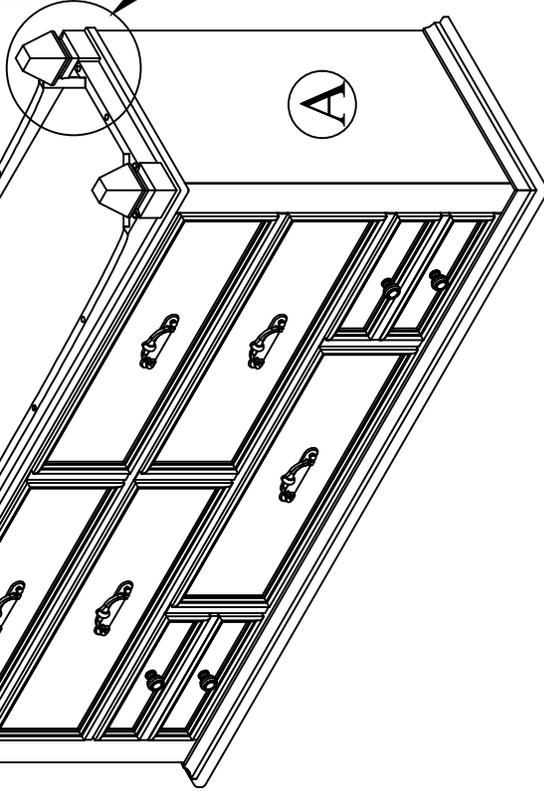

A

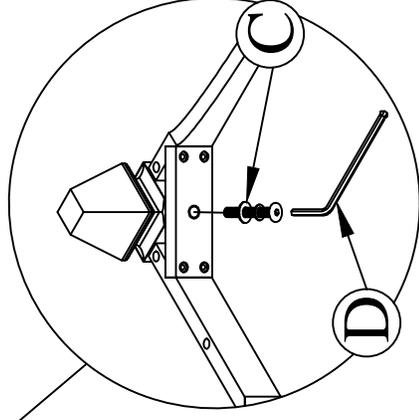

D

THE ANTI TIPPING HARDWARE IS LOCATED IN THE RIGHT SIDE FRONT DRAWER OF DRESSER

THE HARDWARE IS LOCATED IN THE PACKING ITEMS

MADE IN MALAYSIA

NOTE: MUST TIGHTEN SCREW PERIODICALLY WITH USE. SCREWS WILL BECOME LOOSE. CHECK TIGHT OF ALL SCREWS EVERY 6-8 WEEKS. CLEANING INSTRUCTION

After assembly, clean & polish the complete parts if necessary with soft cloth and industrial recognized furniture polish.