
USER GUIDE & SERVICE MANUAL

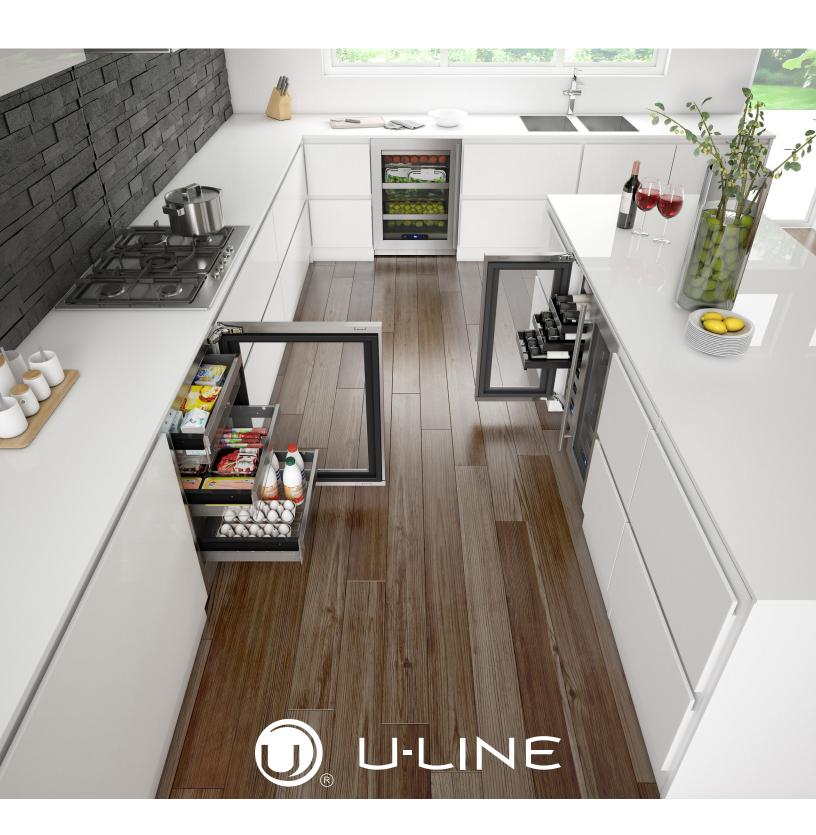

Model: URCC115-IS81A

Click on any section below to jump directly there

Table of Contents

Installation

Integrated Panel Dimensions
Integrated Panel Installation
Grille Installation



WELCOME TO U-LINE

Congratulations on your U-Line purchase! Our products are focused on functionality, style, and inspired innovations — paying close attention to even the smallest details. Applications include residential, outdoor, ADA height compliant, marine, and commercial. Product categories include Beverage Centers, Wine Refrigerators, Ice Machines, Refrigerators, Freezers, and Dispensers. Our advanced refrigeration systems, large and flexible capacities, and clean integrated look are what makes our products Built-In to Stand Out®. Since 2014, U-Line has been part of the Middleby family of brands.

U-Line — RIGHT PRODUCT, RIGHT PLACE, RIGHT TEMPERATURE.®

PRODUCT INFORMATION

Looking for additional information on your product? User Guides, Spec Sheets, CAD Drawings, and Product Warranty information are available digitally on u-line.com.

PROPERTY DAMAGE / INJURY CONCERNS

In the unlikely event property damage or personal injury is suspected related to a U-Line product, please take the following steps:

- 1. U-Line Customer Care must be contacted immediately at +1.414.354.0300.
- 2. Service or repairs performed on the unit without prior written approval from U-Line is not permitted. If the unit has been altered or repaired in the field without prior written approval from U-Line, claims will not be eligible.

GENERAL INQUIRIES

U-Line Corporation 8900 N. 55th Street Milwaukee, Wisconsin 53223 USA Monday - Friday 8:00 am to 4:30 pm CST

T: +1.414.354.0300 Email: sales@u-line.com

u-line.com

SERVICE & PARTS ASSISTANCE

Monday - Friday 8:00 am to 4:30 pm CST

T: +1.414.354.0300

Service Email: onlineservice@u-line.com Parts Email: onlineparts@u-line.com

CONNECT WITH US AT MIDDLEBY REFRIGERATION

Introduction 3

Integrated Panel Dimensions

INTEGRATED PANEL

NOTICE

Due to differences in surrounding cabinetry the panel may not perfectly align with door. The procedure below is designed to provide a finished integrated panel that seamlessly integrates with surrounding cabinetry.

Panel Preparation

A full integrated door panel completely covers the door frame and provides a built-in appearance.

NOTICE


The door panel must not weigh more than 20 lbs (10 kg).

It is important to ensure that all drilled holes are drilled to the correct depth in order to avoid splits in the wood when hardware is installed.


- 1. Cut the panels to the dimensions listed in the diagram below.
- 2. Remove $2'' \times 3-3/4'' \times 1/4''$ material from the inside surface to provide for hinge clearance at the top and the bottom.
- 3. Optional: Stain or finish panel to desired stain or color. Be sure to closely follow the instructions provided by the manufacturer.
- 4. Optional: Install handles and hardware.

NOTICE

When applying an integrated panel to a unit, ensure that both sides are finished in order to prevent warping.

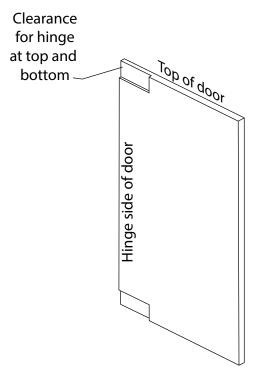



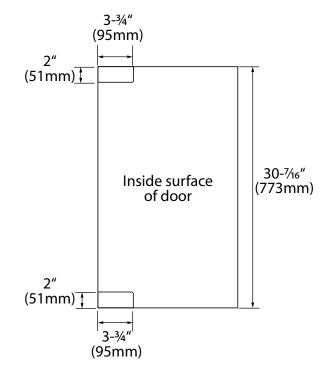

Integrated Panel Installation

- 1. Fully open door.
- 2. Starting at corner, pull gasket away from door.
- 3. Continue to pull gasket free from gasket channel.




- 4. Upon removal, lay gasket down on a flat surface.
- 5. Align top of panel with top edge of door. Center panel on door.

NOTICE

Due to differences in floor construction or surrounding cabinetry, the panel may not sit flush with the top of the door.


- 6. Secure integrated panel to door using clamps. A robust tape may also be used. U-Line recommends the use of bar clamps to secure the panel to the door. If using tape, be certain the tape will not damage panel finish upon removal.
- 7. Using a 7/64"
 (3 mm) drill bit, drill
 6 pilot holes into
 the wood panel 1/2"
 (12 mm) deep using
 the holes in the door
 frame as a guide.

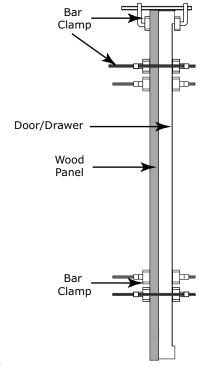

NOTICE

It is important to ensure that all drilled holes are drilled to the correct depth in order to avoid splits in the wood when hardwood is installed.

- 8. Locate 6 of the #6x 1-1/2" (38 mm) screws provided with your unit.
- 9. Using a Phillips screwdriver, place one screw into each of the 6 pilot holes and screw down. Do not overtighten screws.
- 10. Ensure the screws sit flush against the bottom of the channel.

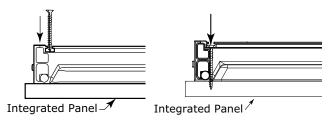

11. Remove clamps from door.

NOTICE

If panel requires additional adjustment after removing clamps, slightly loosen each screw and adjust panel as necessary. Tighten screws upon completion.

12. Starting at the corners, re-install the gasket into the gasket channel in the frame. Make sure the gasket is fully seated.

Grille Installation

REMOVING AND INSTALLING GRILLE



Disconnect electric power to the unit before removing the grille.

When using the unit, the grille must be installed.




Do NOT touch the condenser fins. The condenser fins are SHARP and can be easily damaged.

Removing the grille

- 1. Disconnect power to the unit.
- 2. Remove the two screws.
- 3. Remove grille from unit.

Installing the grille

- 1. Align cabinet and grille holes and secure, but do not over tighten grille screws.
- 2. Reconnect power to the unit.

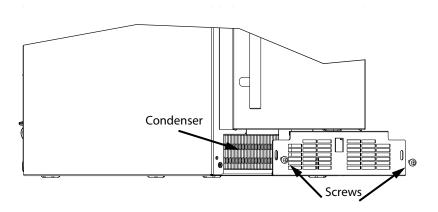

Grille Installation 6