

WOLF 30''(762) AND 36''(914) CONVECTION MICROWAVE TRIM KIT INSTALLATION INSTRUCTIONS (808663)

Wolf Microwave Trim Kits for MWC Model:

MWCTRIM 30/ SST (808745)
 MWCTRIM 30/ BK (808746)
 MWCTRIM 30/ PLM (808747)
 MWCTRIM 36/ SST (808748)
 MWCTRIM 36/ BK (808749)
 MWCTRIM 36/ PLM (808750)

The Wolf Convection Microwave Oven MWC 24 can be installed above Wolf Single Ovens; SO30F/S, SO30U/B, SO30U/P, SO30U/S, SO36U/B, SO36U/P or SO36U/s.


The cabinet or wall rough in dimension must be within the following specification (See fig. A & B on page 2):

	30''(762)	36''(914)
Height:	18 11/16''(475)	18 11/16''(475)
Width:	27 1/2''(699)	33 3/8''(854)
Depth:	20 1/8''(511)	20 1/8''(511)


NOTE: Please read these instructions thoroughly before beginning installation.

Parts Included with Microwave Trim Kit
 (See Fig. Microwave Kit Contents):


QTY	PART NO.	DESCRIPTION
1	806052	Top Duct Work Assembly
1	806053	Bottom Duct Work Assembly
1	805953-S	30''MWC Trim
	806046-B	30''MWC Trim
	806047-P	30''MWC Trim
1	805954-S	36''MWC Trim
	806048-B	36''MWC Trim
	806049-P	36''MWC Trim
2	805949	30''Brackets, Glass Assembly
	805950	36''Brackets, Glass Assembly
6	802684	Screws, Mounting Brackets (Cabinet)
6	805187	Screws, Mounting Brackets (Trim)
2	808566-RT	Mounting Brackets
	808567-LT	Mounting Brackets

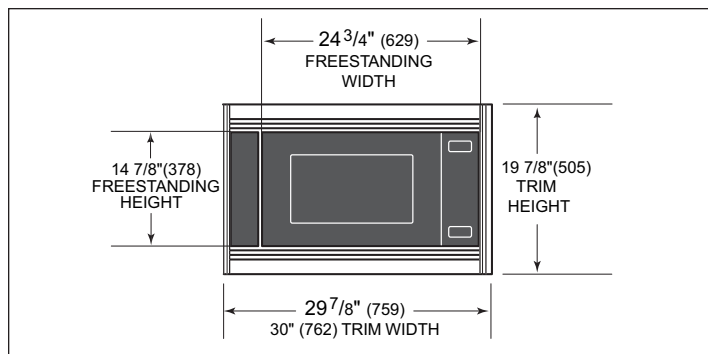


Free Standing and 30" Trim Overall Dimensions

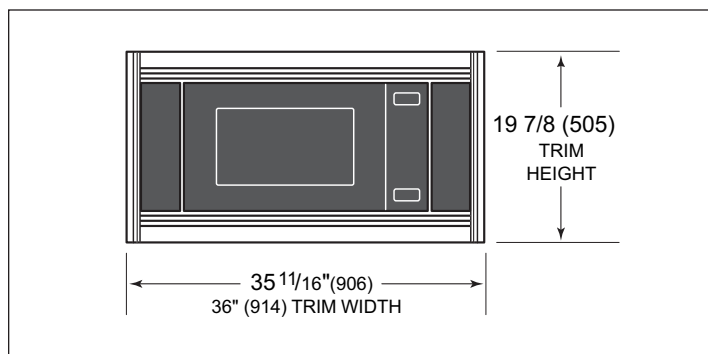

36" Trim Overall Dimensions

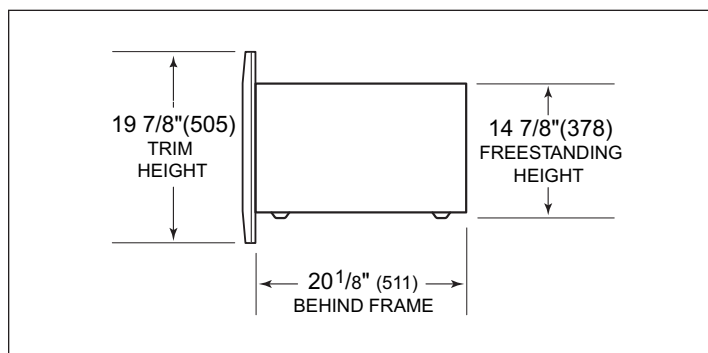

30" and 36" Side Trim Dimensions

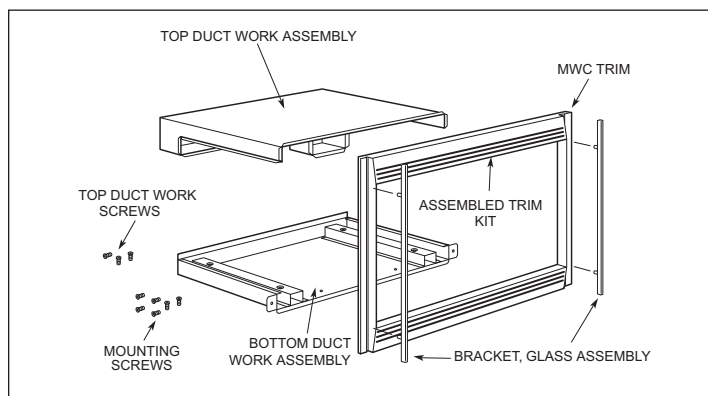

Microwave Trim Kit Contents




WOLF 30''(762) AND 36''(914) CONVECTION MICROWAVE TRIM KIT INSTALLATION INSTRUCTIONS (808663)

INSTALLATION SPECIFICATIONS

Convection Microwave with 30" (762) Trim

Installation with single oven and warming drawer

Fig. A

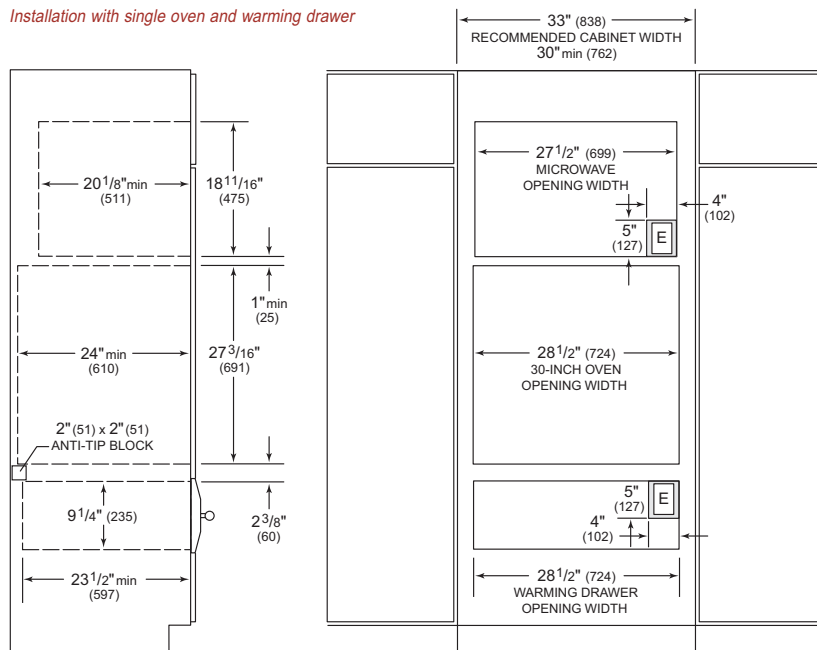

NOTE: Refer to the built-in 30" (762) single oven specifications for electrical location.


NOTE: At installation, wood cleats must be added to the opening for the microwave trim.

INSTALLATION SPECIFICATIONS

Convection Microwave with 36" (914) Trim

Installation with single oven and warming drawer

Fig. B

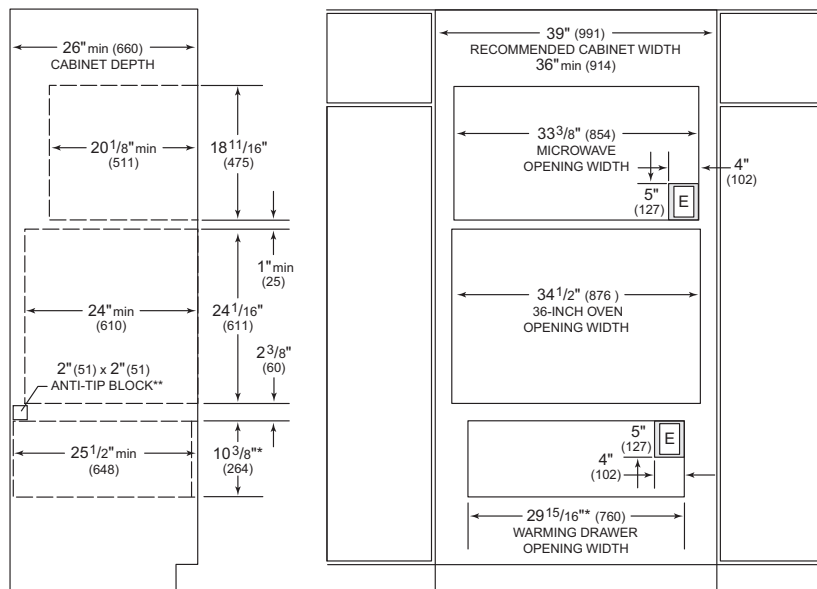

*Dimension may vary by $\pm 1/8"$ (3).

**Refer to installation instructions provided with the integrated drawer front (WDFRONT/I) for accurate placement of the anti-tip block.

NOTE: Refer to the built-in 36" (914) single oven specifications for electrical location.

NOTE: The width of the custom panel for the warming drawer with integrated drawer front will vary according to the specific installation, but the rough opening width will remain 29 15/16" (760).

NOTE: At installation, wood cleats must be added to the opening for the microwave trim.

Dimensions in parentheses are in millimeters unless otherwise specified.



WOLF 30''(762) AND 36''(914) CONVECTION MICROWAVE TRIM KIT INSTALLATION INSTRUCTIONS (808663)

PROCEDURE:

Step 1

- A. Place microwave on bottom duct assembly (See Fig. 1).

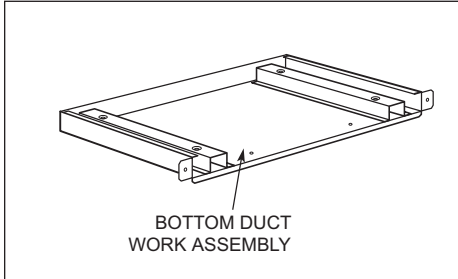


Figure 1

- B. Assemble top duct as shown in Figures 2, 3 and 4.
C. Remove existing screw from upper right and left rear of microwave (See Fig. 6).
D. Place top duct cover assembly on microwave. Reinsert existing screws through assembly into original screw holes (See Fig. 6).

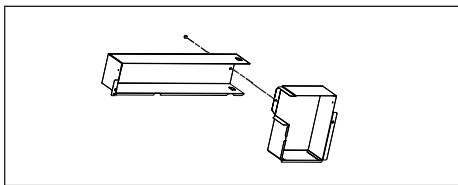


Figure 2

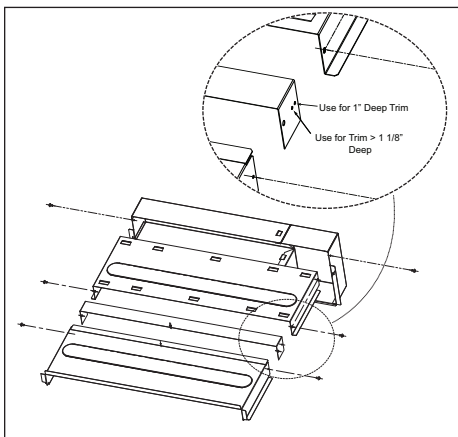


Figure 3

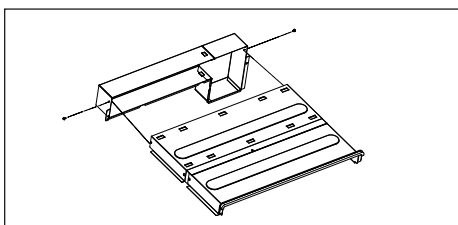


Figure 4

Step 2

- A. Attach mounting brackets as shown in Fig. 5 with provided screws. Make sure brackets do not extend beyond the front surface of the cabinet. Always be sure to pre-drill pilot holes before installing screws to avoid damage to cabinet or trim kit hardware.

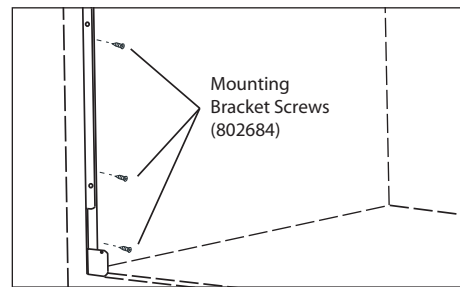


Figure 5

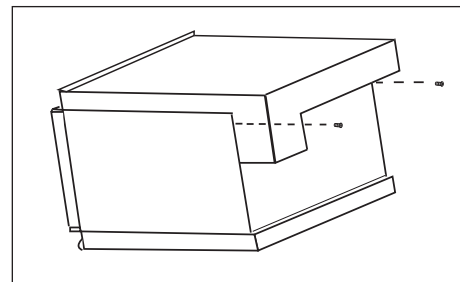


Figure 6

⚠ CAUTION

Install MWC24 with a 120V, 60Hz, on a dedicated circuit. This outlet must be checked by a qualified electrician to see if it is wired with correct polarity and is correctly grounded. A GFCI outlet is not recommended as this may cause product operation interruptions.

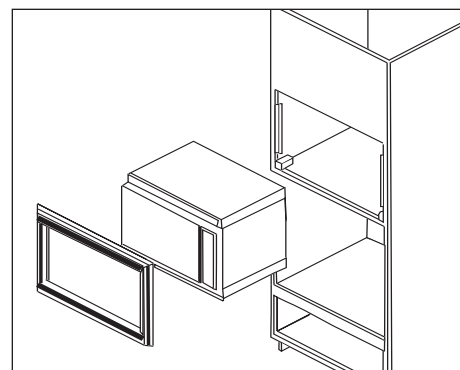


Figure 7

Step 3

- A. Place oven adjacent to wall or cabinet opening. Plug power cord into electrical outlet.
B. Carefully guide complete assembly between bottom cleats and push assembly back. When both top and bottom duct work are assembled and correctly placed, their flanges will be tight against top and bottom outer edge of opening (See Fig. 6).

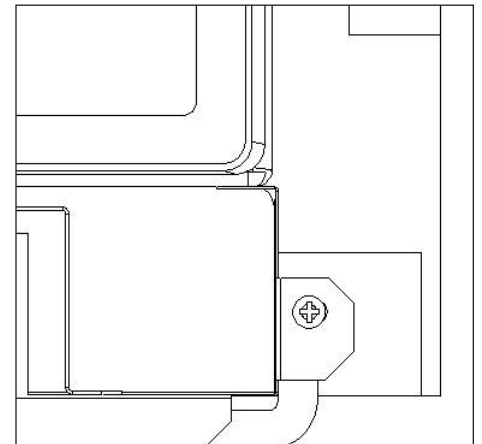


Figure 8

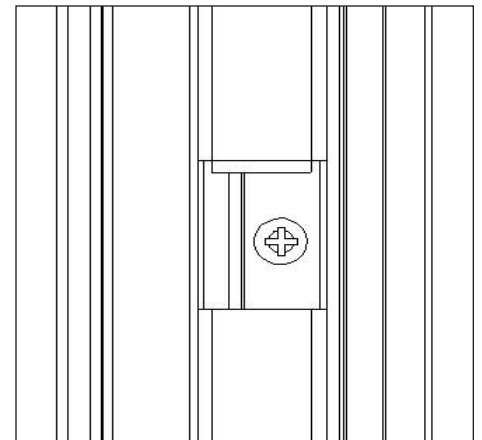


Figure 9

- C. Secure bottom duct work assembly with two mounting screws (805187) for trim. Avoid pinching cord between oven and wall (See Fig. 8).
D. Carefully place assembled trim kit on oven. Check that it is level and secure with 4 mounting screws (805187) for trim (See Fig. 9).
E. Push decorative panels into slots until they snap into place.