

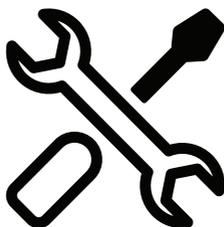
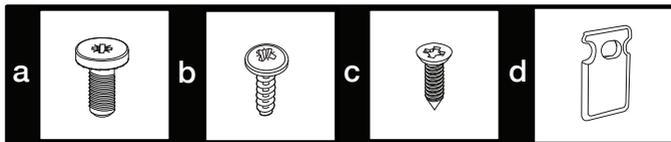
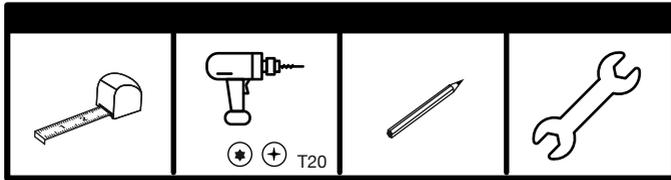



Installation instructions

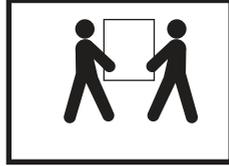



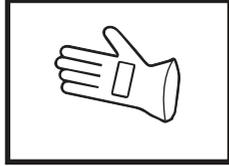


1


No
Wooden
Backwall

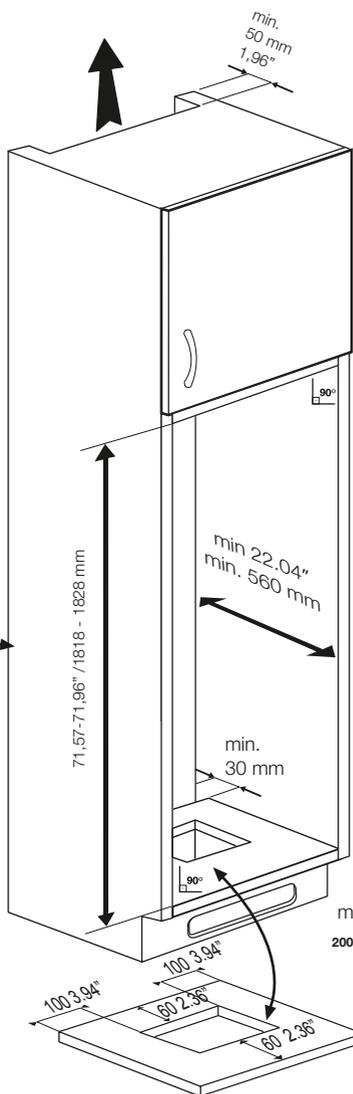


min. 200 cm²
200 cm²=31.000 in²

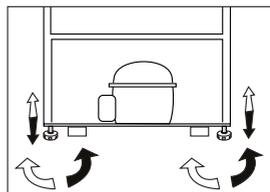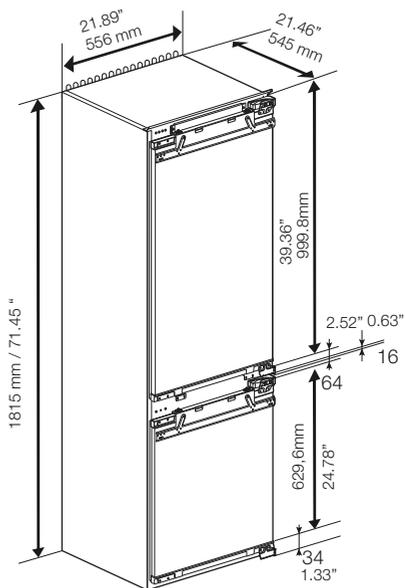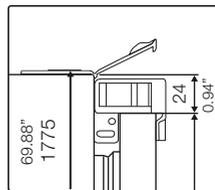




2

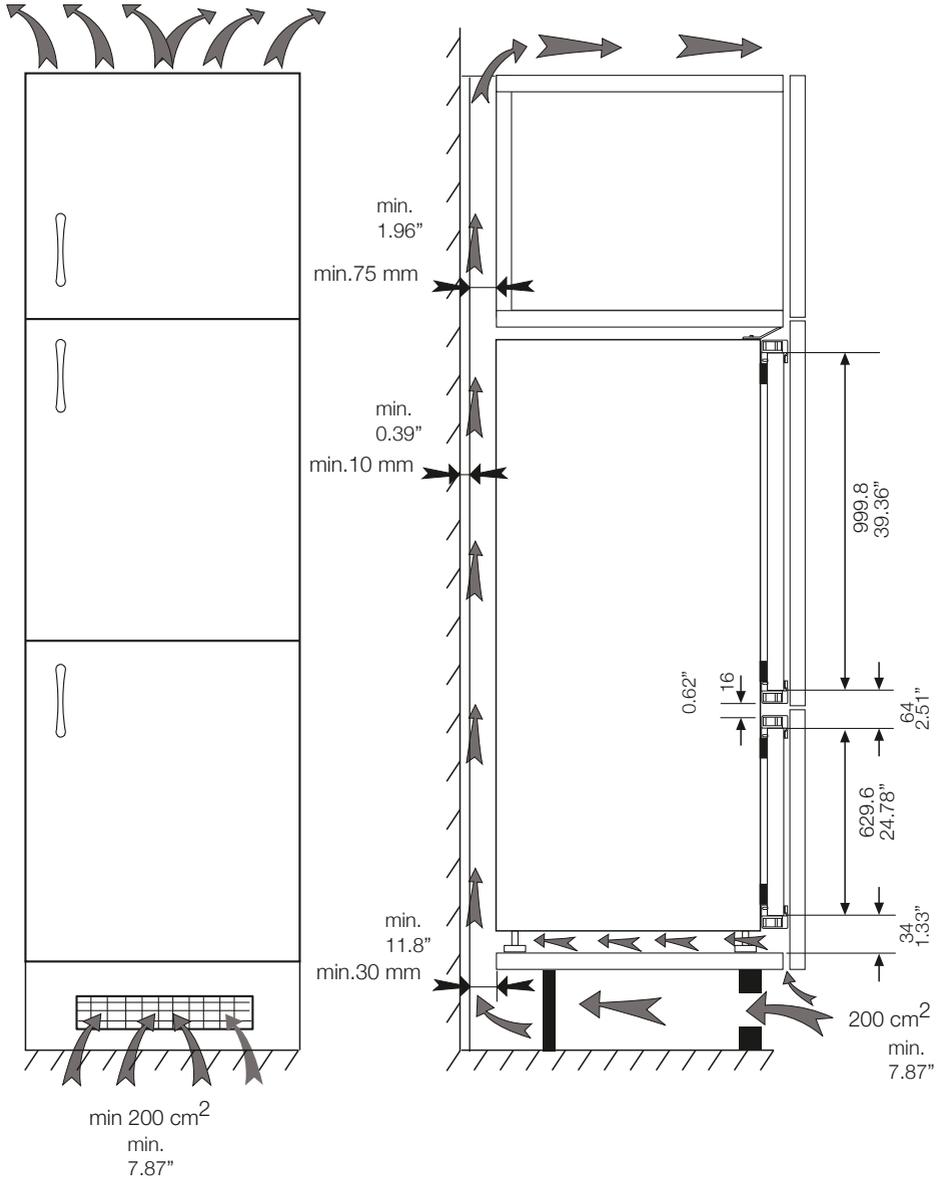



3

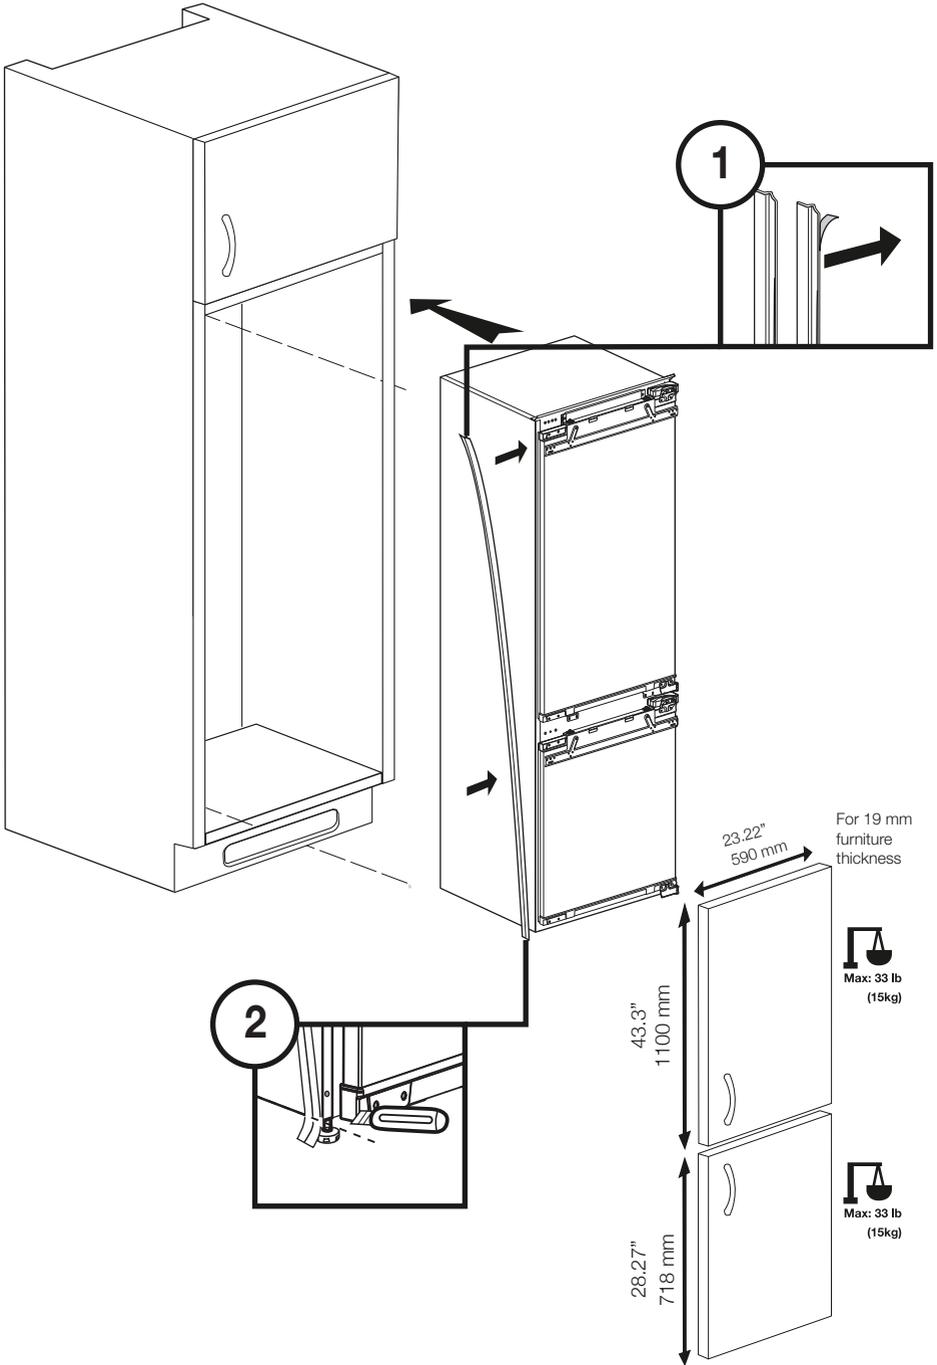

C

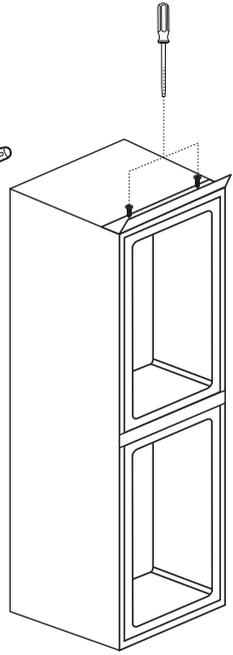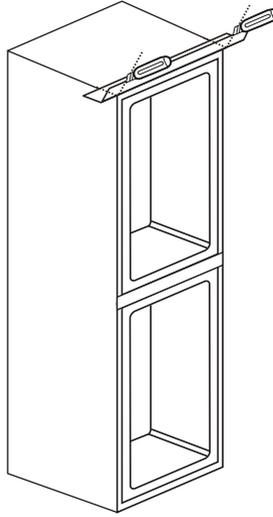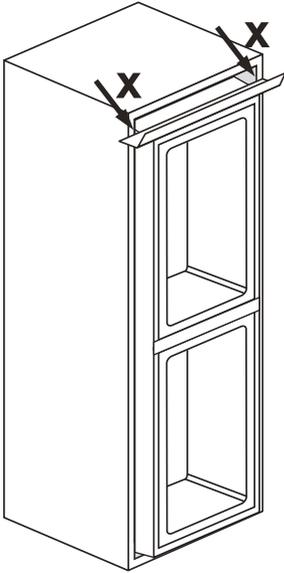

4

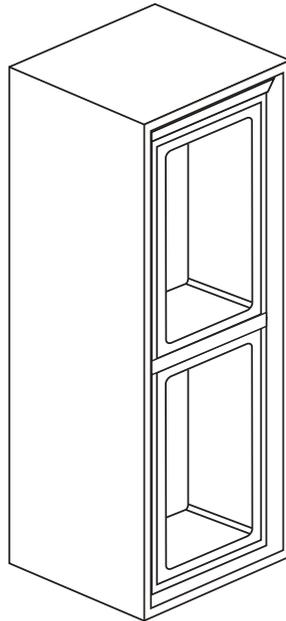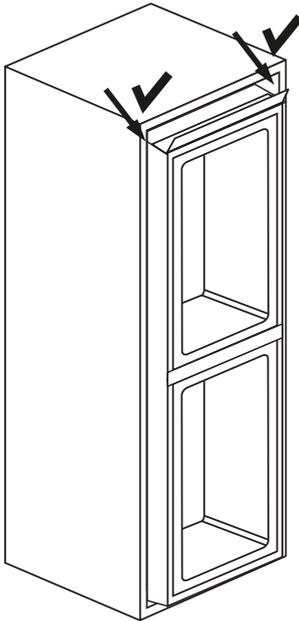


d



16 mm +  (2mm) = 18 mm




5

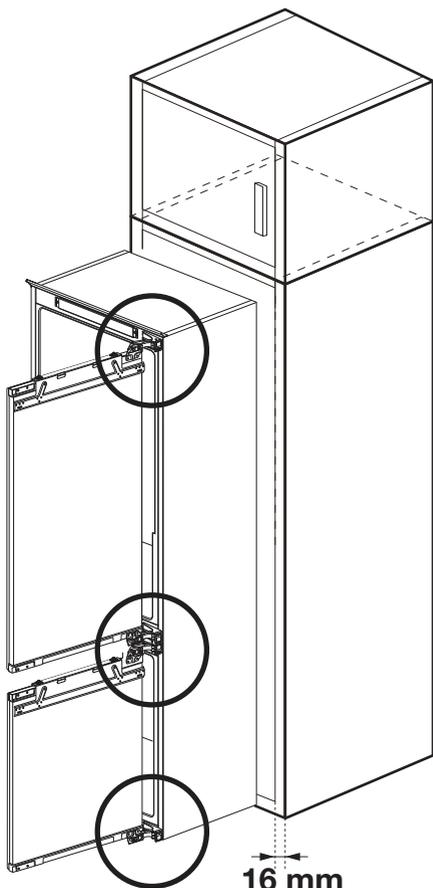


16 mm


✓ 16 mm







X 18 mm

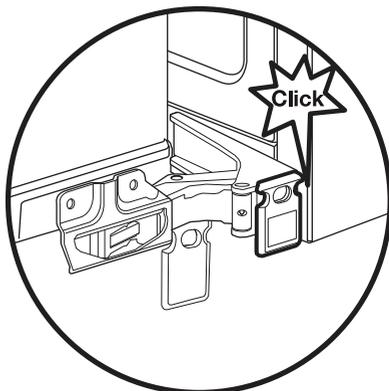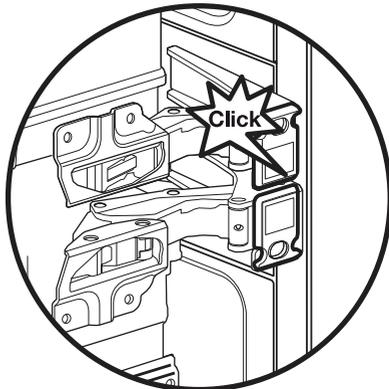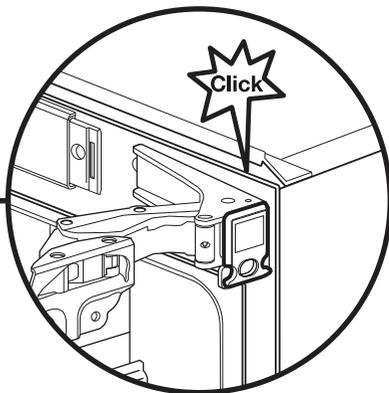

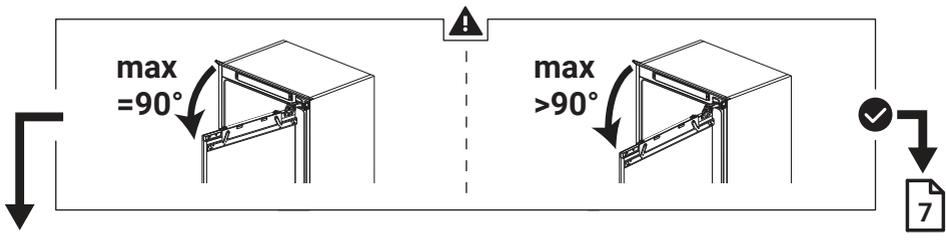

6

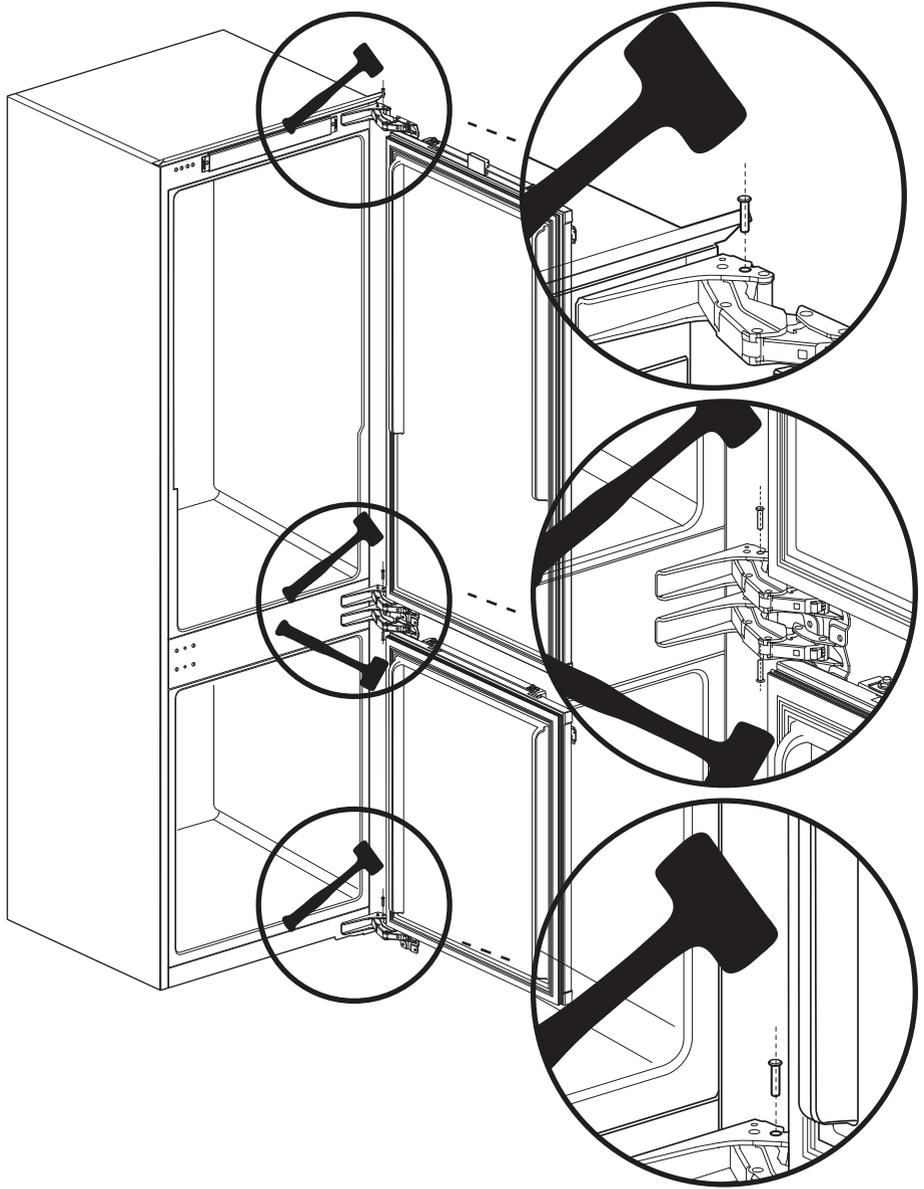

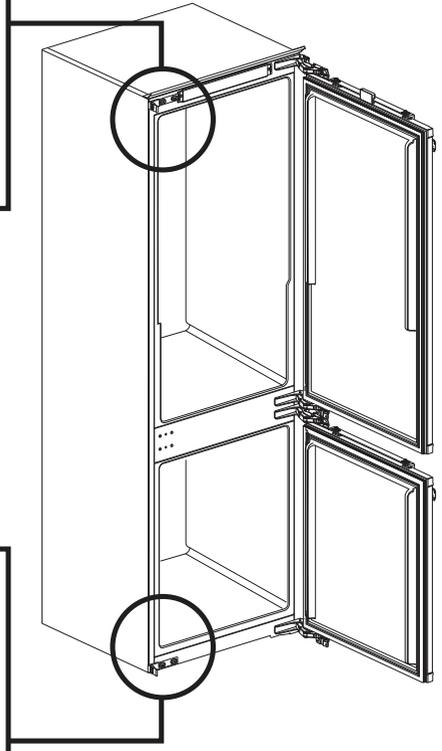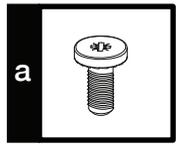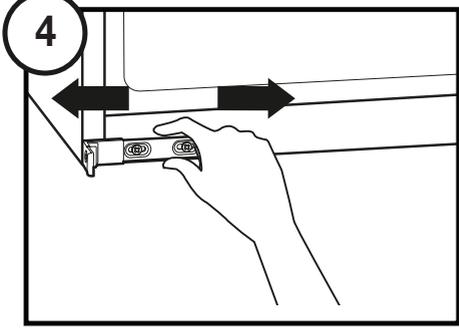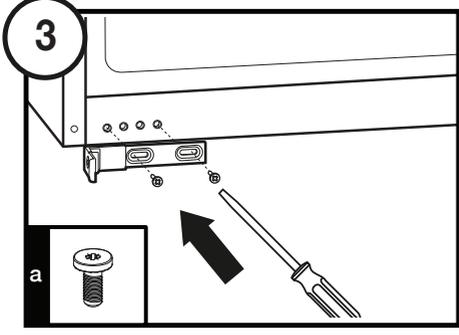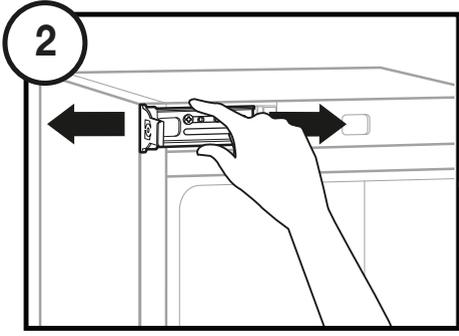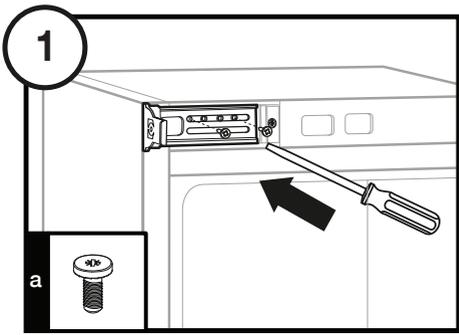

b



41,5 mm

1

41,5 mm







2

3

4

5






b

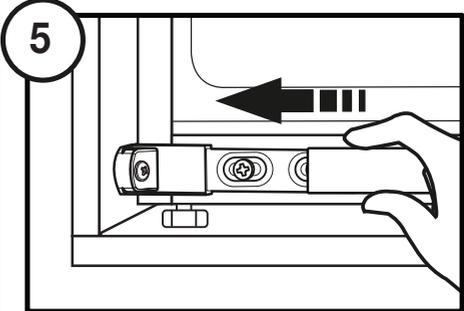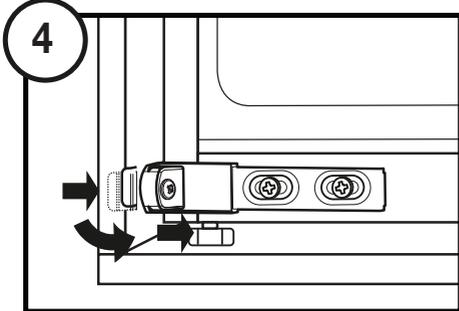
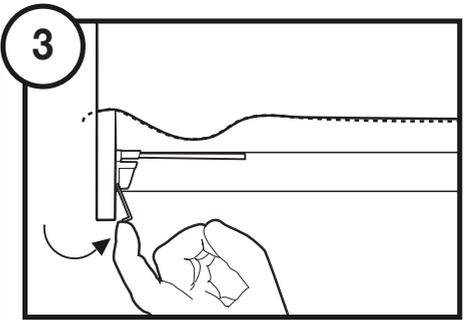
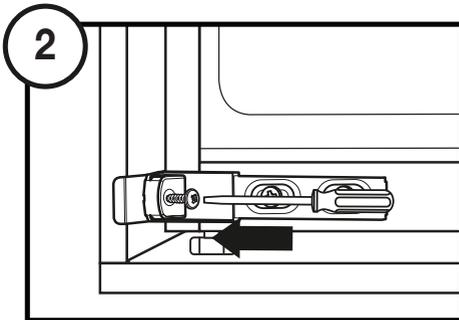
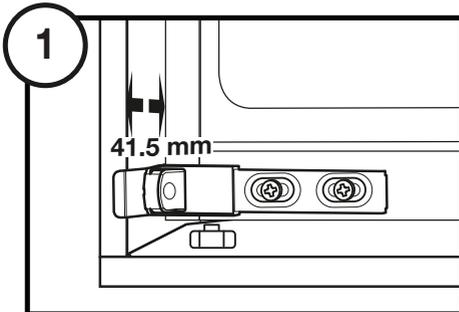
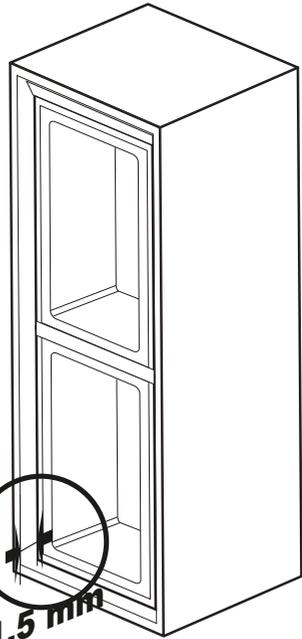


C




10

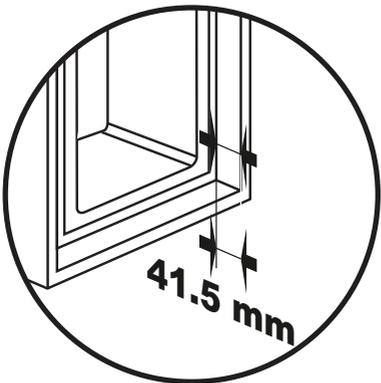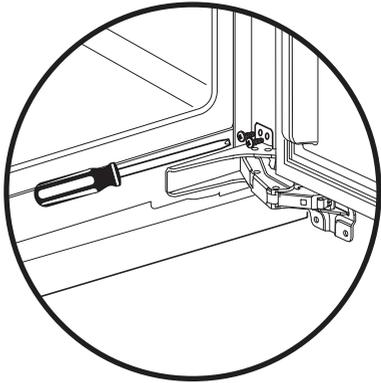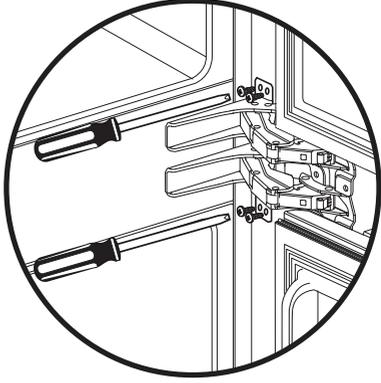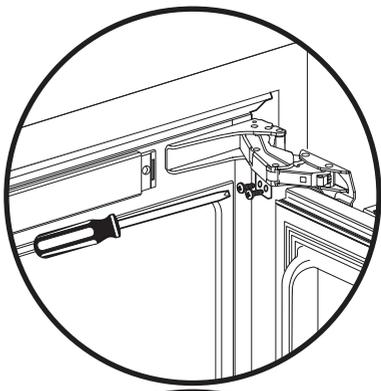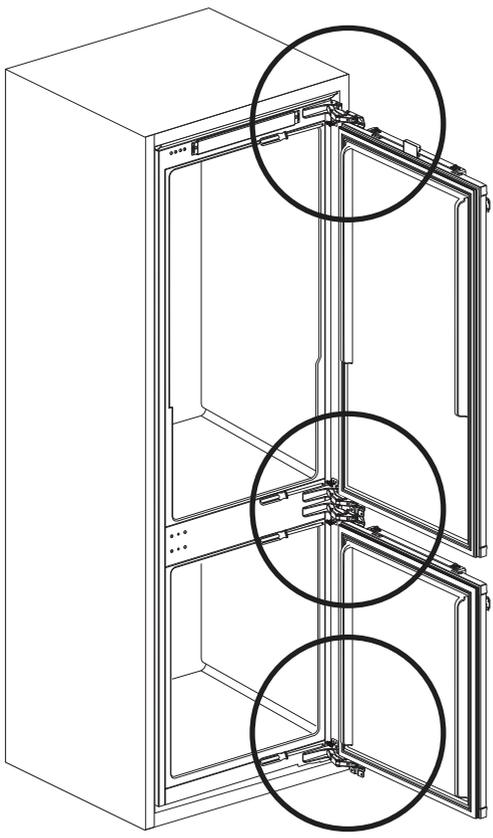


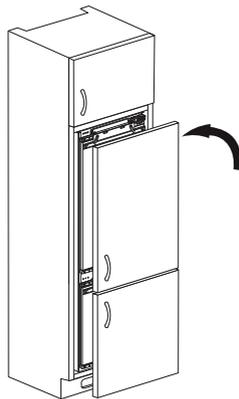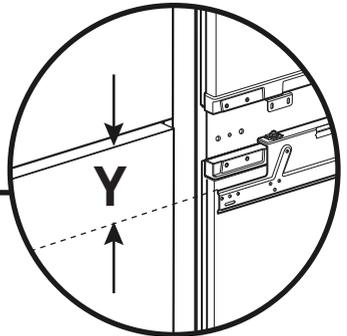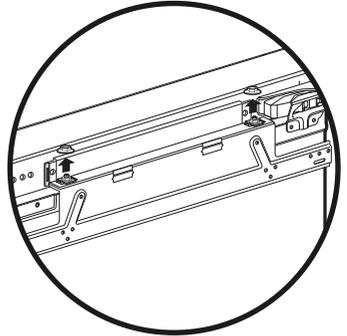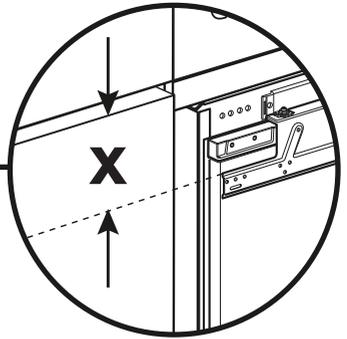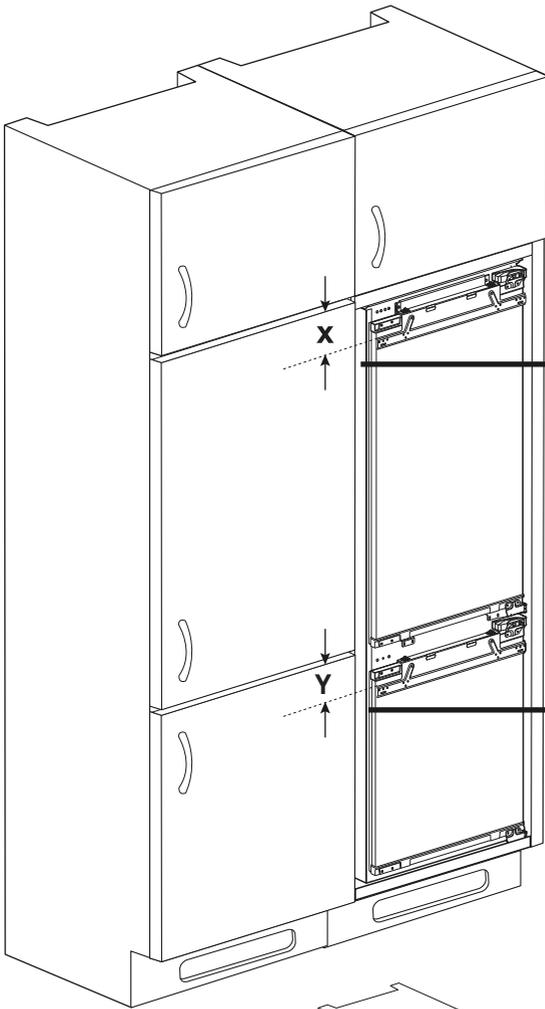



12

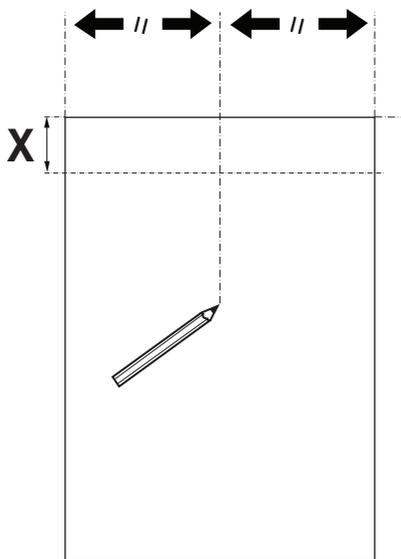


13

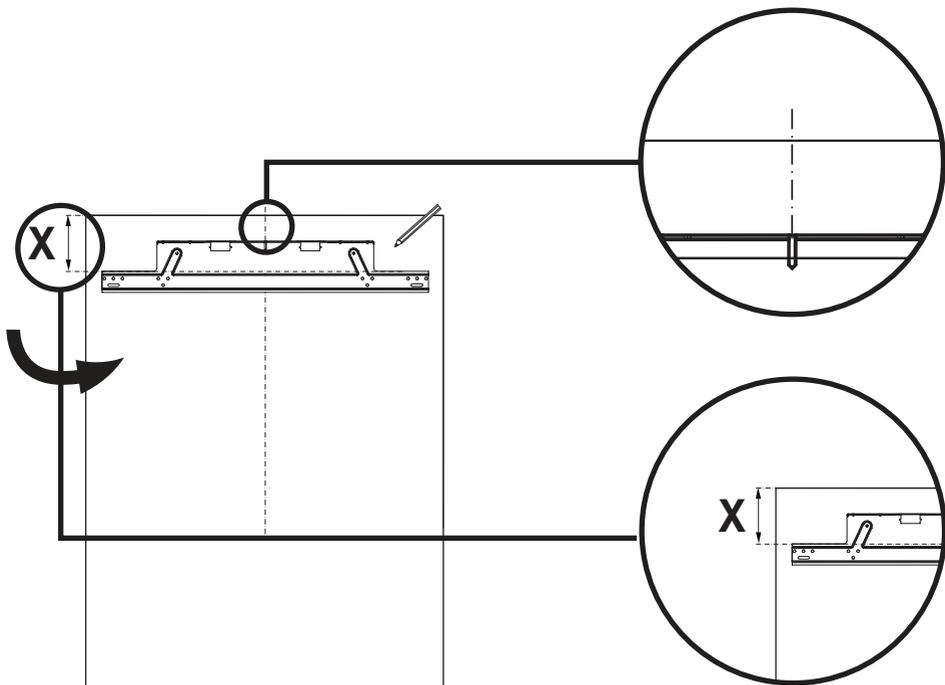

C

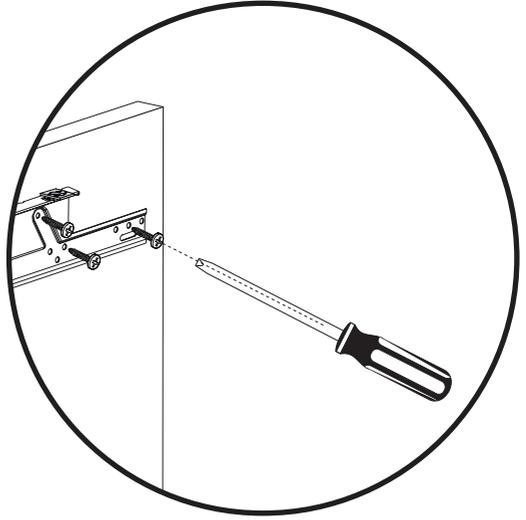
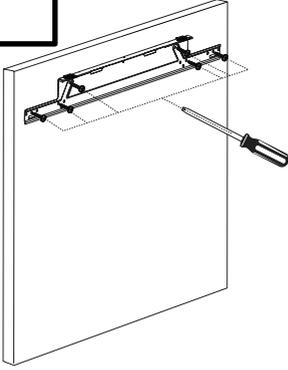


14

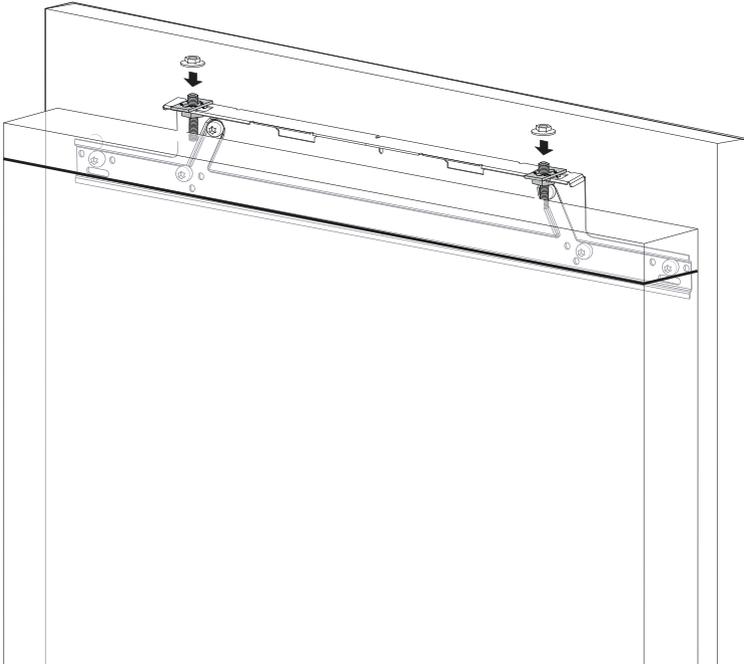


15




16

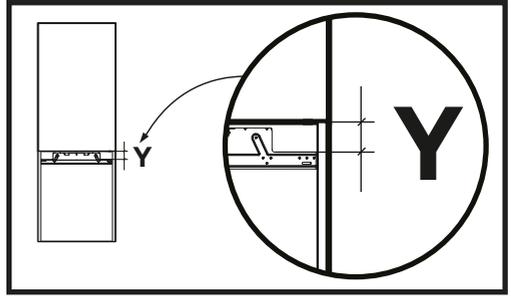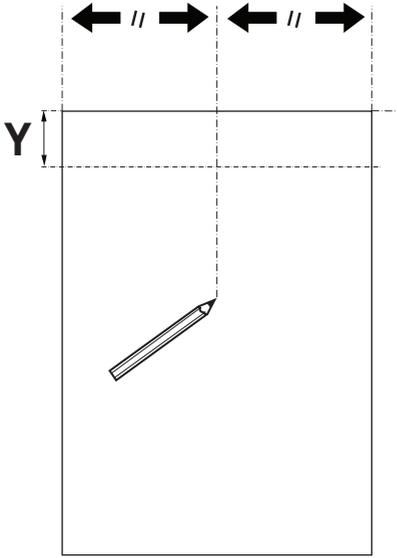


17


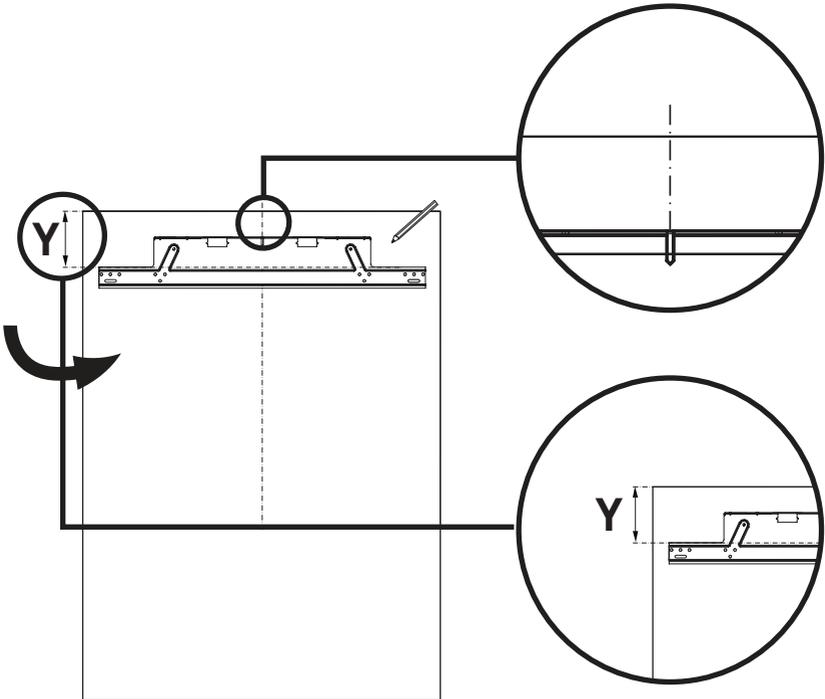


18

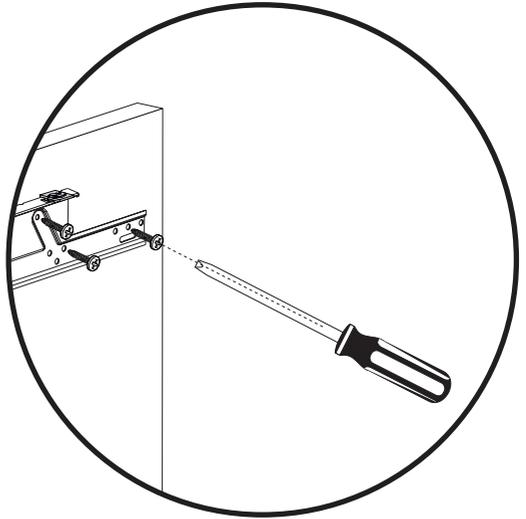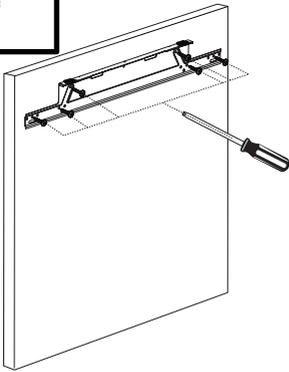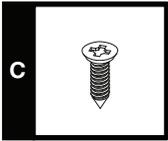

19

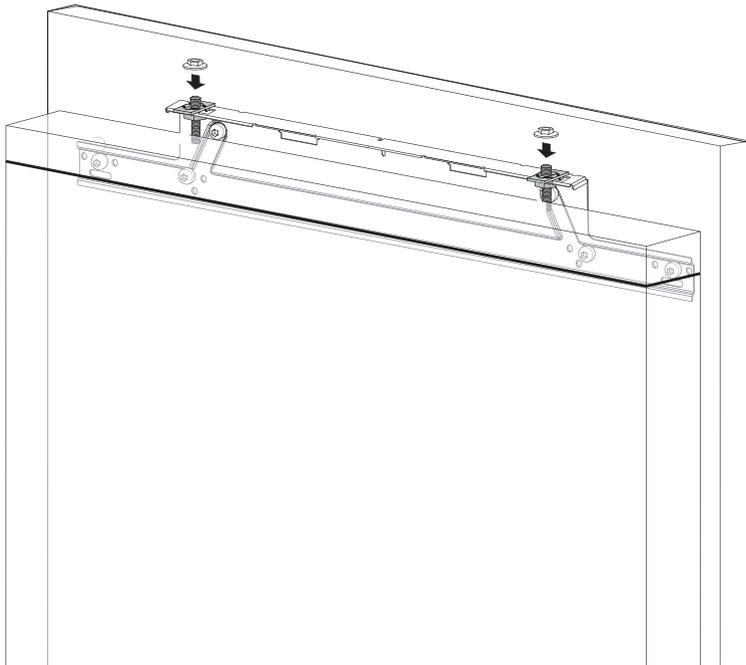

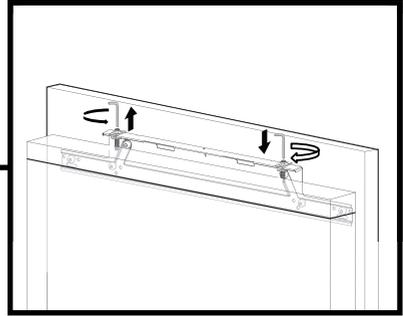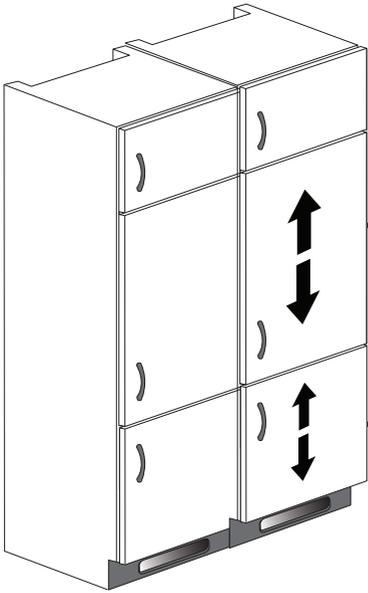

20

