


Components and Hardware List

Ø $\frac{5}{16}$ " x 2" Allen Head Bolt



(A) 8 pcs.

Ø $\frac{5}{16}$ " Spring Washer



(B) 8 pcs.

Ø $\frac{5}{16}$ " x $\frac{3}{4}$ " Flat Washer



(C) 8 pcs.

5mm Allen Wrench



(D) 1 pc.

Ø $\frac{1}{4}$ " x 2-1/2" Allen Head Bolt



(E) 8 pcs.

Ø $\frac{1}{4}$ " Spring Washer




(F) 8 pcs.

Ø $\frac{1}{4}$ " x $\frac{5}{8}$ " Flat Washer




(G) 8 pcs.

4mm Allen Wrench



(H) 1 pc.

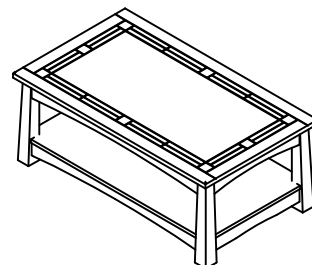


#2902
Cocktail Table

Wood block with Caster



(I) 4 pcs.

Table Top

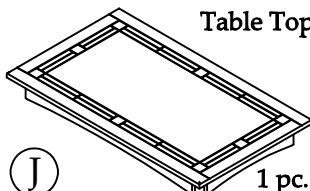


(J) 1 pc.

Leg



(K) 4 pcs.

Shelf

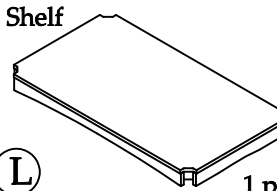

(L) 1 pc.

Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment.

Step 1: Place the Table Top (J) upside down on a soft non-abrasive surface.


Step 2: Attach the LEGS (K) to the underneath side of the Table Top with the 5/16" x 2" long Allen-Head Bolts (A), Spring Washers (B) and Flat Washers (C). Do not fully install bolts until after next step. Attach the Shelf (L) to the LEGS with the same 2" long Allen-Head Bolts and washers as previous step. Tighten all Bolts using the Allen Wrench (D).

If the casters will be used: Attach the Wood Block (I) to the underneath side of the Shelf with the 1/4" x 2-1/2" long Allen-Head Bolts (E), Spring Washers (F) and Flat Washers (G). Tighten all Bolts using the Allen Wrench (H).

Step 3: Carefully set the Table upright.

To prevent possible damage to some types of flooring, never roll casters on unprotected hardwood or vinyl flooring.

Step 2

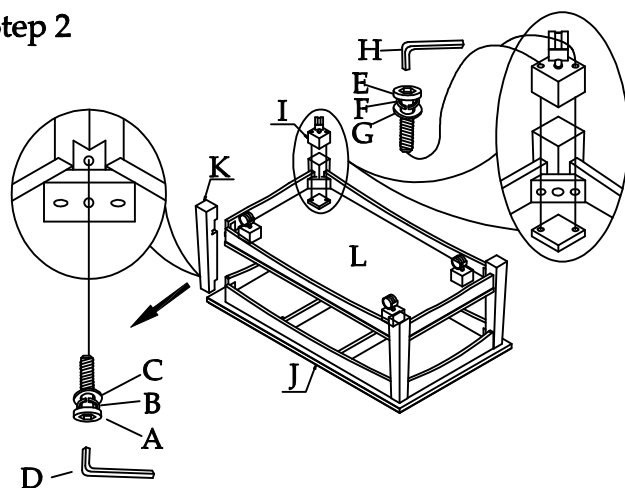

Step 3

