




ITEM NO: I262-360WD Writing Desk

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may come loose inside the carton during shipment.



UNIT SHOULD BE INSTALLED BY 2 OR MORE PERSONS.

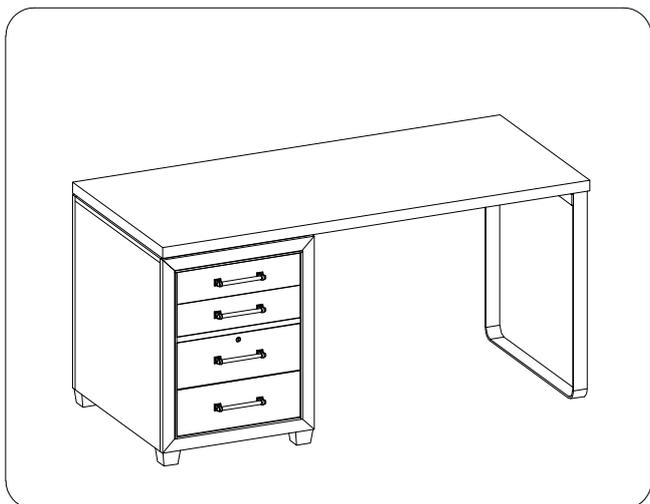

TOOLS REQUIRED (NOT PROVIDED)


PHILLIPS SCREWDRIVER

HARDWARE LIST:

No.	Description	Sketch	Quantity
A	Bolt Ø5/16" x 1"		6 PCS
B	Bolt Ø5/16" x 1-1/2"		4 PCS
C	Lock Washer Ø5/16"		10 PCS
D	Flat Washer Ø5/16" x 3/4"		10 PCS
E	Allen Wrench 5mm		1 PC

COMPONENTS LIST:

No.	Description	Sketch	Quantity
1	Desk Top		1 PC
2	Metal Frame		1 PC
3	Pedestal		1 PC

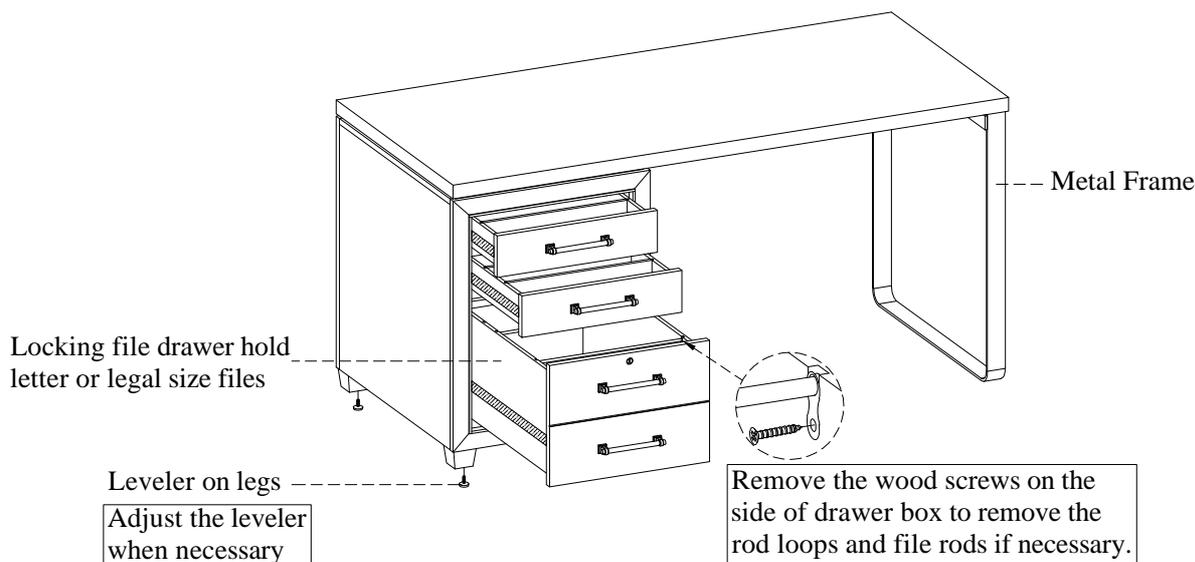

BEFORE USING THIS PRODUCT PLEASE READ, UNDERSTAND, AND FOLLOW THESE INSTRUCTIONS. Save these instructions for future reference.


FOR INDOOR USE ONLY




ITEM NO: I262-360WD Writing Desk

Remove all drawers:

1. Extend the drawer out completely; Then press the plastic tab up on the right and down on the left as the same time. As shown right.
2. Pull all drawers out.

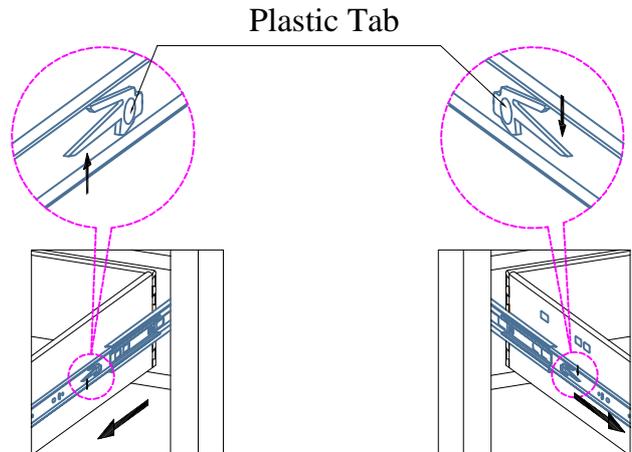

STEP 1: Put the desk top upside down on a soft surface, Attach the pedestal and the metal frame to the desk top by using 6 bolts(A) and 4 bolts(B), lock washers(C), flat washers(D). Use the Allen wrench provided to tighten all the bolts. Turn the assembled desk to the upright position.

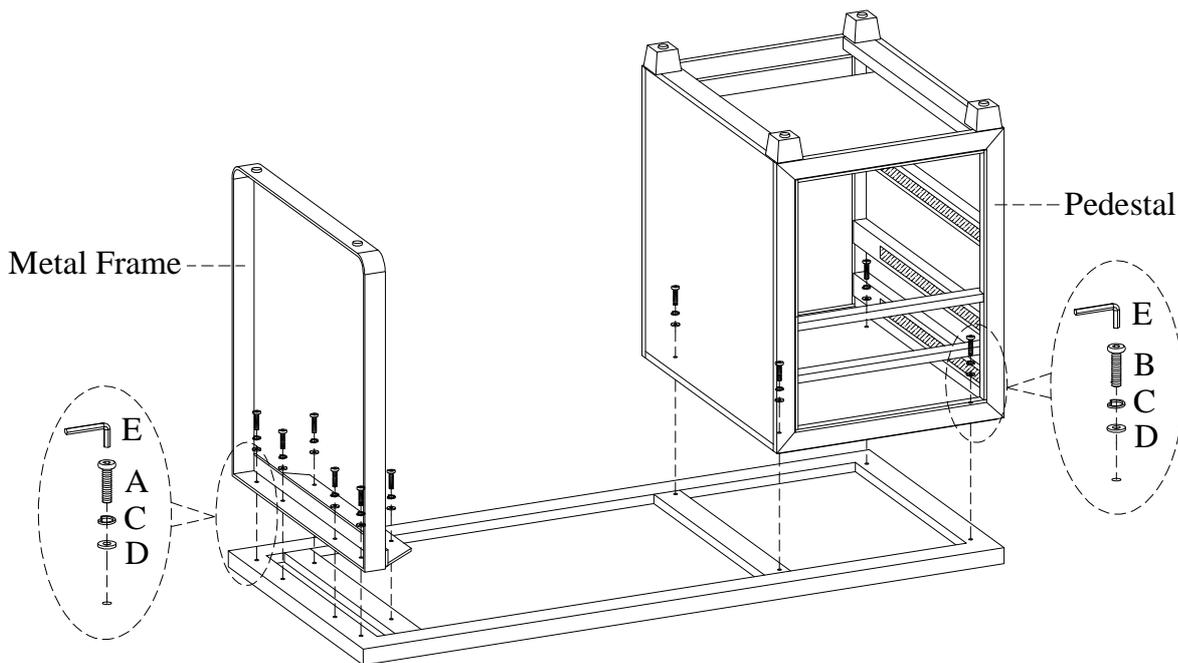

Put the all Drawers Back:

1. Extend the slides out from the case completely. Then align the slides on the drawer in to the slide on the case as shown right.
2. Push all drawers back. You may have to slide the drawer in and out several times in order to properly align the ball bearings.

