


ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE

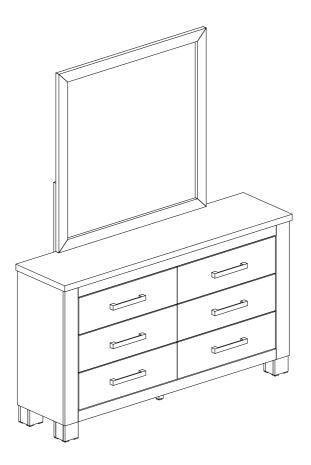

Fine Furniture for every stage of life

225104 Mirror

REVISION 0: 02/25/2025

PAGE 1 OF 3

COASTERFURNITURE.COM

ITEM: 225104

ASSEMBLY INSTRUCTIONS



ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

10 MINUTES

PART IDENTIFICATION

A MIRROR

B MIRROR SUPPORT (PACKED WITH MIRROR)

C DRESSER *FROM BOX ITEM 225103

HARDWARE IDENTIFICATION

1	BOLT (M6 x 40MM - RBW)	8PCS
2	LOCK WASHER (1/4" x 13Ø - RBW)	8PCS
3	FLAT WASHER (1/4" x 19Ø - RBW)	8PCS
4	ALLEN WRENCH (M4 x 110MM - BLK)	1PC


NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provided this item.


ITEM: **225104 ASSEMBLY INSTRUCTIONS**





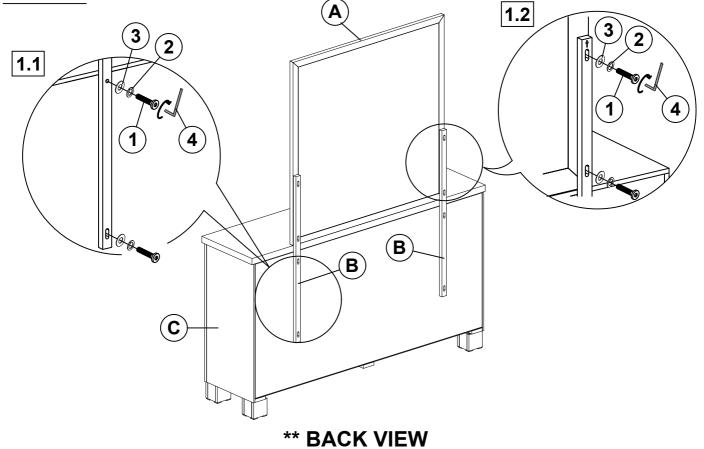

STEP 2 COMPLETE

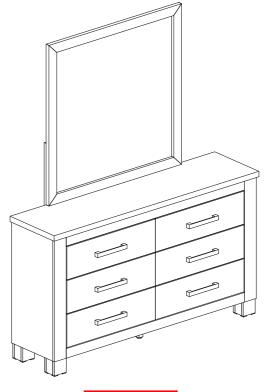




PAGE 3 OF 3

COASTERFURNITURE.COM

ITEM: **225104**



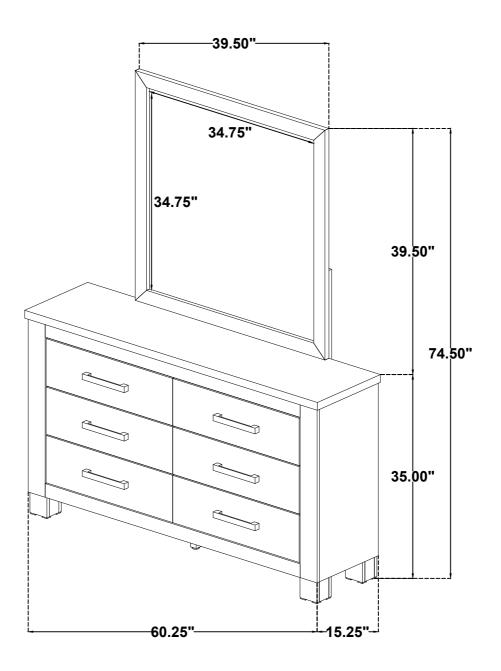

Note: Dimension tolerance ±5%