## eurøstyle


Assembly Instructions BABA Flat High Back Office Chair




## IMPORTANT NOTE #1: →

Screws and washers (Parts I) are preassembled into the underside of the seat (Part B). Remove screws and washers from seat and then use to attach Part D to Part B, as shown in step 1.



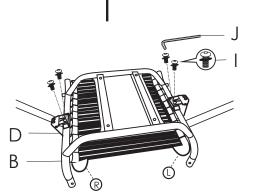

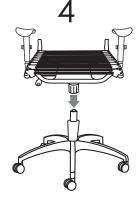






B (1 pc)



C (1 pc)

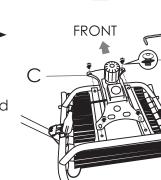







E (1 pc)



F (1 pc)

G) are preassembled into the underside of the seat (Part B). Remove screws and washers from seat and then use to attach Part C to Part B, as shown in step 2.

**IMPORTANT NOTE #2:** Screws and washers (Parts





D (2 pcs)












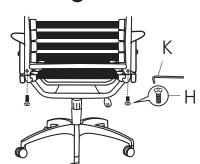

M8 x 14mm





