

Fine Furniture for every stage of life

224850KE (B1-B3) Eastern King Bed

REVISION 0: 08/15/2024 REVISION 1: 03/18/2025

PAGE 1 OF 7

ASSEMBLY INSTRUCTIONS



COASTERFURNITURE.COM

ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

25 MINUTES

PARTS IDENTIFICATION

PARTS IDENTIFICATION					
B1 (BOX 1)	-TA		ı		
AN HEADBOARD PANEL		1PC	BN HEADBOARD LEG	1PC	
RIGHT CN HEADBOARD LEG		1PC			
B2 (BOX 2)					
DN FOOTBOARD		1PC	EN ROLL SLAT (18PCS)	1SET	
FN ROLL SLAT SUPPORT WITH LEVELER		10PCS			
B3 (BOX 3)					
GN STORAGE DRAWERS		2SETS	DRAWERS SUPPORT LEG WITH LEVELER	6PCS	
IN CENTER RAIL		1PC	JN WITH LEVELER	4PCS	
224850KE (B1) FROM BOX 1 HBN HEADBOARD COMPLETE		1PC	224850KE (B2) DN FROM BOX 2 FOOTBOARD	1PC	

PAGE 2 OF 7

COASTER

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.

HARDWARE IDENTIFICATION

Z-B1 (BOX 1) - HARDWARE PACK IS LOCATED IN 224850KE(B1)

1	MEDIUM BOLT (Ø5/16" x 45MM - BLK)	6PCS
2	BIG LOCK WASHER (Ø 5/16" - BLK)	6PCS
3	BIG FLAT WASHER (Ø5/16" x 19 x 1.5MM - BLK)	6PCS
4	ALLEN WRENCH (74 x 30 x 4MM - BLK)	1PC

Z-B2 (BOX 2) - HARDWARE PACK IS LOCATED IN 224850KE(B2)

5	SHORT BOLT (Ø1/4" x 32MM - BLK)		12PCS
6	SMALL LOCK WASHER (Ø1/4" - BLK)	3	12PCS
7	SMALL FLAT WASHER (Ø1/4" x 19 x 1.5MM - BLK)		12PCS
4	ALLEN WRENCH (74 x 30 x 4MM - BLK)		1PC

Z-B3 (BOX 3) - HARDWARE PACK IS LOCATED IN 224850KE(B3)


8	WOODEN DOWEL (Ø8 x 40MM)	8PCS
9	THREADED BOLT (Ø5/16" x 75MM - BLK)	8PCS
10	HALF ROUND NUT (25 x 15 x 2MM - BLK)	8PCS
11	HEX NUT (Ø5/16 x 17MM - BLK)	8PCS
12	WRENCH (13MM - BLK)	1PC

PAGE 3 OF 7


COASTER

ASSEMBLY INSTRUCTIONS

STEP 1

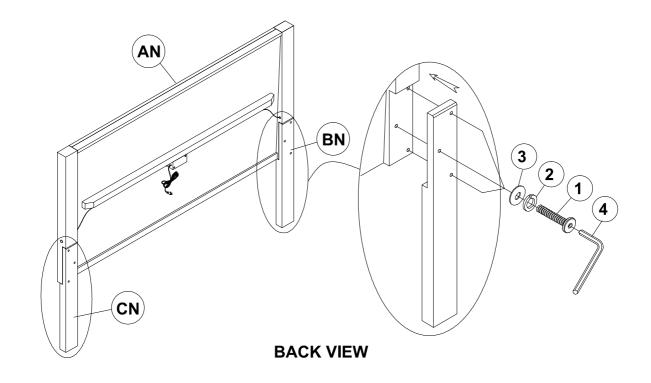


STEP 2

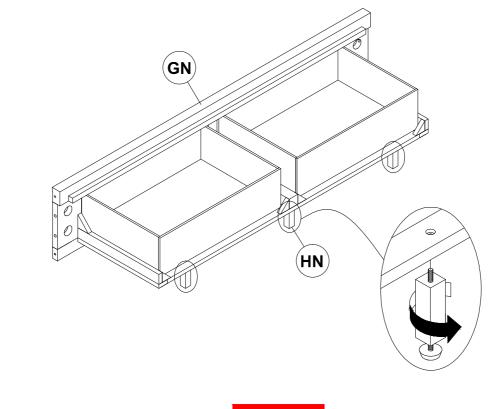


PAGE 4 OF 7

ASSEMBLY INSTRUCTIONS

STEP 3

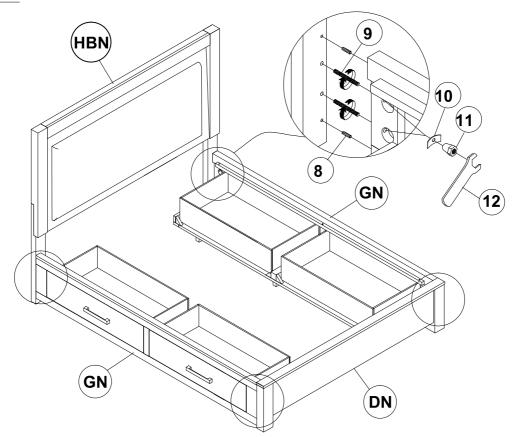


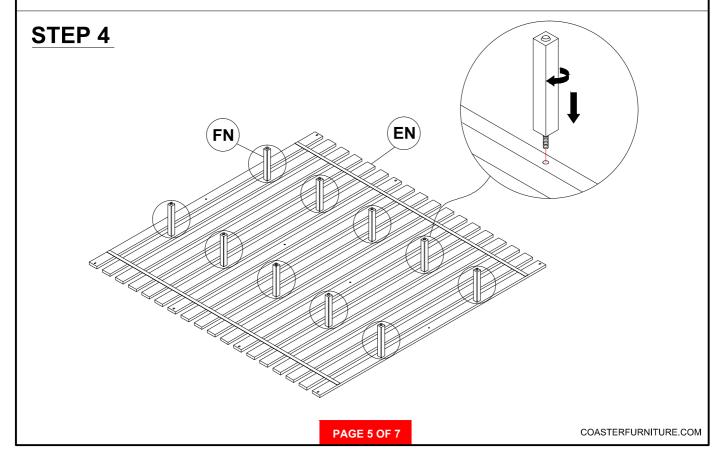




ASSEMBLY INSTRUCTIONS

STEP 5

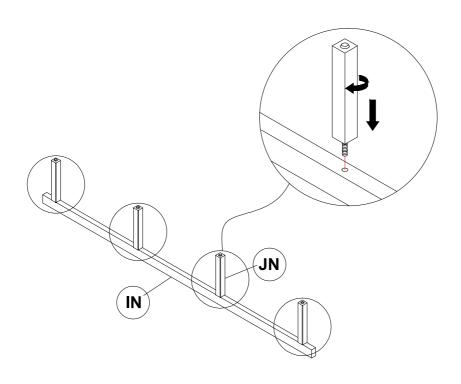


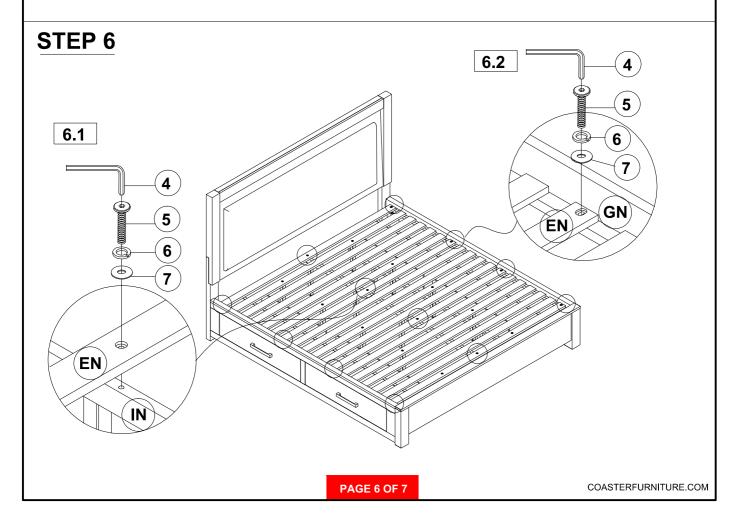


COASTER

ASSEMBLY INSTRUCTIONS

STEP 7 COMPLETE

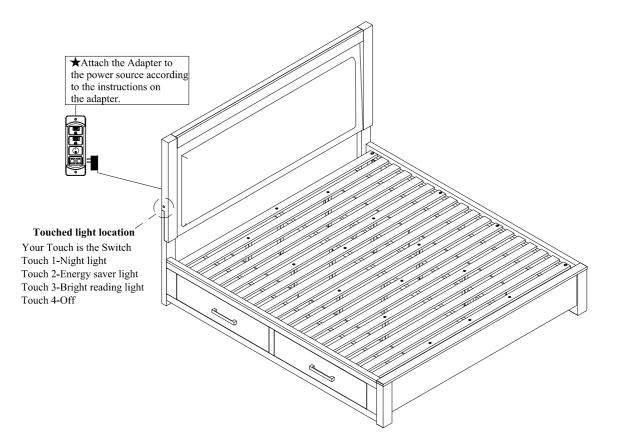






Inner Size: 77.00"W X 82.00"D

Inner Size of Drawer: 33.00"W X 17.50"D X 7.00"H X 0.50"T

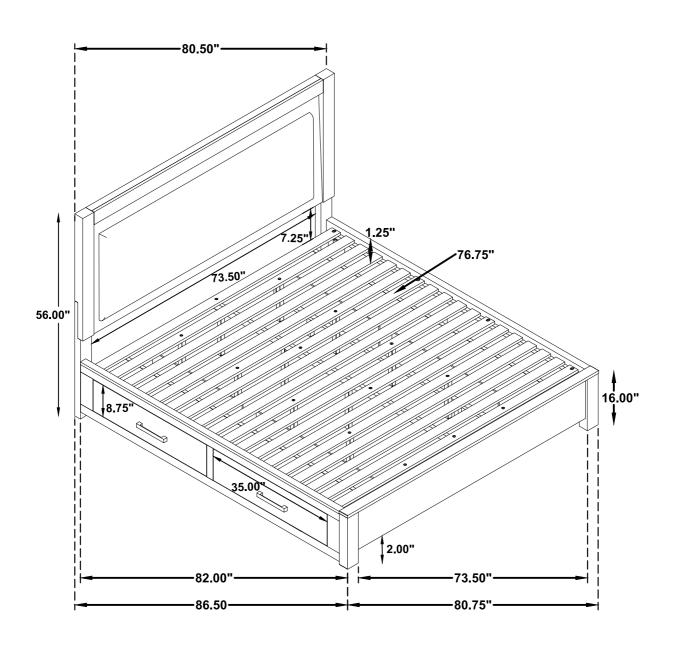





Fine Furniture for every stage of life

224852 Nightstand

REVISION 0: 08/15/2024 REVISION 1: 03/18/2025

PAGE 1 OF 2



ANTI-TIPPING INSTALLATION INSTRUCTIONS FURNITURE TIPPING RESTRAINT

WARNING

Injury may result from tipping furniture.


This restraint may protect against tipping furniture.

Do not allow children to climb on furniture.

This restraint is not a substitute for proper adult supervision.

Failure to detach this restraint before moving the furniture may result in injury and damage.


- 1. Attach one of the mounting brackets securely to the back edge of the unit, using the short screw.
- 2. Determine where the unit is to be placed, and mark the location on the wall for the other mounting bracket. The bracket on the wall needs to be approximately 2" below the bracket mounted to the edge of the unit.
- 3. Drill a hole in the wall. Insert the plastic wall anchor into the hole and if necessary, use a small block of wood and hammer to tap it in so that it's flush with the wall.
- 4. Attach the bracket over the plastic wall anchor using the long screw.
- 5. Place the unit against the wall, both brackets need to be facing each other.
- 6. Lace an end of the restraint strap through the hole in each bracket. Bring both ends together and rotate the thumb nut onto the threaded end until tight.
- 7. Ensure that the restraint strap is securely laced and locked.

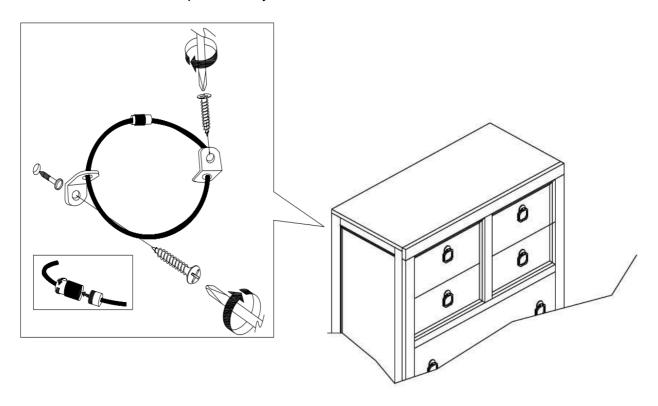





Inner Size of Drawer : 21.00"W X 12.75"D X 6.00"H X 0.50"T

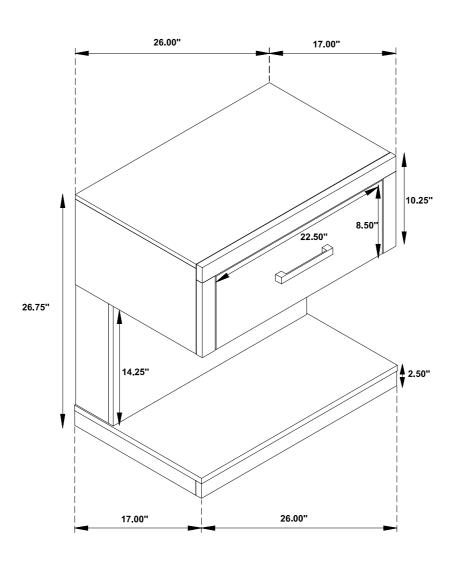





Fine Furniture for every stage of life

224853 Dresser

REVISION 0: 08/15/2024 REVISION 1: 03/18/2025

PAGE 1 OF 4

ASSEMBLY INSTRUCTIONS



ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

5 MINUTES

PARTS IDENTIFICATION

AN DRESSER



1PC

BN CENTER SUPPORT LEG WITH LEVELER




1PC

ASSEMBLY INSTRUCTIONS

COASTER

STEP1

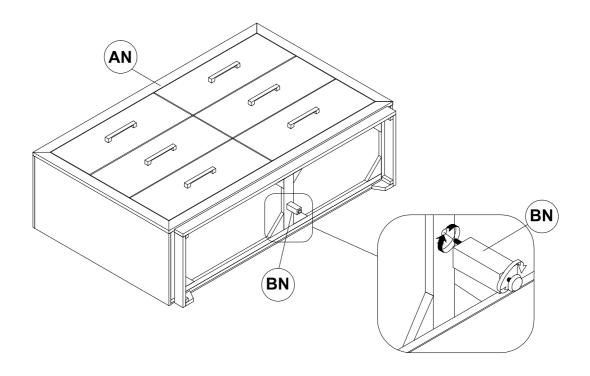

STEP2 COMPLETE







ANTI-TIPPING INSTALLATION INSTRUCTIONS FURNITURE TIPPING RESTRAINT

WARNING

Injury may result from tipping furniture.


This restraint may protect against tipping furniture.

Do not allow children to climb on furniture.

This restraint is not a substitute for proper adult supervision.

Failure to detach this restraint before moving the furniture may result in injury and damage.

- 1. Attach one of the mounting brackets securely to the back edge of the unit, using the short screw.
- 2. Determine where the unit is to be placed, and mark the location on the wall for the other mounting bracket. The bracket on the wall needs to be approximately 2" below the bracket mounted to the edge of the unit.
- 3. Drill a hole in the wall. Insert the plastic wall anchor into the hole and if necessary, use a small block of wood and hammer to tap it in so that it's flush with the wall.
- 4. Attach the bracket over the plastic wall anchor using the long screw.
- 5. Place the unit against the wall, both brackets need to be facing each other.
- 6. Lace an end of the restraint strap through the hole in each bracket. Bring both ends together and rotate the thumb nut onto the threaded end until tight.
- 7. Ensure that the restraint strap is securely laced and locked.

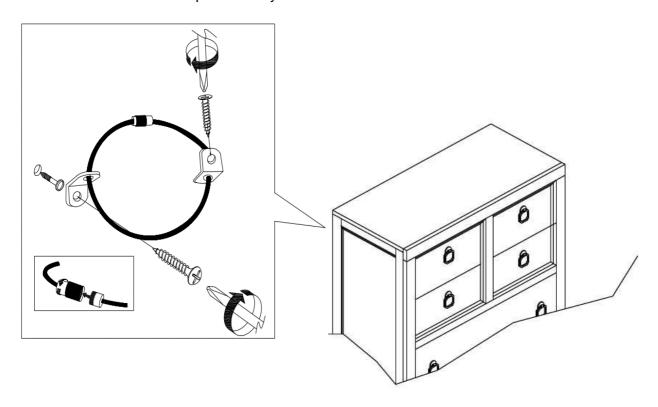








Inner Size of Drawer: 27.25"W X 12.75"D X 8.25"H X 0.50"T

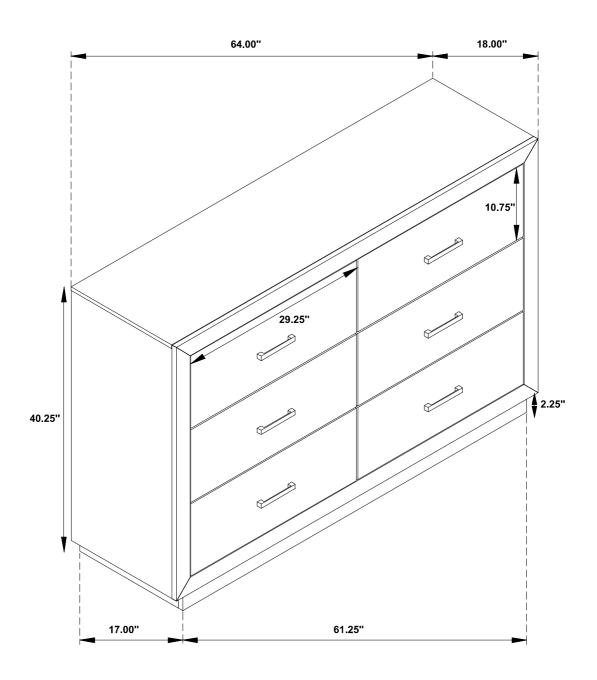





Fine Furniture for every stage of life

224854 Mirror

REVISION 0: 08/15/2024 REVISION 1: 03/18/2025

PAGE 1 OF 3

ASSEMBLY INSTRUCTIONS



ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

5 MINUTES

PARTS IDENTIFICATION


DRESSER AN 1PC FROM BOX ITEM# 224853 1PC BN **MIRROR MIRROR SUPPORT** CN 2PCS (PACKED WITH DRESSER)

HARDWARE IDENTIFICATION


1	BOLT (Ø1/4" x 32MM - BLK)		6PCS
2	LOCK WASHER (Ø1/4" - BLK)	3	6PCS
3	FLAT WASHER (Ø1/4" x 19 x 1.5MM - BLK)		6PCS
4	ALLEN WRENCH		1PC

ASSEMBLY INSTRUCTIONS



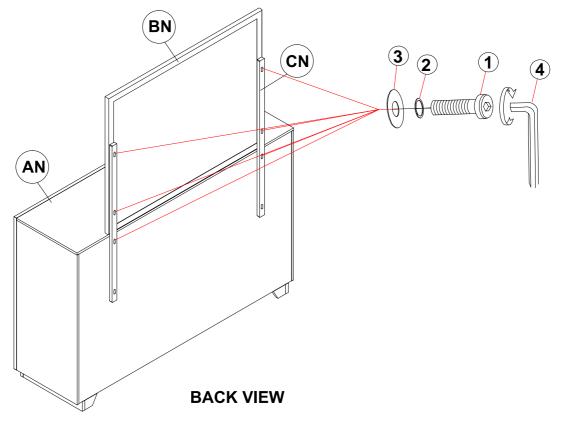

STEP 2 COMPLETE

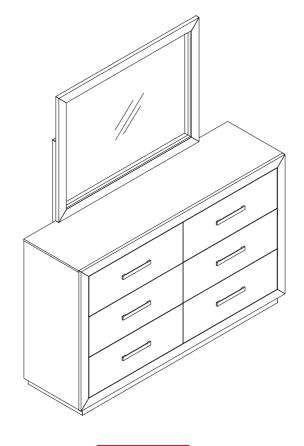




COASTERFURNITURE.COM

PAGE 3 OF 3



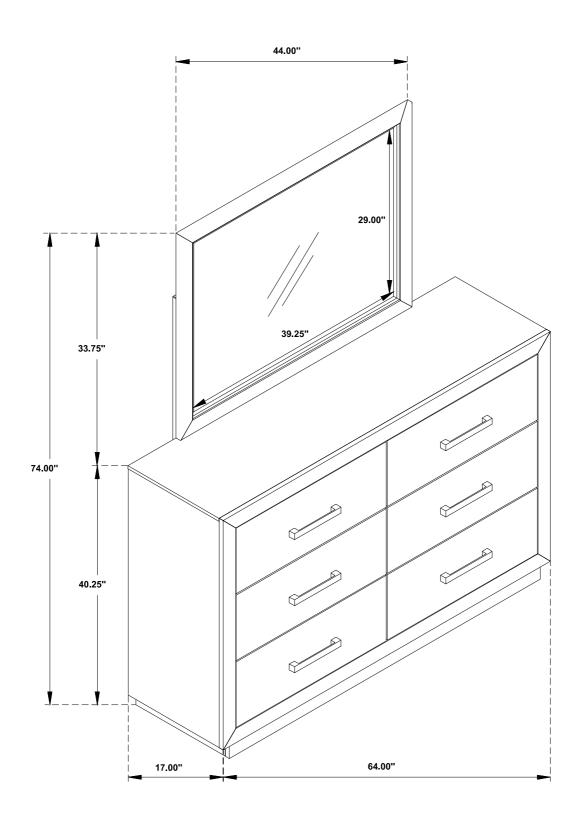





Fine Furniture for every stage of life

224855 Chest

REVISION 0: 08/15/2024 REVISION 1: 03/18/2025



ANTI-TIPPING INSTALLATION INSTRUCTIONS FURNITURE TIPPING RESTRAINT

WARNING

Injury may result from tipping furniture.


This restraint may protect against tipping furniture.

Do not allow children to climb on furniture.

This restraint is not a substitute for proper adult supervision.

Failure to detach this restraint before moving the furniture may result in injury and damage.

- 1. Attach one of the mounting brackets securely to the back edge of the unit, using the short screw.
- 2. Determine where the unit is to be placed, and mark the location on the wall for the other mounting bracket. The bracket on the wall needs to be approximately 2" below the bracket mounted to the edge of the unit.
- 3. Drill a hole in the wall. Insert the plastic wall anchor into the hole and if necessary, use a small block of wood and hammer to tap it in so that it's flush with the wall.
- 4. Attach the bracket over the plastic wall anchor using the long screw.
- 5. Place the unit against the wall, both brackets need to be facing each other.
- 6. Lace an end of the restraint strap through the hole in each bracket. Bring both ends together and rotate the thumb nut onto the threaded end until tight.
- 7. Ensure that the restraint strap is securely laced and locked.

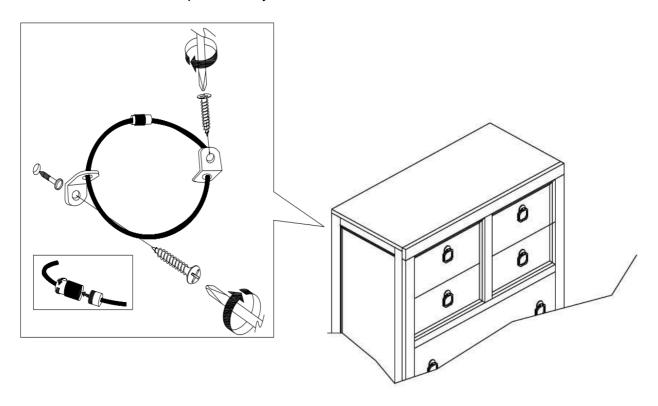





Inner Size of Drawer: 35.25"W X 12.75"D X 7.00"H X 0.50"T

