


ASSEMBLY INSTRUCTIONS

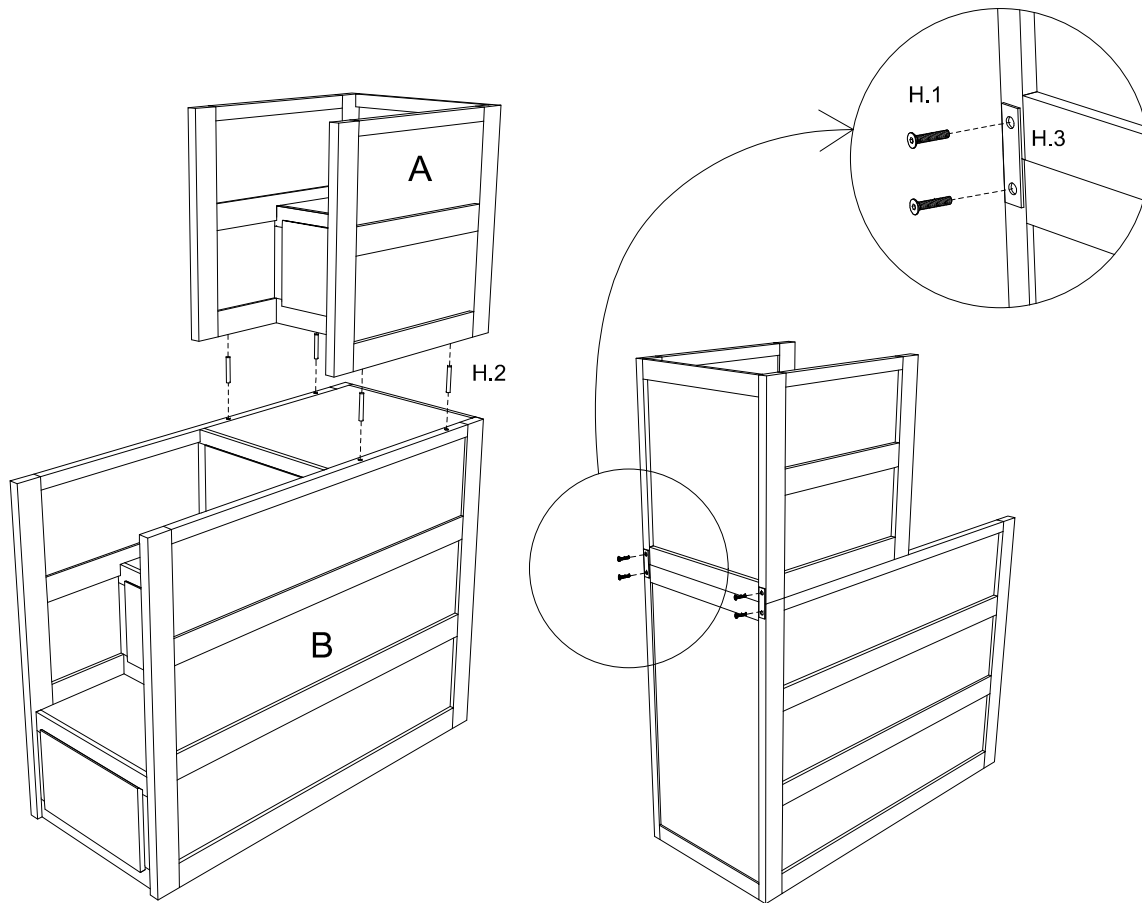

PART LIST			
No.	SKU	DESCRIPTION	Qty
A	MY-10700-X-C20	TOP Staircase	1
B	MY-10700-X-C19	BOTTOM Staircase	1


HARDWARE LIST			
No.	DESCRIPTION	SKU	Qty
H.1	WOOD SCREW 1"	PMY-10700-STCHW	4
H.2	METAL DOWELS		4
H.3	STAIR MENDING PLATES		2

TOOLS REQUIRED: DRILL OR SCREWDRIVER

Make sure you have all parts before beginning assembly. Two persons are needed for assembly. Do not fully tighten all bolts until assembly is completed.

1. Place four Metal Dowels (H.2) in the four holes in the Bottom Staircase (B)
2. Lift the Top Staircase (A) onto the Bottom Staircase (B), ensuring that the dowels are inserted in holes in the Top Staircase.
3. Place the two Mending Plates (H.3) with 4 Allen Bolts (H.1) at the back of the Top Staircase (A) and the Bottom Staircase (B), and tighten.

ASSEMBLY INSTRUCTIONS

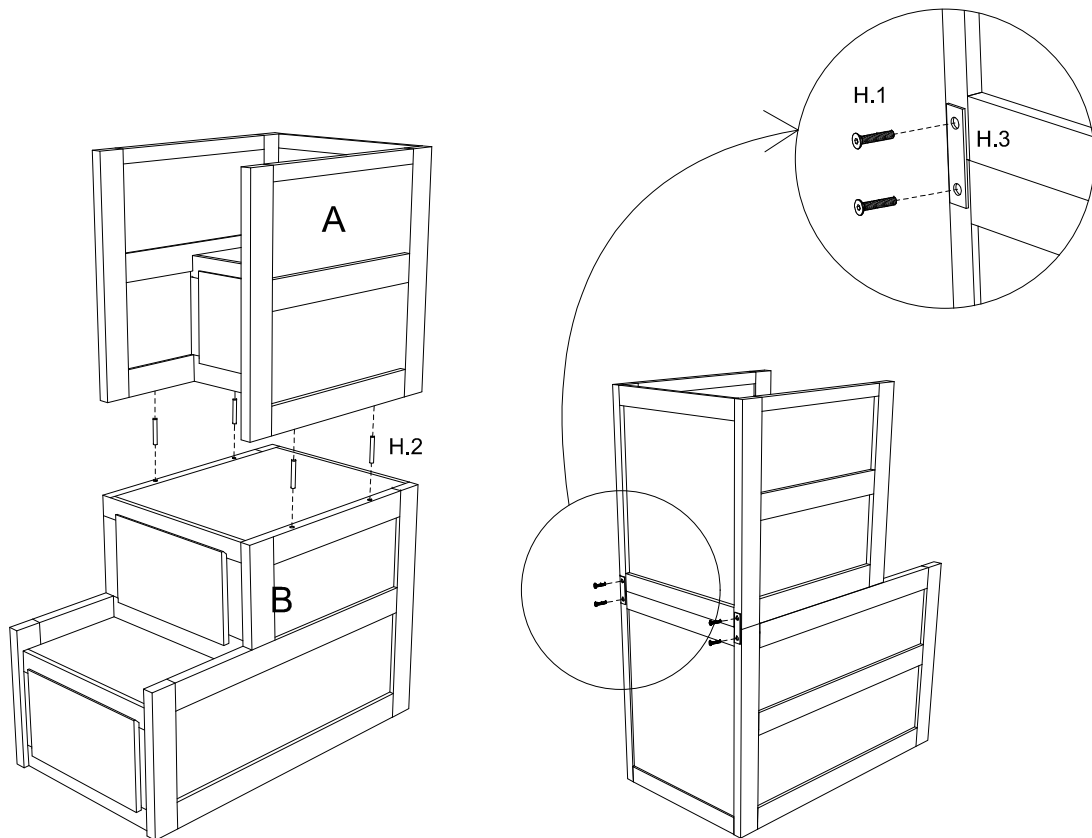

PART LIST			
No.	SKU	DESCRIPTION	Qty
A	MY-10700-X-C20	Jr. Loft TOP Staircase	1
B		Jr. Loft Bottom Staircase	1

HARDWARE LIST			
No.	DESCRIPTION	SKU	Qty
H.1	WOOD SCREW 1"	PMY-10700-STCHW	4
H.2	METAL DOWELS		4
H.3	STAIR MENDING PLATES		2



TOOLS REQUIRED: DRILL OR SCREWDRIVER

Make sure you have all parts before beginning assembly. Two persons are needed for assembly. Do not fully tighten all bolts until assembly is completed.



1. Place four Metal Dowels (H.2) in the four holes in the Jr. Loft Bottom Staircase (B)
2. Lift the Jr. Loft Top Staircase (A) onto the Jr. Loft Bottom Staircase (B), ensuring that the dowels are inserted in holes in the Jr. Loft Top Staircase.
3. Place the two Mending Plates (H.3) with 4 Allen Bolts (H.1) at the back of the Jr. Loft Top Staircase (A) and the Jr. Loft Bottom Staircase (B), and tighten.

OPTIONAL ITEMS COMBINATIONS

STAIRCASE CAN BE ON THE LEFT OR THE RIGHT SIDE OF THE BUNK BED

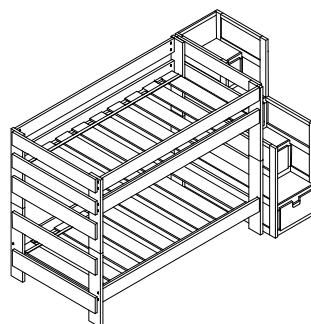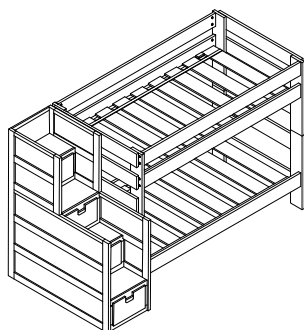

STAIRCASE CAN BE ON THE LEFT OR THE RIGHT SIDE OF THE BASIC LOFT

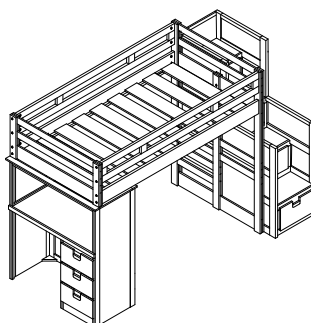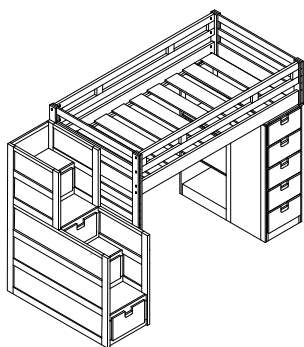

STAIRCASE CAN BE ON THE LEFT OR THE RIGHT SIDE THE SUPER LOFT

