


CUSTOM UPHOLSTERY PROGRAM




6 Easy Steps:

To define your personal style, choose your:

1 SERIES

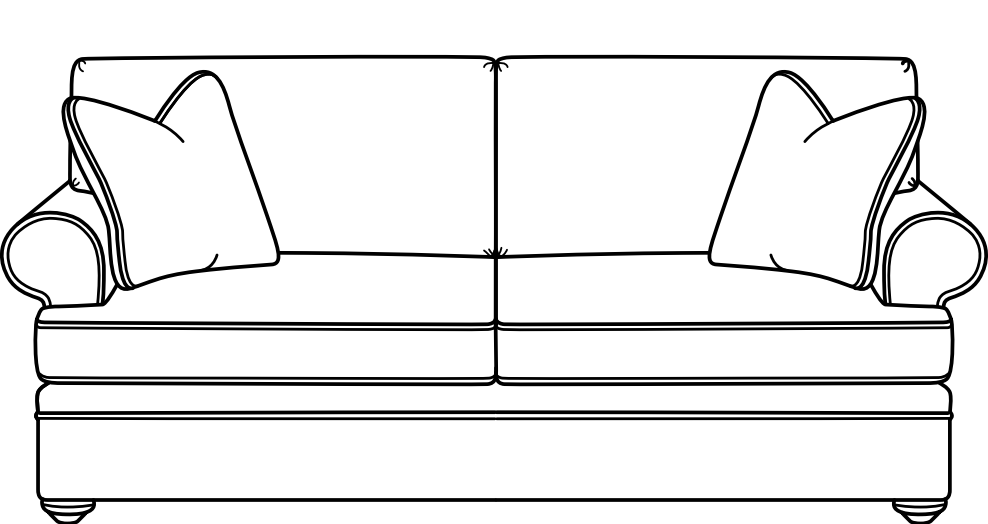


BRADBURY
(6000 SERIES)

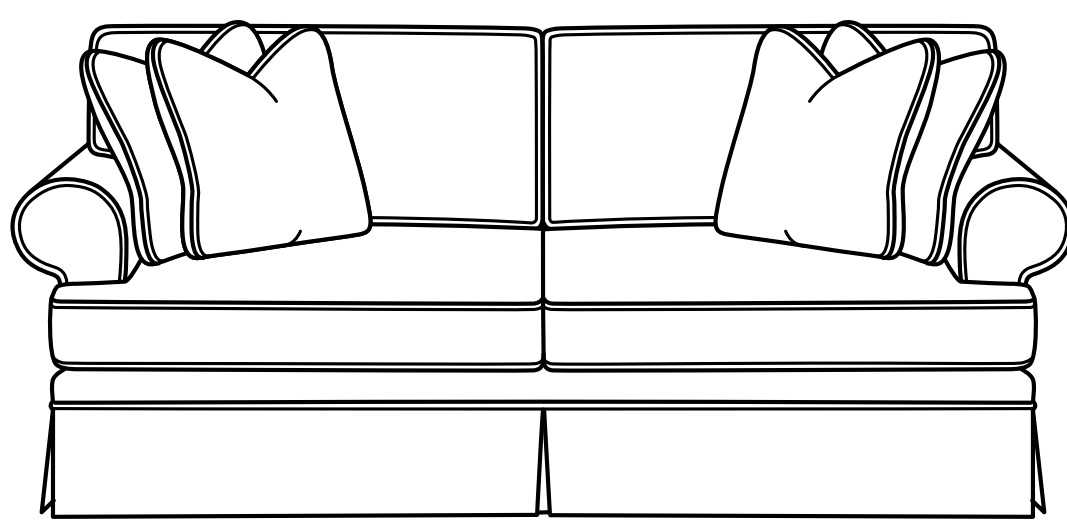


KENSINGTON
(7000 SERIES)


2 Arm Style

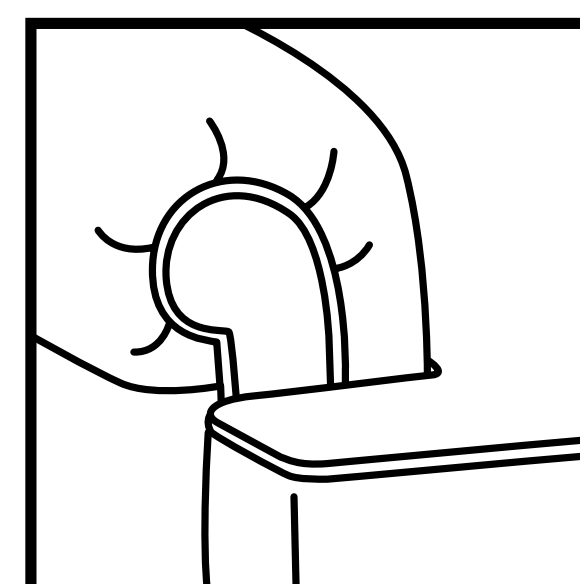

PANEL ARM

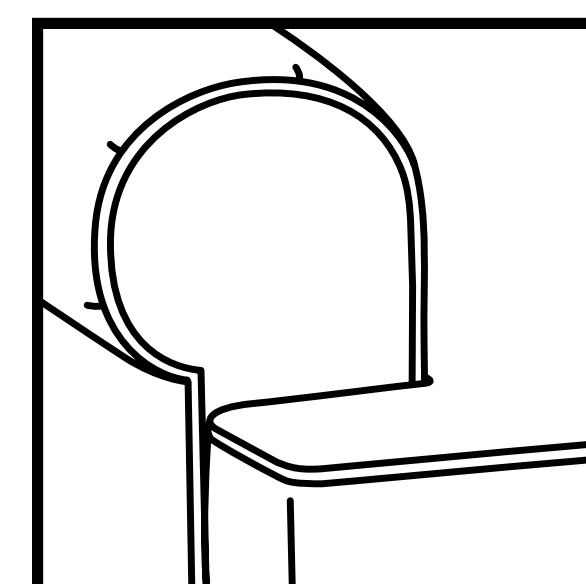


SOCK ARM

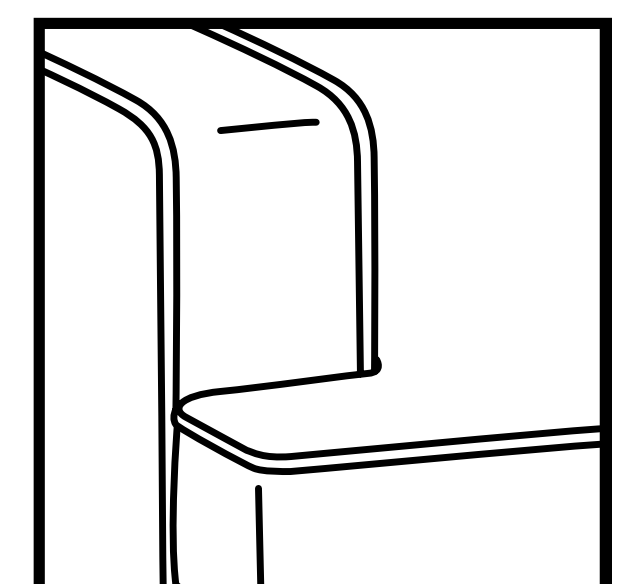


TRACK ARM

3 Back Style

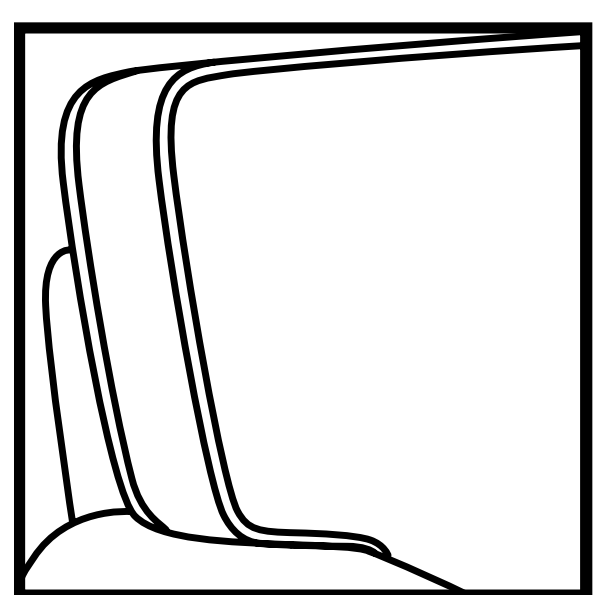


BOX BORDER

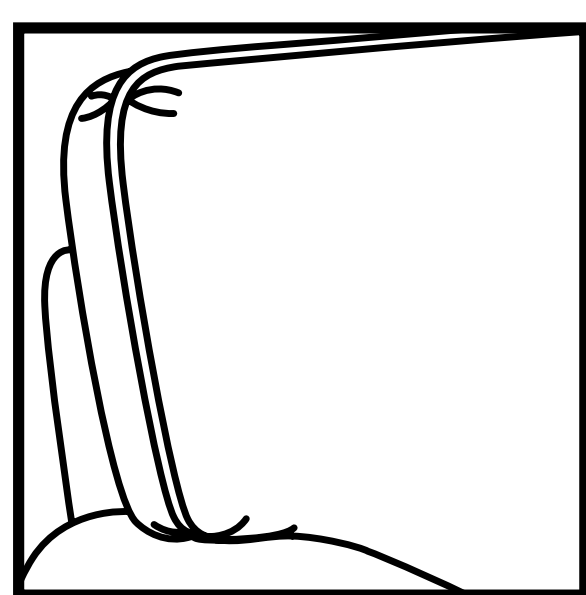


KNIFE EDGE


4 Base Style

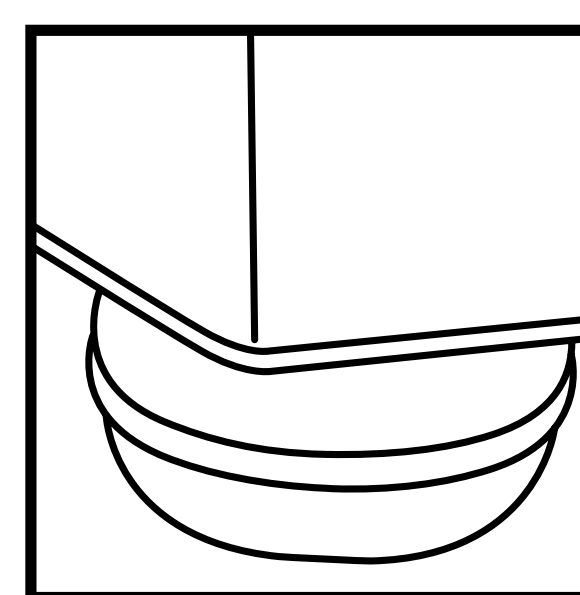

BUN FOOT

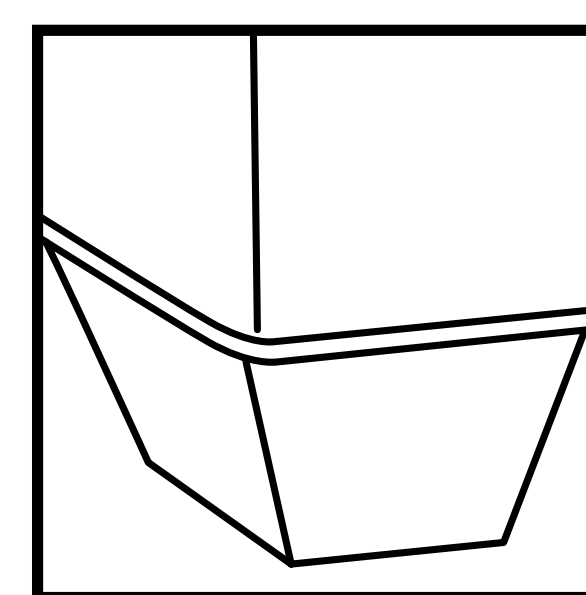


TAPERED
FOOT

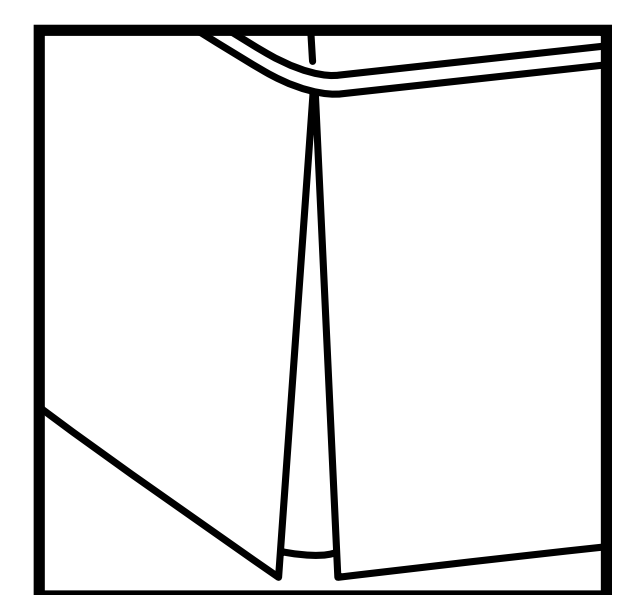


KICK PLEAT
SKIRT


5 Frame Type

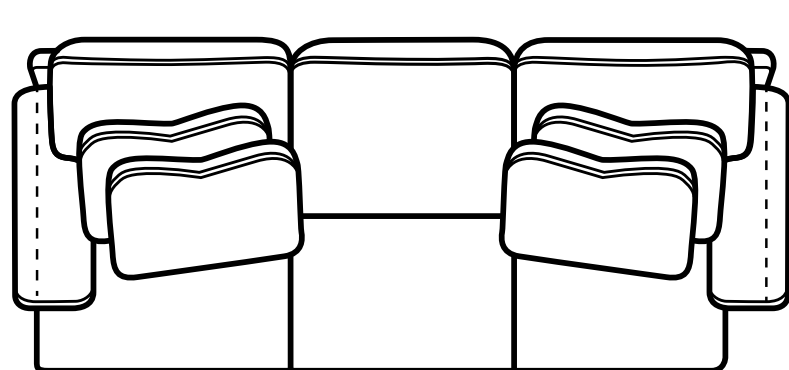


-011 Sofa

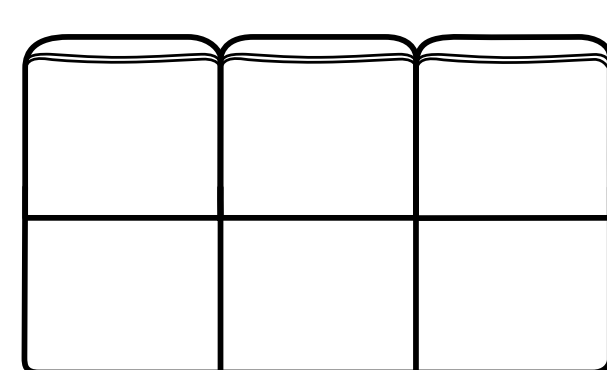


-082 Armless Sofa
-115 Armless Sleeper

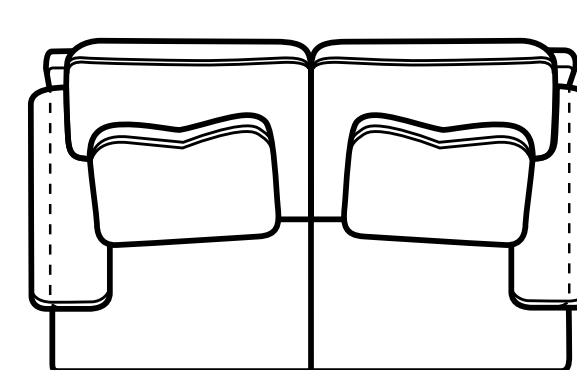


-019 Loveseat

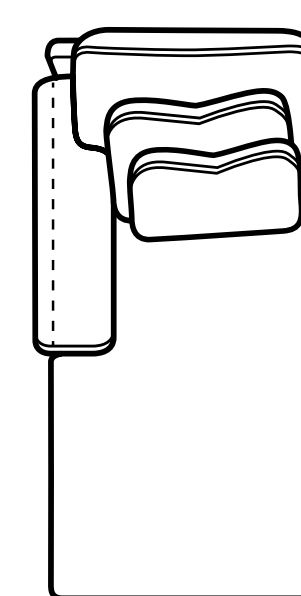


-087 LAF Chaise

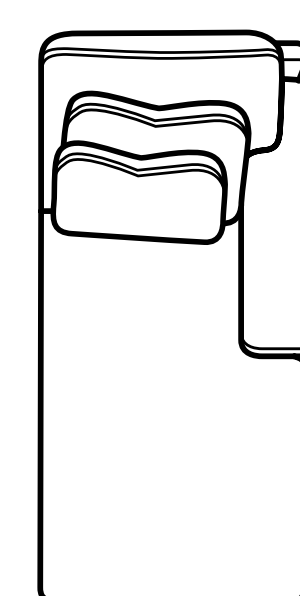


-085 RAF Chaise

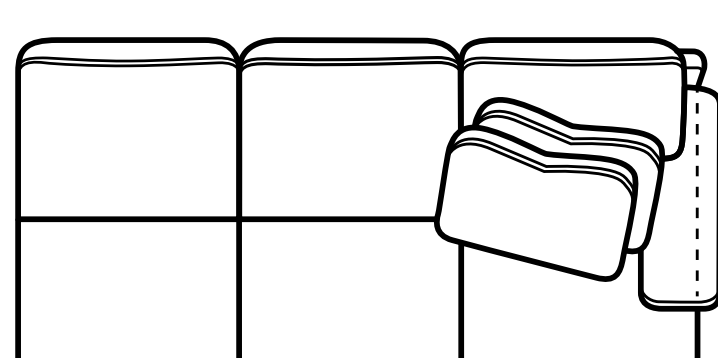


-080 RAF Sofa
-017 RAF Sleeper

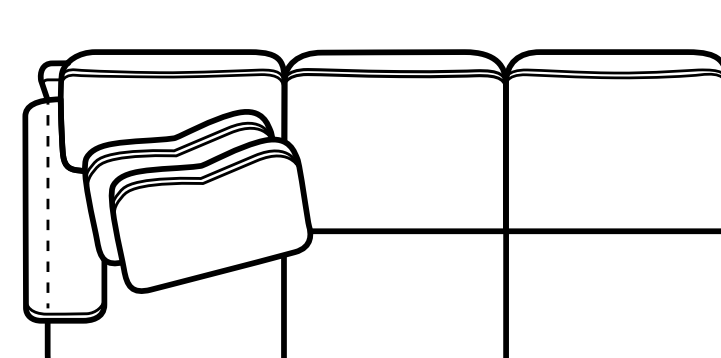


-081 LAF Sofa
-018 LAF Sleeper

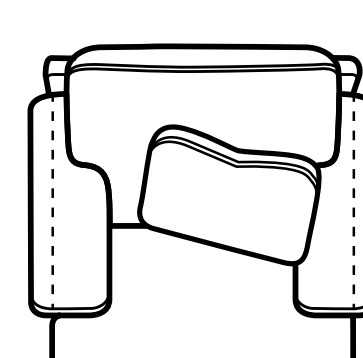


-001 Chair
-005 Swivel

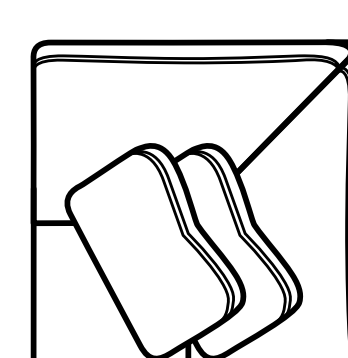


-090 Corner Chair

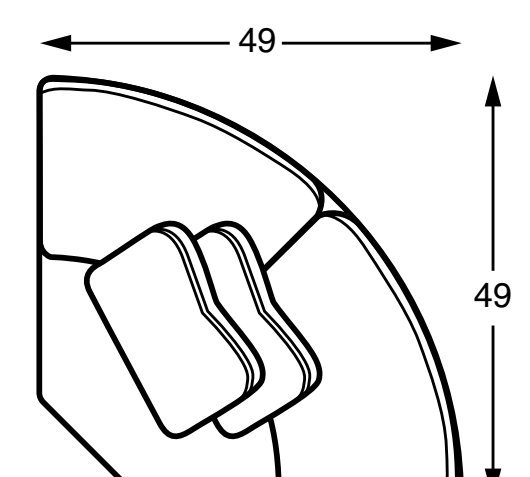


-095 Wedge

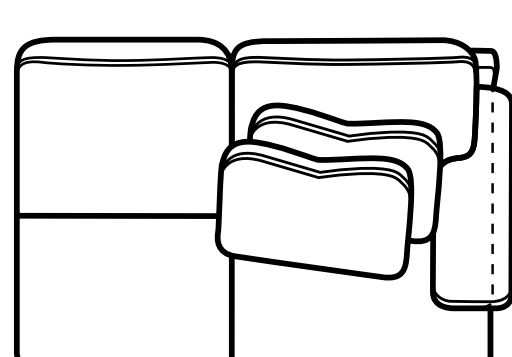


-084 RAF Loveseat

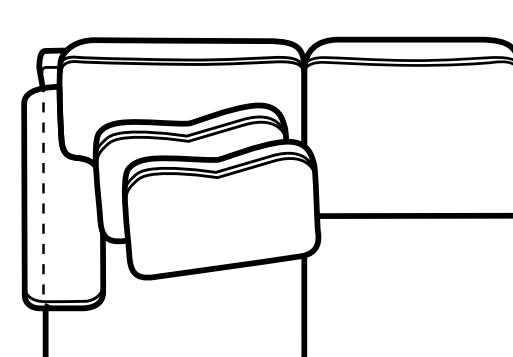


-086 LAF Loveseat

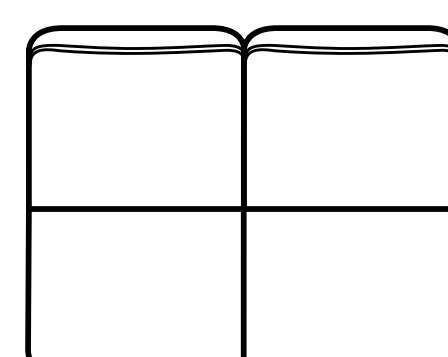


-083 Armless
Loveseat

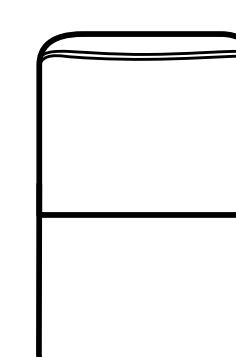


-091 Armless
Chair

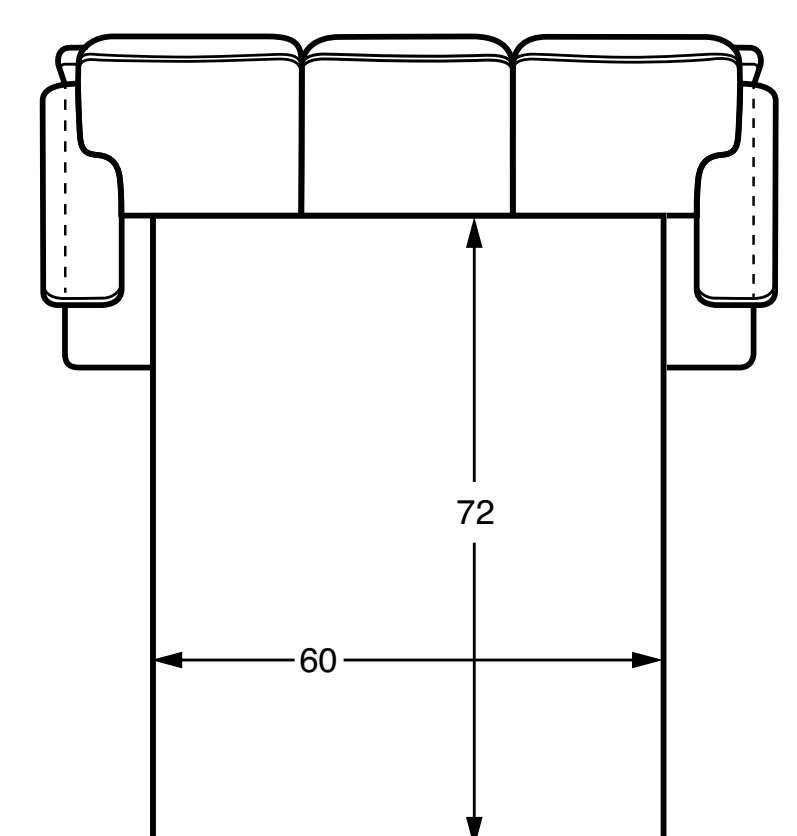


-015 Queen Sleeper

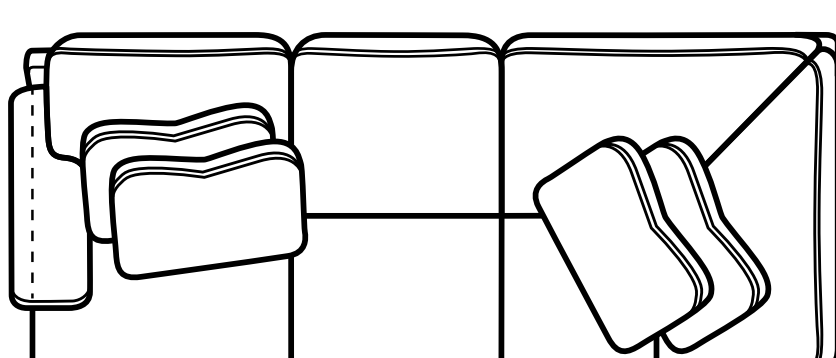

-0A3 LAF Corner Sofa

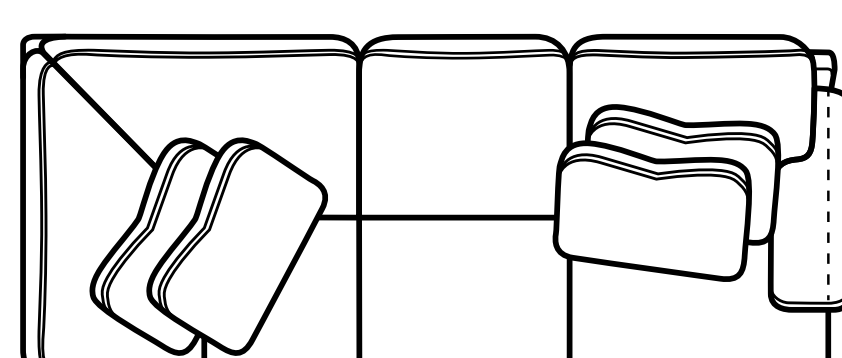


-0A4 RAF Corner Sofa




-009 Ottoman
-109 Ottoman w/ Casters

6 Seat Cushion Configuration

(Sofa & Sleeper only)

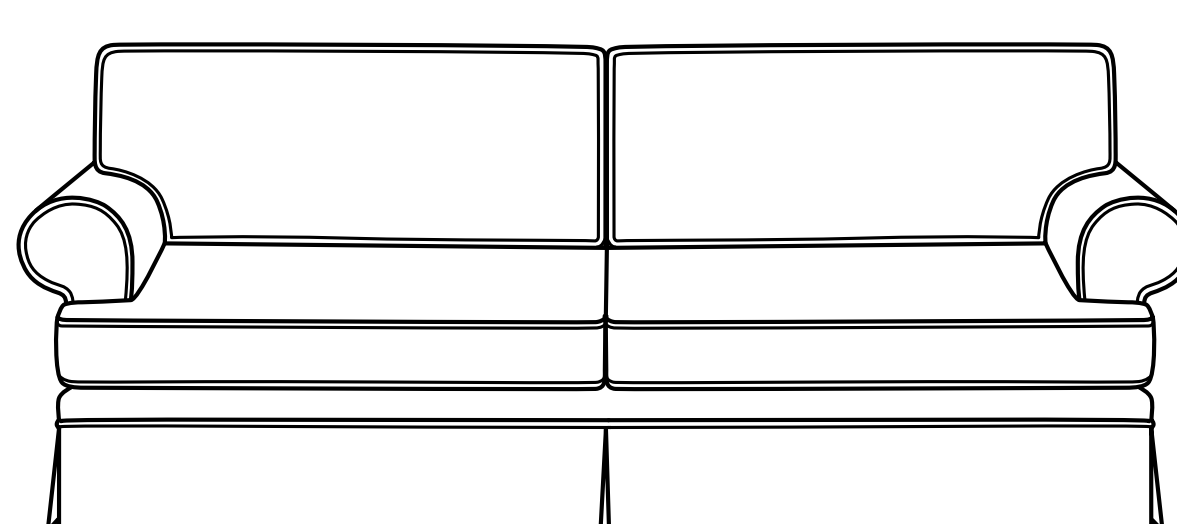

2 OVER 2

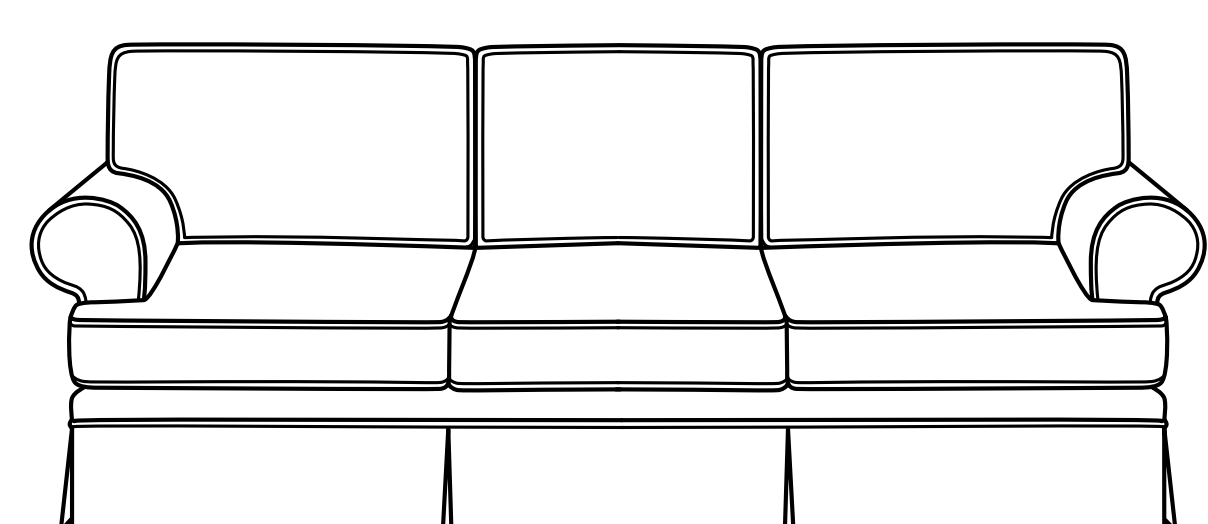

3 OVER 3