


ASSEMBLY INSTRUCTION

MODEL : 30025T/BD00494 **V2** TWIN BED (990 x 1905)MM







ACME FURNITURE

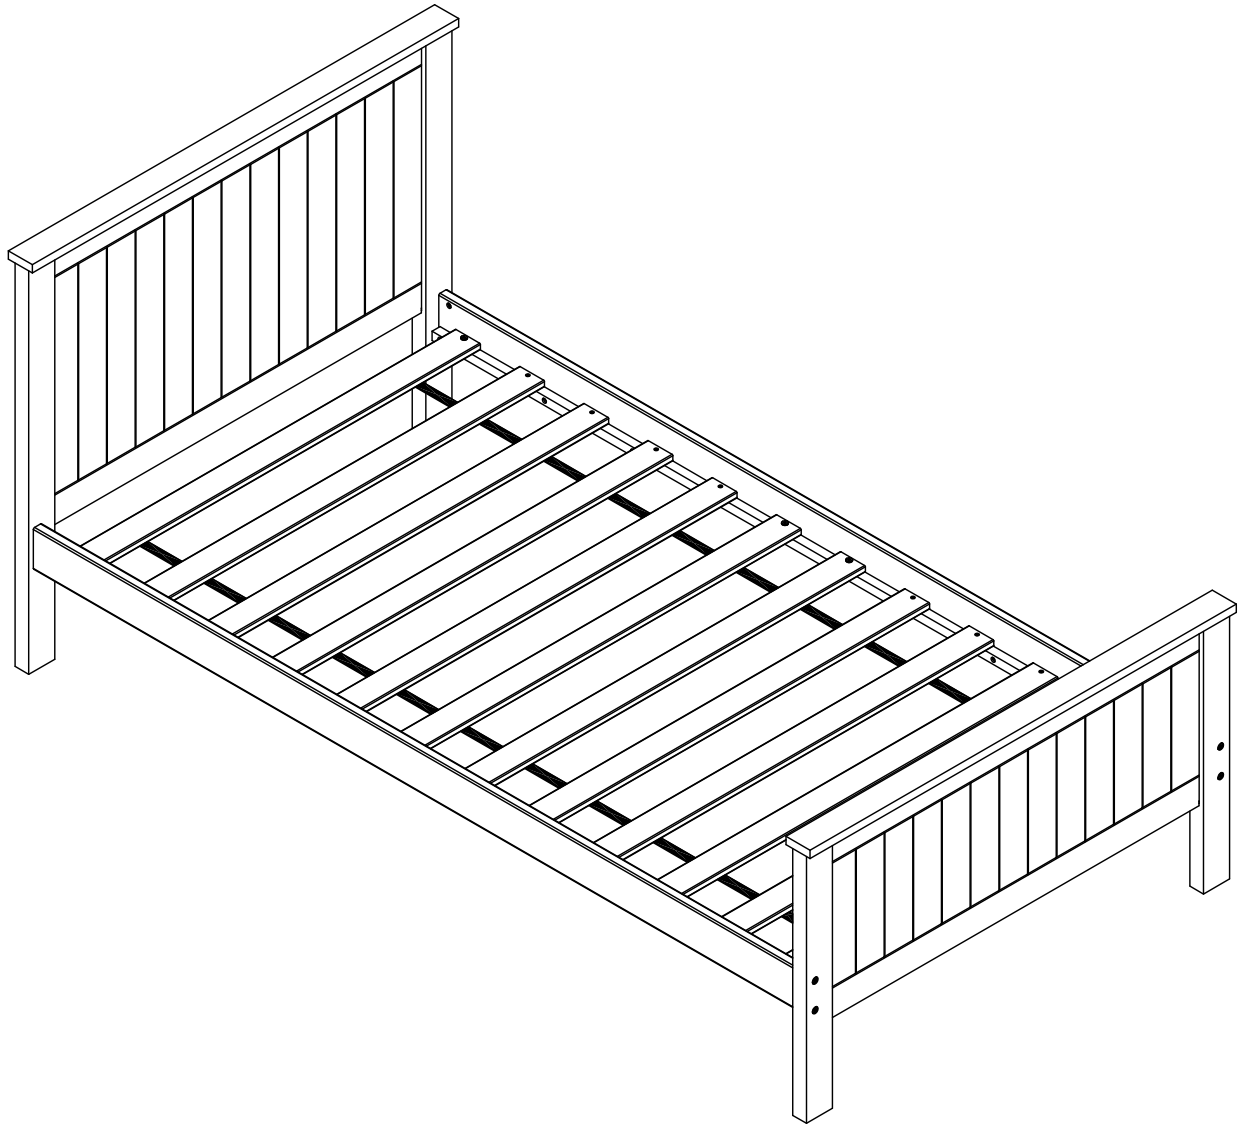

CARE & MAINTENANCE:

- Check all the components and fittings before start assembly.
- Assemble the item as close as possible to its final position (in the room of use).
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Assemble the parts will be easier with 2 persons.
- Periodically check all screws and fittings to ensure they are secure.
- The use of power drill is not recommended as this could damage the unit. Only use hand screwdrivers.
- DO NOT push the bed frame as this will damage the legs.
- Always lift the item with 2 persons to reposition.
- Keep any sharp objects away from the item.
- DO NOT drag objects across finished surfaces.
- Avoid placing your furniture in direct sunlight.
- Use clean, soft, dry, and lint-free cloth for the dusting process.

HARDWARE LIST (VP 408)

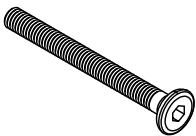
A 4 PCS  PLASTIC DOWEL (M10 x 35MM)	B 8 PCS  JCBC BOLT (M6 x 60MM)	C 8 PCS  JRN NUT (M6 x 13MM)
D 8 PCS  JCBC W SCREW (M7 x 32MM)	E 16 PCS  CSK C/B SCREW (M4 x 32MM)	F 1 PC  ALLEN KEY (M4 x 60MM)




Do not recommend the use of power drills/drivers for inserting bolts/screws as this could damage the unit.

Tools Required :
Crosshead Screw Driver


PART LIST

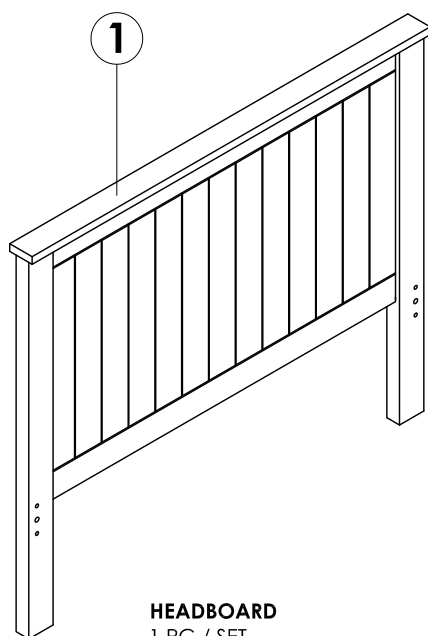


HEADBOARD
1 PC / SET
(CARTON 1 OF 2)

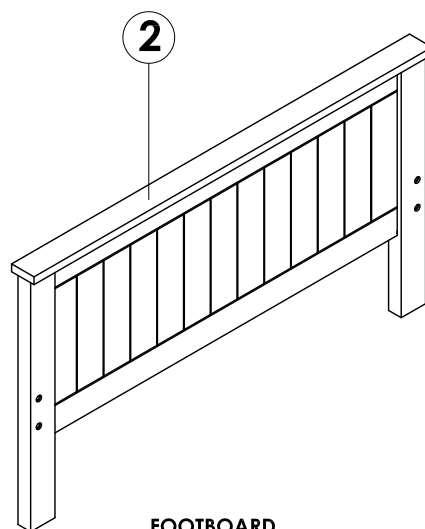


FOOTBOARD
1 PC / SET
(CARTON 1 OF 2)

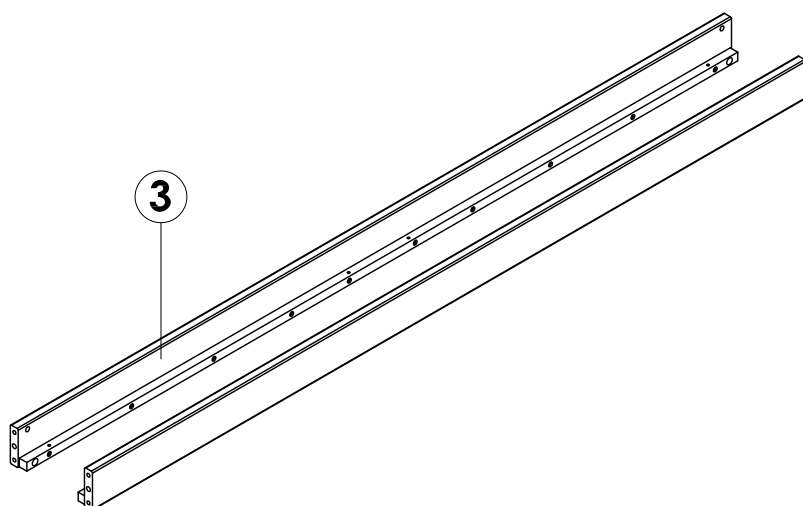

SIDE RAIL
2 PCS / SET
(CARTON 2 OF 2)

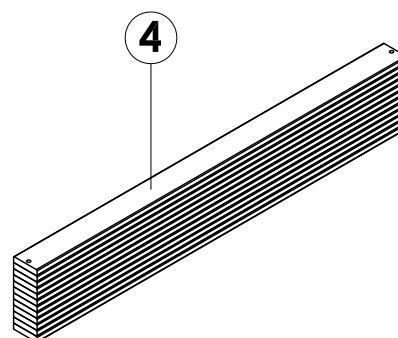


WOODEN SLAT
12 PCS / SET
(CARTON 1 OF 2)

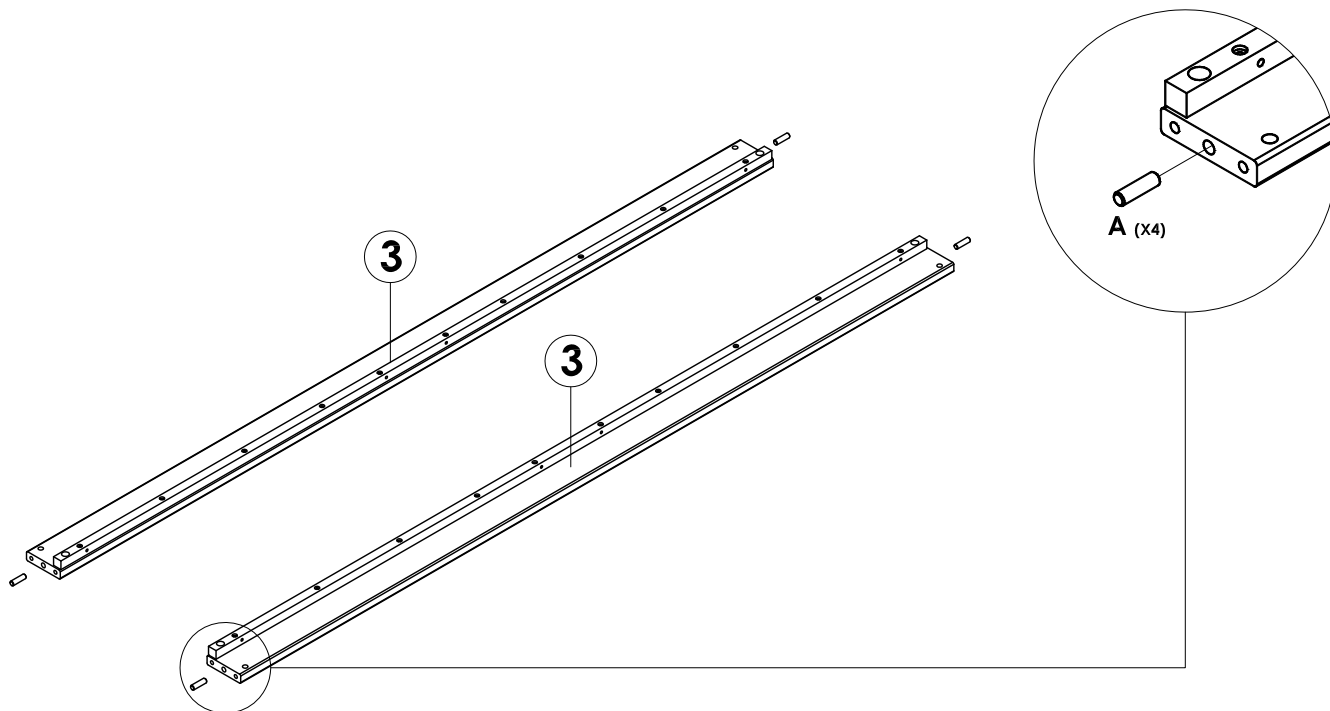

STEP 1

Insert **(A)** into Ø10MM holes on both **Side Rail**.

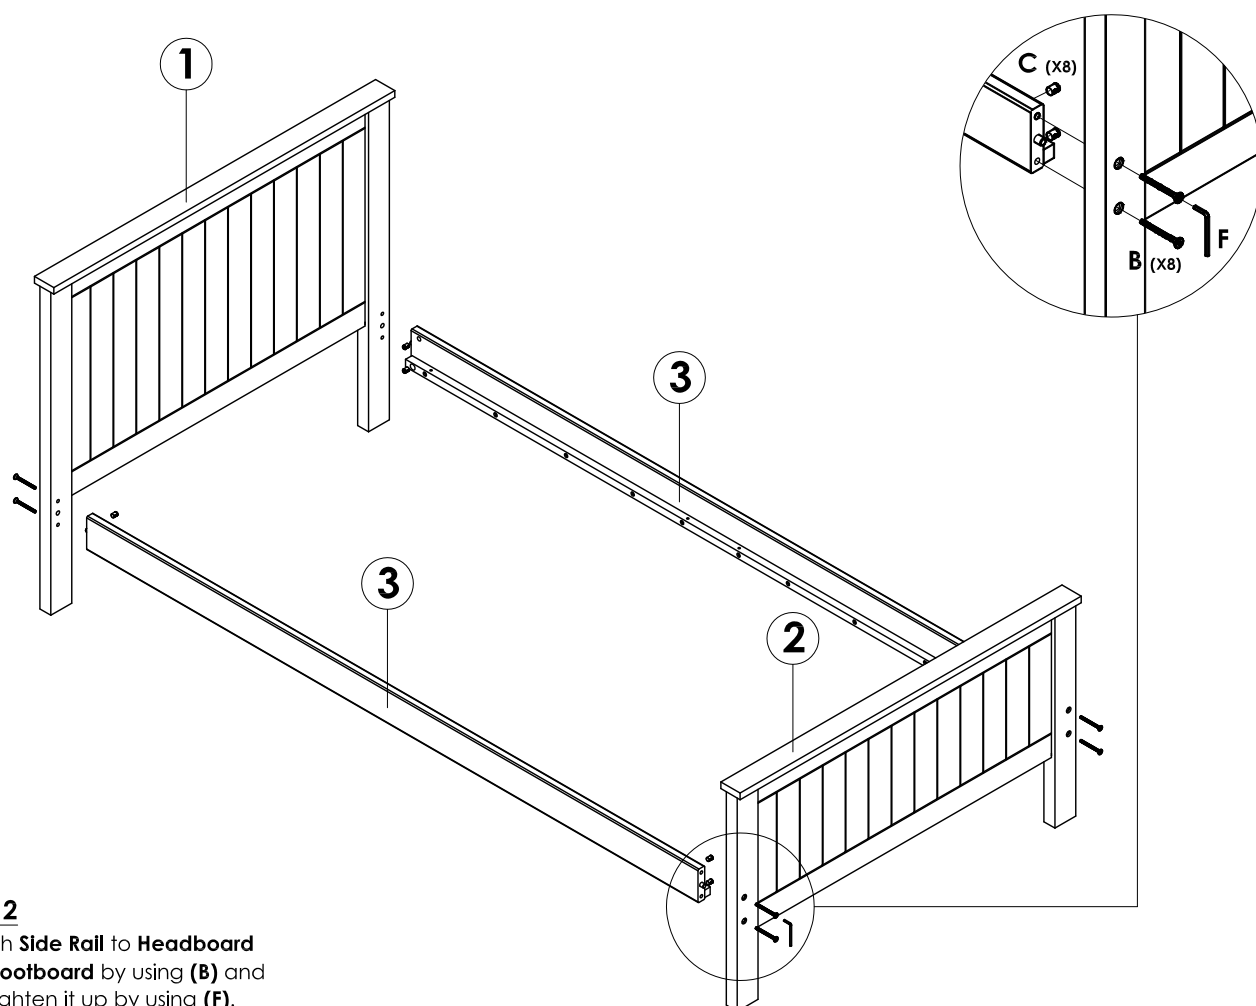

STEP 2

Attach **Side Rail** to **Headboard** and **Footboard** by using **(B)** and **(C)**, tighten it up by using **(F)**.

