

# ASSEMBLY INSTRUCTIONS

## ITEM #: B285-10HB/10FB/10/12R QUEEN PANEL BED




Thank you for purchasing this product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment.

**Before You Assemble:** Please read all instructions carefully before beginning assembly.





It is recommended that 2 people work together during assembly to prevent personal injury and to ensure that heavy or cumbersome parts are not damaged during the process.


**CAUTION:** For your safety, this product requires two people to lift.

### PARTS LIST:

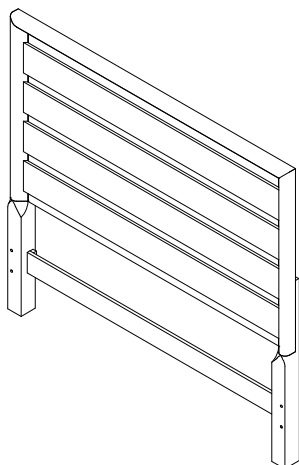
NO	DESCRIPTION	SKETCH	QTY
A	HEADBOARD		1PC
B	LEGS (LEFT & RIGHT)		2PCS
C	STRETCHER		1PC

### HARDWARE PACKAGE: B285-10HB-HDWR


NO	DESCRIPTION	SKETCH	SIZE	QTY
1	Allen key		4*59*23mm	1 pcs
2	Bolt		Ø5/16*40mm	10 pcs
3	Spring Washer		Ø5/16	10 pcs
4	Flat Washer		Ø5/16*19mm	10 pcs



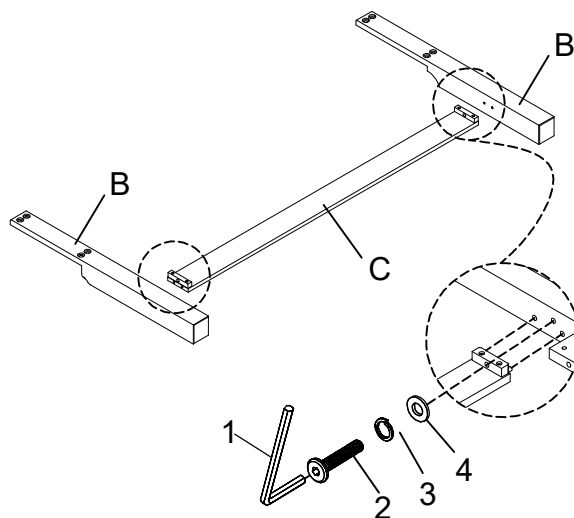**STEP 1** Attach stretcher (C) to the legs (B) by using allen key (1), bolt (2), spring washer (3) and flat washer (4)



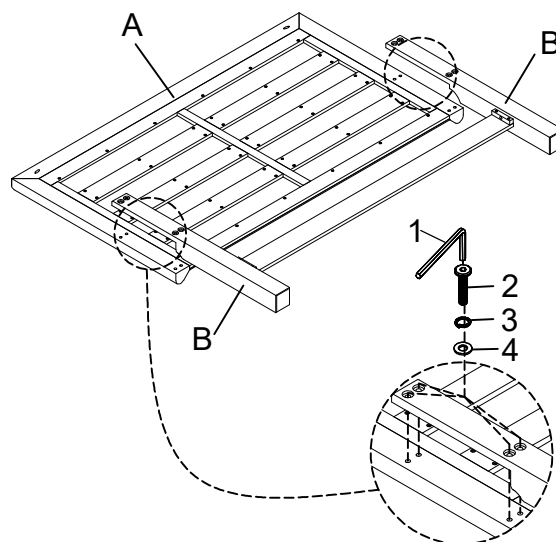**STEP 2** Attach the legs (B) to the headboard (A) by using allen key (1), bolt (2), spring washer (3) and flat washer (4)





# ASSEMBLY INSTRUCTIONS

## ITEM #: B285-10HB/10FB/10/12R QUEEN PANEL BED






Thank you for purchasing this product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment.

**Before You Assemble :** Please read all instructions carefully before beginning assembly.





It is recommended that 2 people work together during assembly to prevent personal injury and to ensure that heavy or cumbersome parts are not damaged during the process.

**CAUTION:** For your safety, this product requires two people to lift.


### PARTS LIST:

NO	DESCRIPTION	SKETCH	QTY
A	HEADBOARD		1PC
B	FOOTBOARD		2PCS
C	SIDE RAILS		2PCS
D	SLATS		5PCS
E	CENTER SUPPORT		5PCS

### HARDWARE PACKAGE: B285-12/12R-HDWR


NO	DESCRIPTION	SKETCH	SIZE	QTY
1	Open wrench		Ø12mm	1 pcs
2	Thread bolt		Ø5/16*100mm	8 pcs
3	Curved slotted Washer		Ø5/16*25*16*2mm	8 pcs
4	Double hex nut		Ø5/16*12mm	8 pcs

### HARDWARE PACKAGE: B285-10FB-HDWR

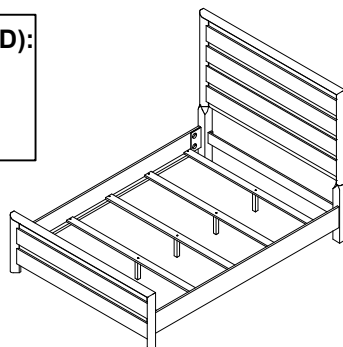
NO	DESCRIPTION	SKETCH	SIZE	QTY
5	Screw		8*25mm	10 pcs

### TOOLS REQUIRED (NOT PROVIDED):


PHILLIPS SCREWDRIVER



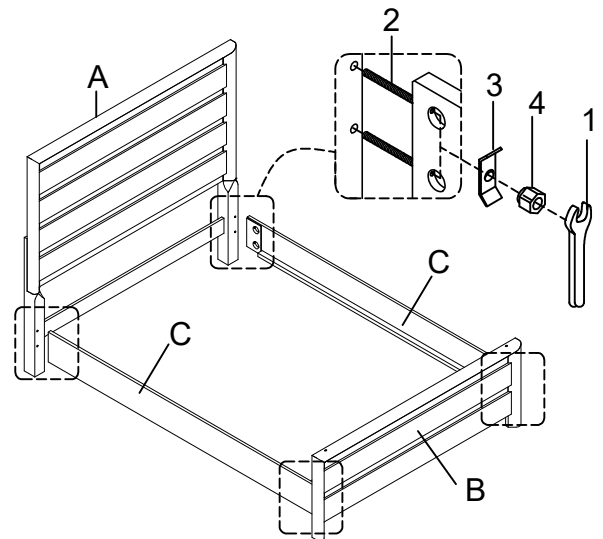**STEP 3** Attach the side rails (C) to headboard (A) and the footboard (B) using Open wrench (1), thread bolt (2), Curved slotted washer (3) and Double hex nut (4)



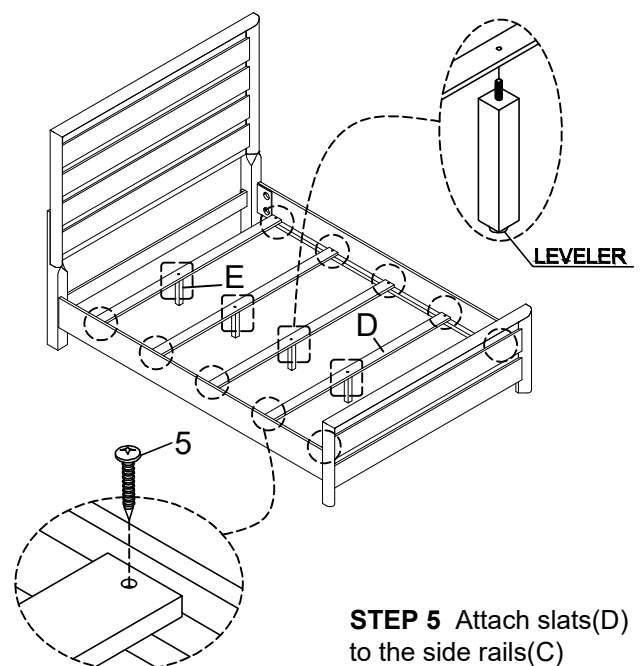**STEP 4** Screw in the center supports (E) on each slat (D)



**STEP 5** Attach slats(D) to the side rails(C) with Screws (5)