




#### **BOX #1**

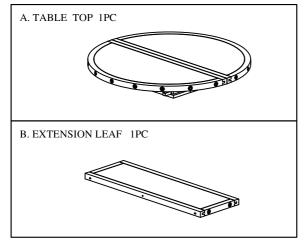


#### **BOX #2**

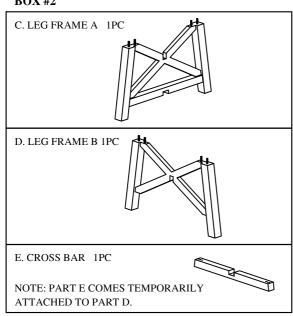

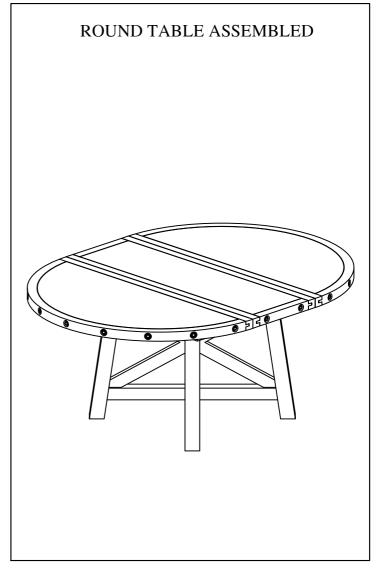

#### **HARDWARE PACKED IN BOX #1**

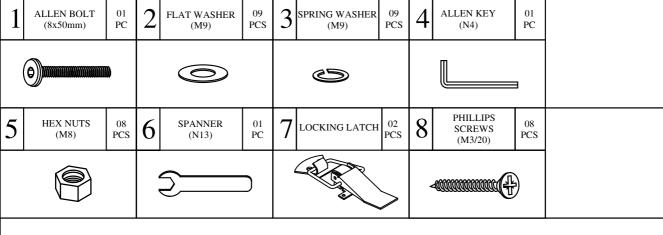








**TOOL REQUIRED:** PHILLIPS-HEAD SCREW DRIVER (NOT PROVIDED)




#### **STEP 1:**

REMOVE CROSS BAR (E) FROM LEG FRAME B (D) AS SHOWN BELOW. SAVE BOLTS AND WASHERS FOR LATER USE IN THE ASSEMBLY STEPS.

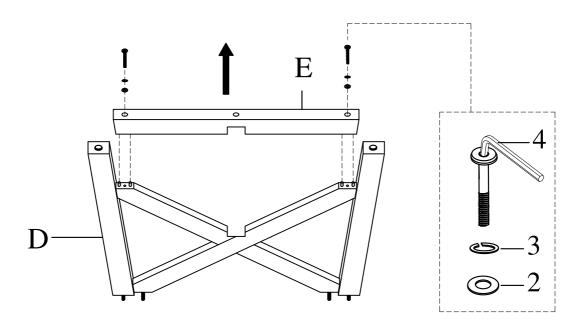


#### **STEP 2:**

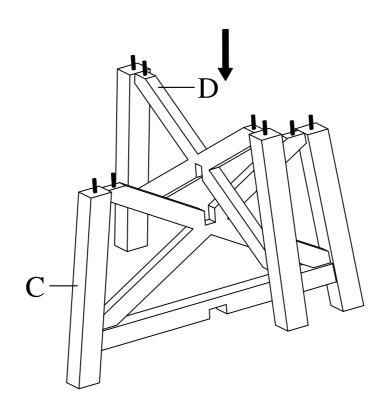




### **STEP 3:**

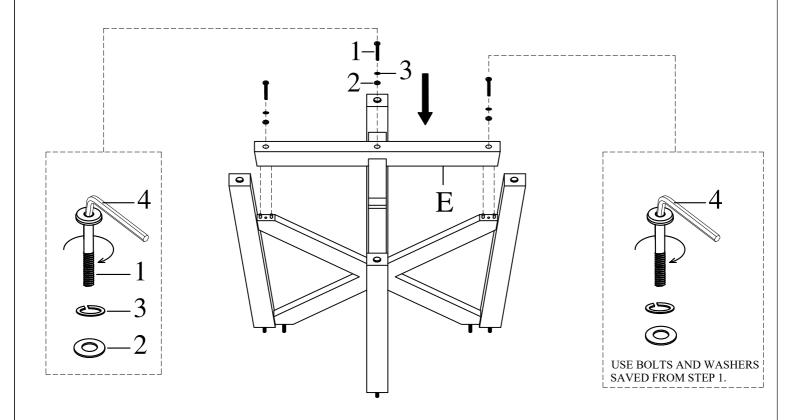


### **STEP 4:**

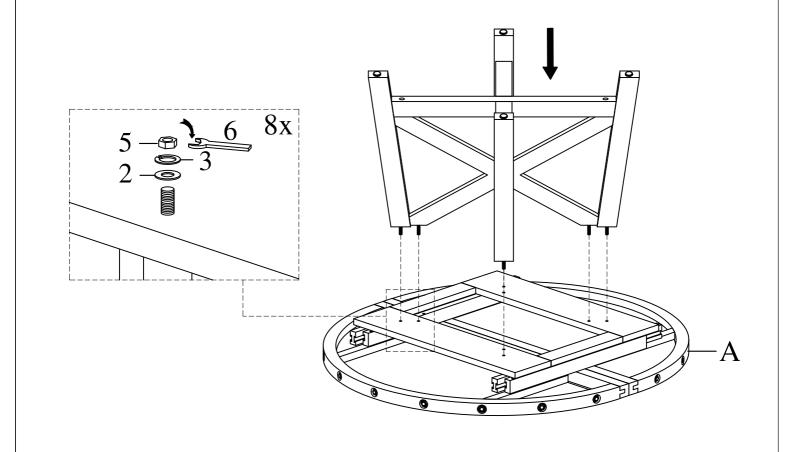




### **STEP 5:**

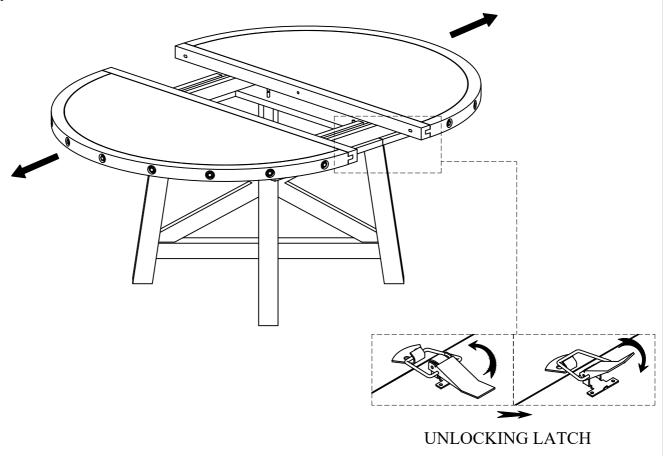



### STEP 6:

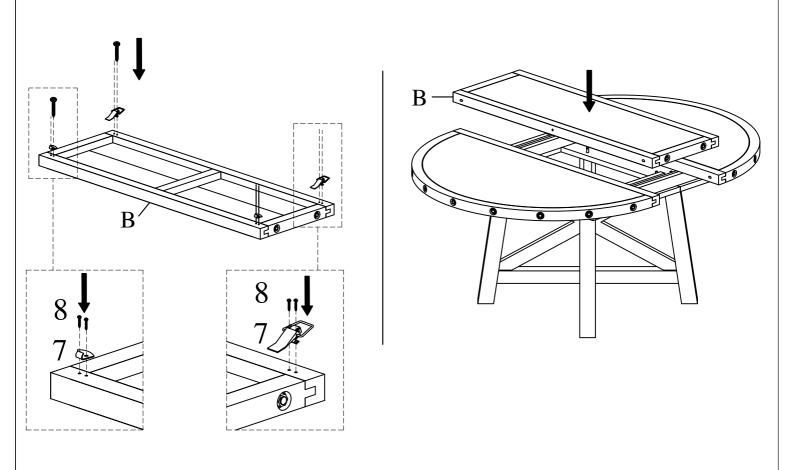



### **STEP 7:**

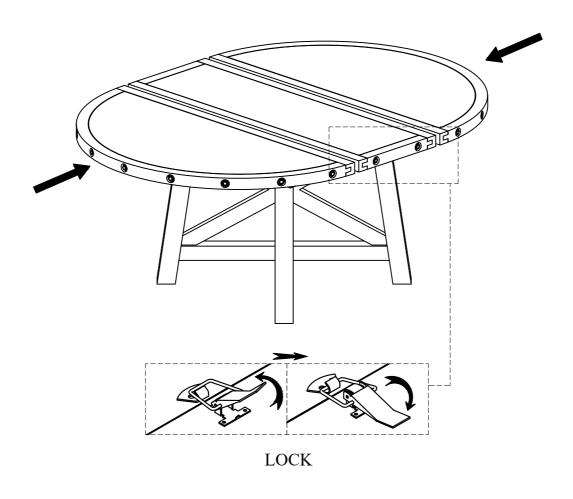

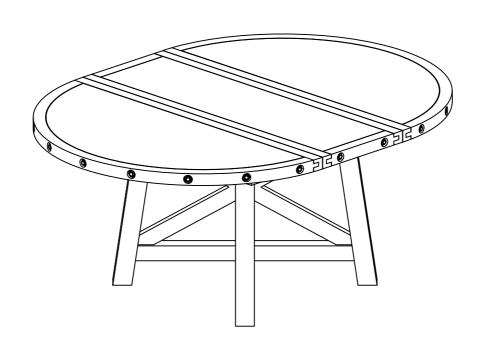

ASSEMBLY COMPLETE.