


DESCRIPTION	#PZ
Joint connector nut $\frac{1}{4}$ x 17mm	4
Joint connector bolt $\frac{1}{4}$ x 1 $\frac{1}{2}$ "	4
Pan head screw 6 x $\frac{3}{4}$	18
Allen Key $\frac{5}{32}$ "	2

1


JOINT CONNECTOR  
NUT  $\frac{1}{4}$ " X 17mm

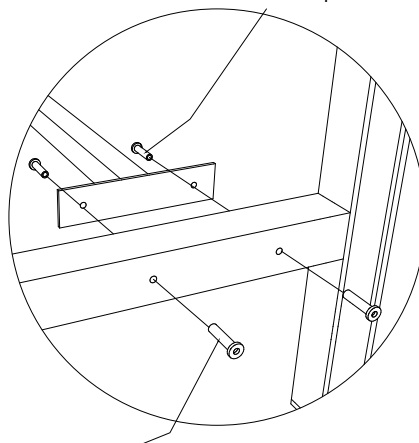


JOINT CONNECTOR  
BOLT  $\frac{1}{4}$ " X 1  $\frac{1}{2}$ "

2

PAN HEAD  
SCREW 6 X  $\frac{3}{4}$ "

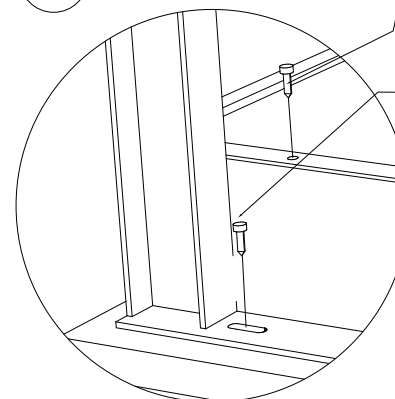

PAN HEAD  
SCREW 6 X  $\frac{3}{4}$ "

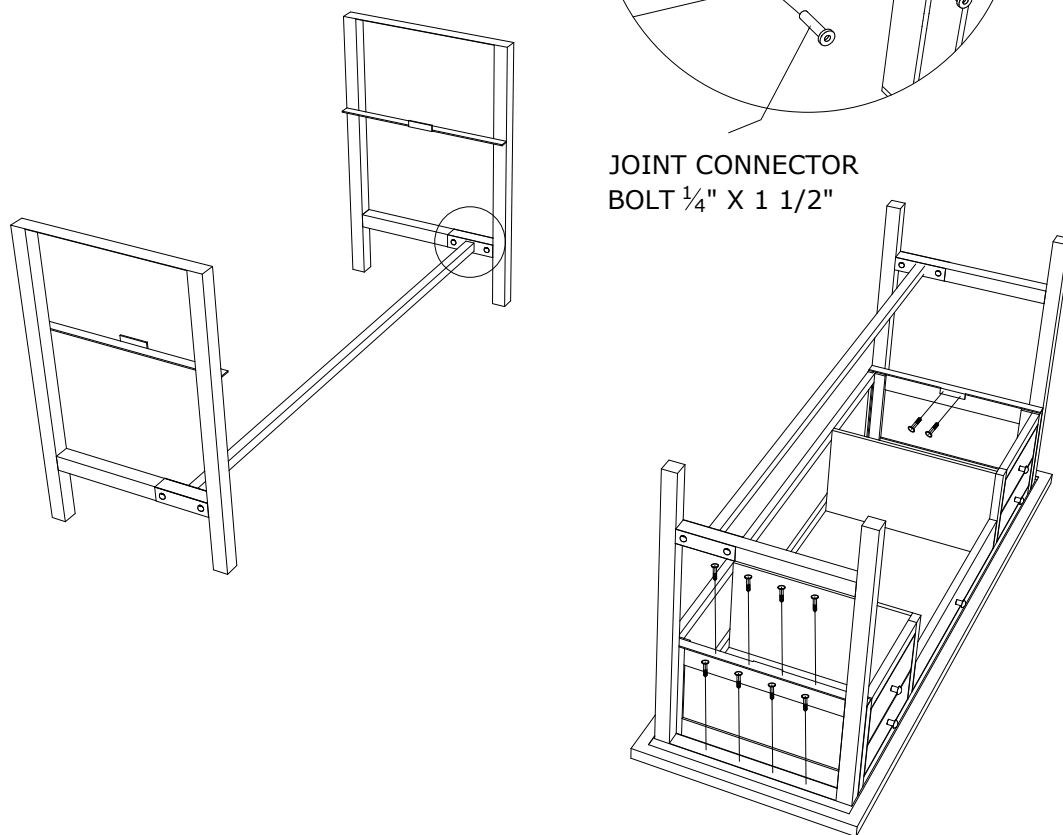

- 1.- Unpacking all the pieces and have ready an allen tools for assembling.
- 2.- Use a flat and clean area for assembling.
- 3.- Adjust the right leg first and then, the left leg.
- 4.- Assembling the crossbar, and insert the joint connector as shown in fig 1 and then place the screws in each place, as shown un fig. 2
- 5.- For Easy Assembling turn back the Wood Desk Piece, like show in the drawing, and adjust with screws, fit and center the piece and screw, and then screw Strong all the base bolts.
- 6.- With help, turn to the original position the Desk assembling complete and put in the usable position.



INTERNATIONAL  
FURNITURE DIRECT, LLC

## ASSEMBLING DIRECTIONS

I-DSK-E007

BY:IFD



ESCRITORIO 360		
ITEM	DESCRIPTION	#PZ
1TUER006	Tuerca Perno Union $\frac{1}{4}$ " x 17mm PINTAR NEGRO	4
1TOR043	Tornillo Perno Union $\frac{1}{4}$ " x 35mm PINTAR NEGRO	4
1PIJ035	Pija Cabeza Sarten 6 x $\frac{3}{4}$ "	18
1HER250	Llave Allen $\frac{5}{32}$ "	2