


*This is a simplified install diagram for educational purposes. Do not use as actual installation instructions. This product may only be installed by a licensed electrician.

MIW OUTLET CUTOUT TEMPLATE

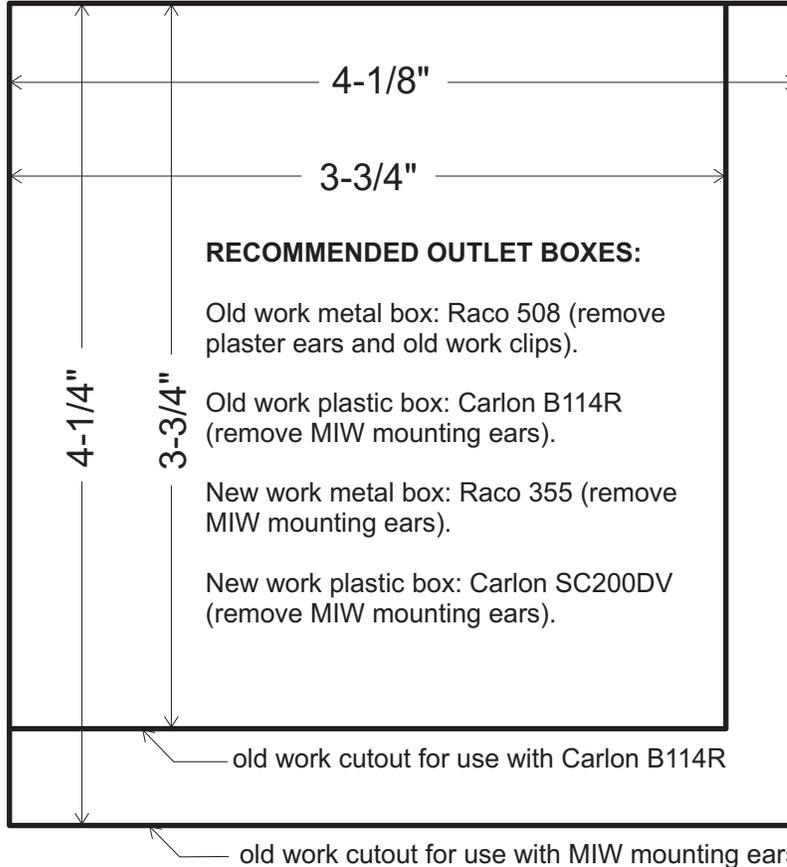

NOTE:

When using the Carlon B114R with the MIW NEMA 5-15R outlet, the Carlon NM wire retention tabs will have to be pushed to the outside of the outlet box in order to clear the outlet enclosure.

NM wire retention tabs.

