
ASSEMBLY INSTRUCTION FOR ACME FURNITURE

MODEL# OF00001-1/OF00001-2/OF00002-1/OF00002-2

Thank you for purchasing the quality product.Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment.Separate, identify and count all parts and metal hardware.Compare with all parts list to be sure all parts are present.if any part(s) are missing or damaged, please contact your local furniture dealer.For efficient and speedy service, please indicate the model number and code letter of part(s) needed.

Do not fully tighten screws until fully assembled

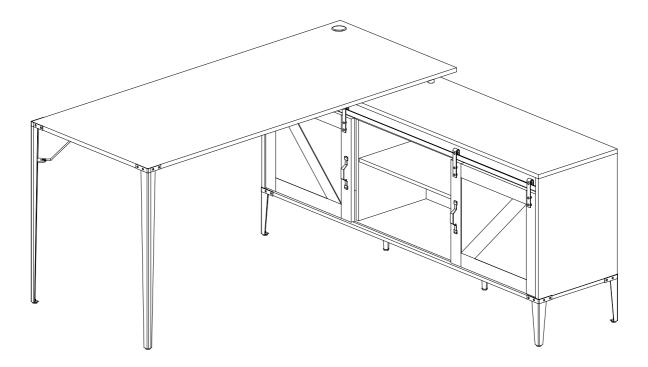


Attention:

***Some number parts listed on the instruction sheet may not be in parts bag as they may already be assembled. Carefully check parts and packing materials prior to ordering replacements.

General Assembly Guidelines

- I. Ensure that all parts and hardware are available before beginning assembly.
- II. Follow each step carefully to ensure the proper assembly of this product.
- III. Two people are recommended for ease in the assembly of this product.
- IV. The three main types of hardware used to assemble this product are: wood dowels, screws and bolts.
- V. The provided glue is to secure wood dowels in place. When first inserting dowels, locate the appropriate hole for the dowel, place a small amount of glue in the hole and insert the dowel. Wipe away excess glue immediately.




In future assembly steps when dowels are necessary to attach assembly parts together, place a small amount of glue on the end of the dowel before attaching parts together. Wipe away excess glue immediately.



VI. A Phillips head screwdriver is required for the assembly of this product.




VII. Power tools should not be used to assemble this product.




Parts List 3 = ⁰ 9 ⁰ 9 □ 9 P.3/14

Hardware List


А	જ	Ø1/4"x12mm	Bolt	36	pcs	0		M4mm	Hex Key	1	pcs
В	•	Ø1/4"x25mm	Bolt	9	pcs	Р)		Glue tube	1	pcs
С		Ø1/4"x45mm	Bolt	3	pcs	Q			Hole cover	1	pcs
D	(c) annumb	Ø3.5x16mm	Screw	12	pcs	R	80 1		Hanging wheel	4	pcs
Е			Corner code	2	pcs	S			Positioning iron	4	pcs
F	S mmm	Ø4x22mm	Screw	4	pcs	Т			Handle	2	pcs
G			Plastic wedge	12	pcs	U	•	Ø1/4"x15mm	Bolt	10	pcs
Н	(3)	Ø3x17mm	Screw	12	pcs	V			Nut	2	pcs
I	Œ		Shelf support pin	4	pcs	W	2		Wrench	1	pcs
J	9	Ø6x35mm	Cam bolt	20	pcs	Χ			Bolt	3	pcs
K		Ø15x11mm	Cam lock	20	pcs						
L	0		Sticker	20	pcs						
М		Ø8x30mm	Wooden dowel	26	pcs						
N	<u></u> @	Ø6x50mm	Screw	10	pcs						

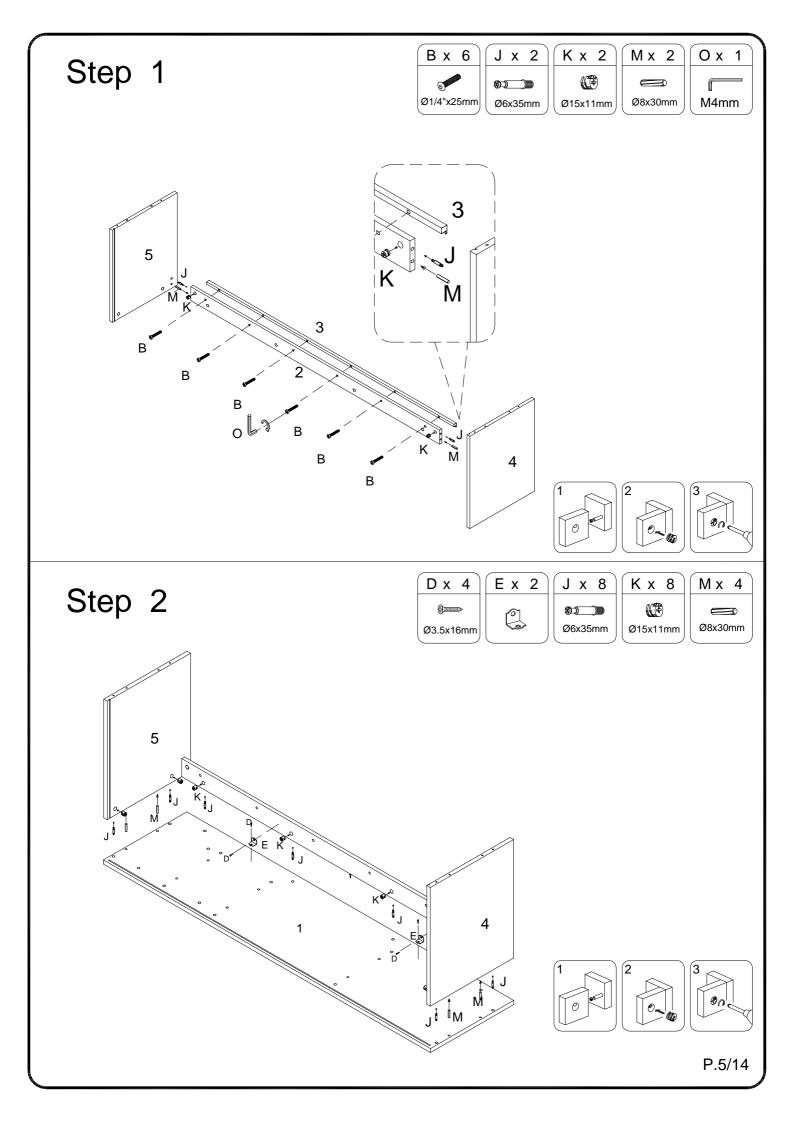


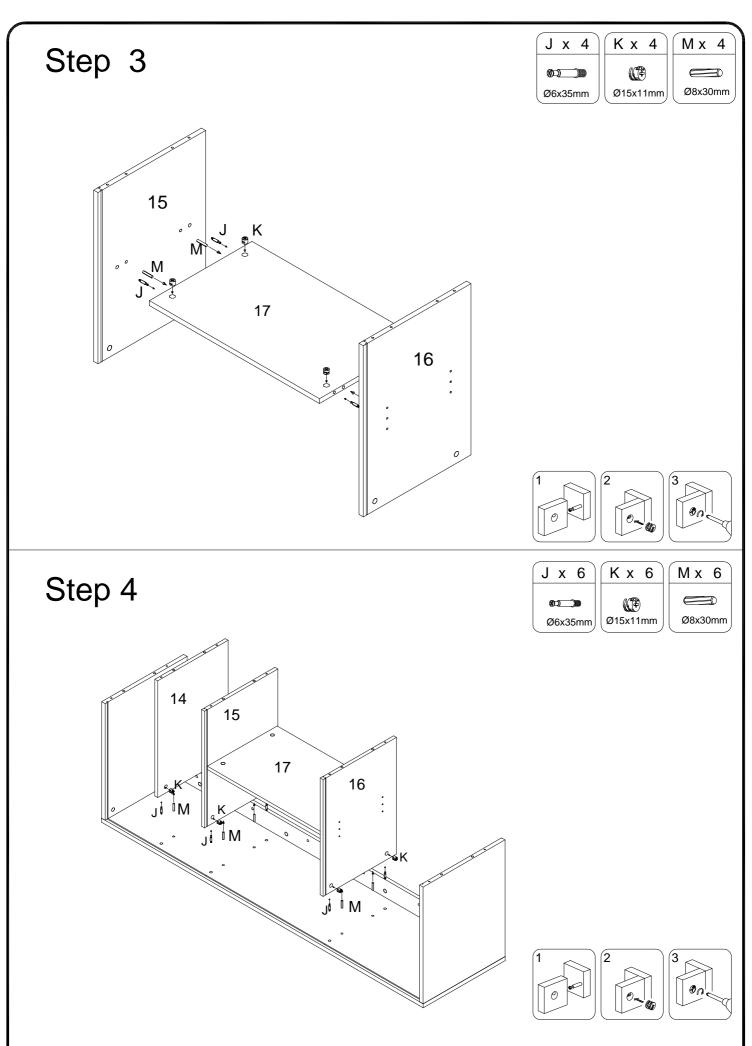



P.6/14


Step 5

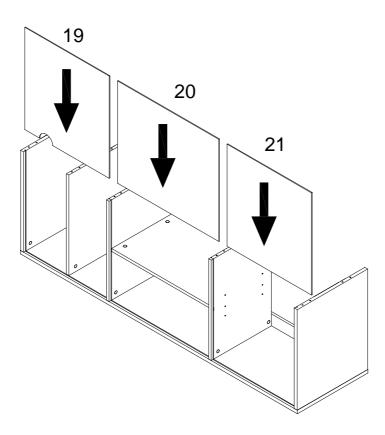


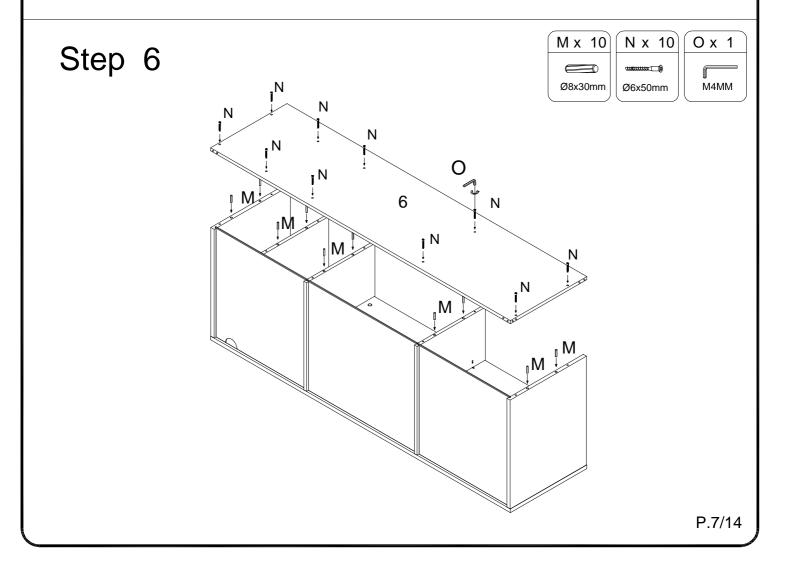


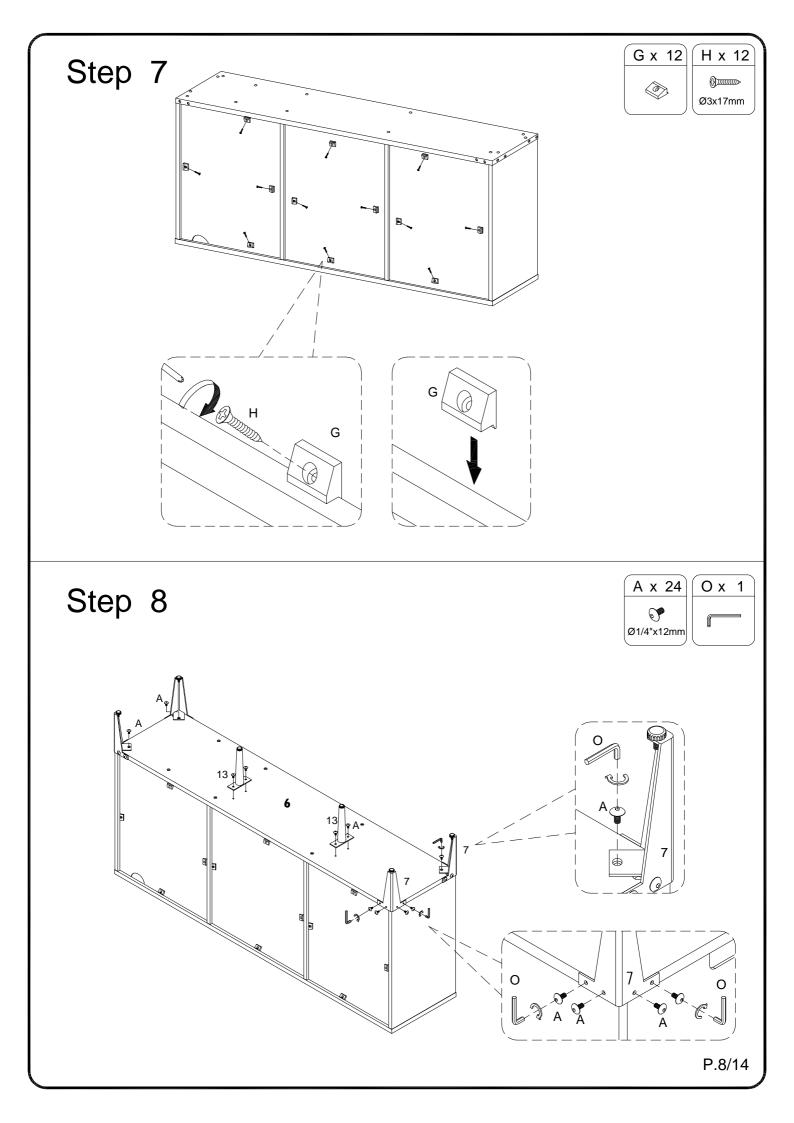

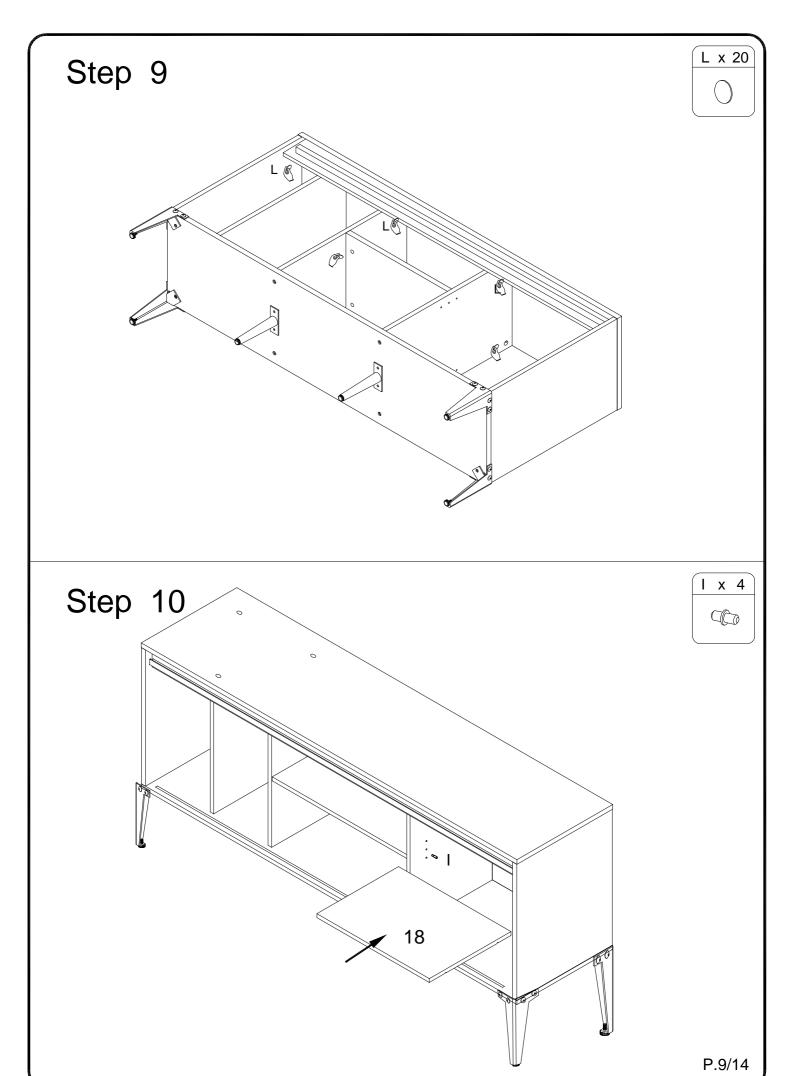

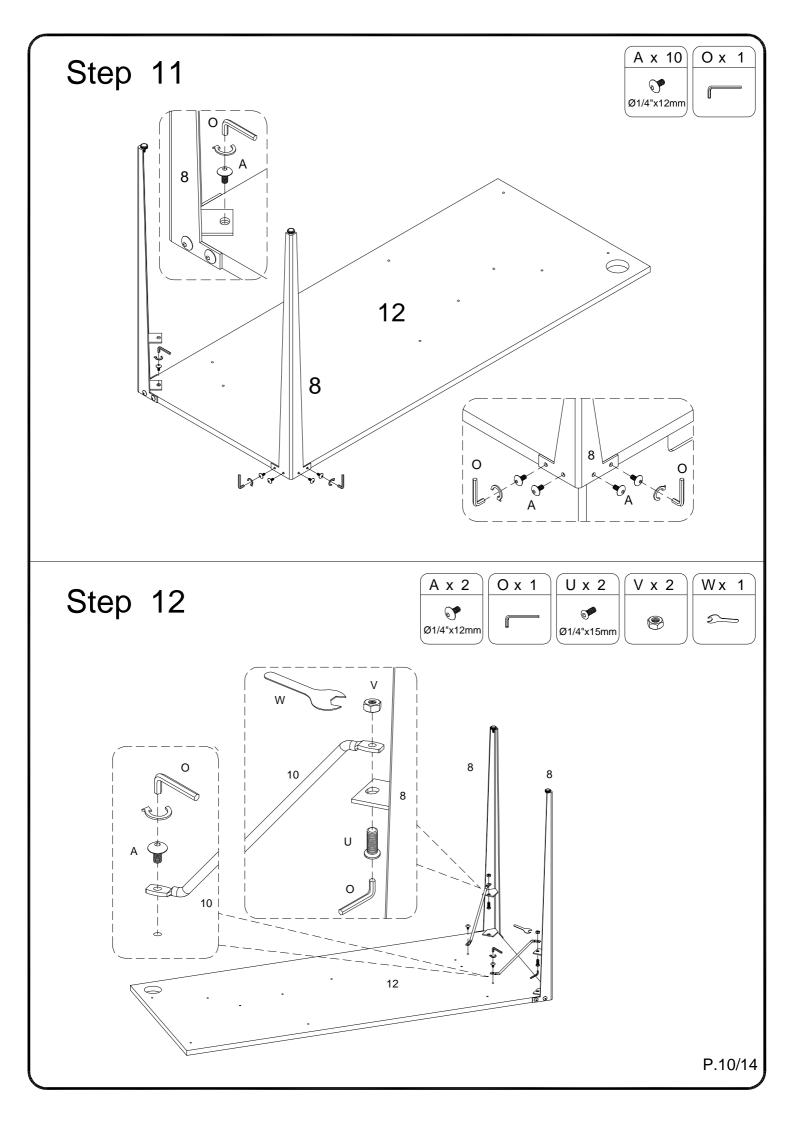

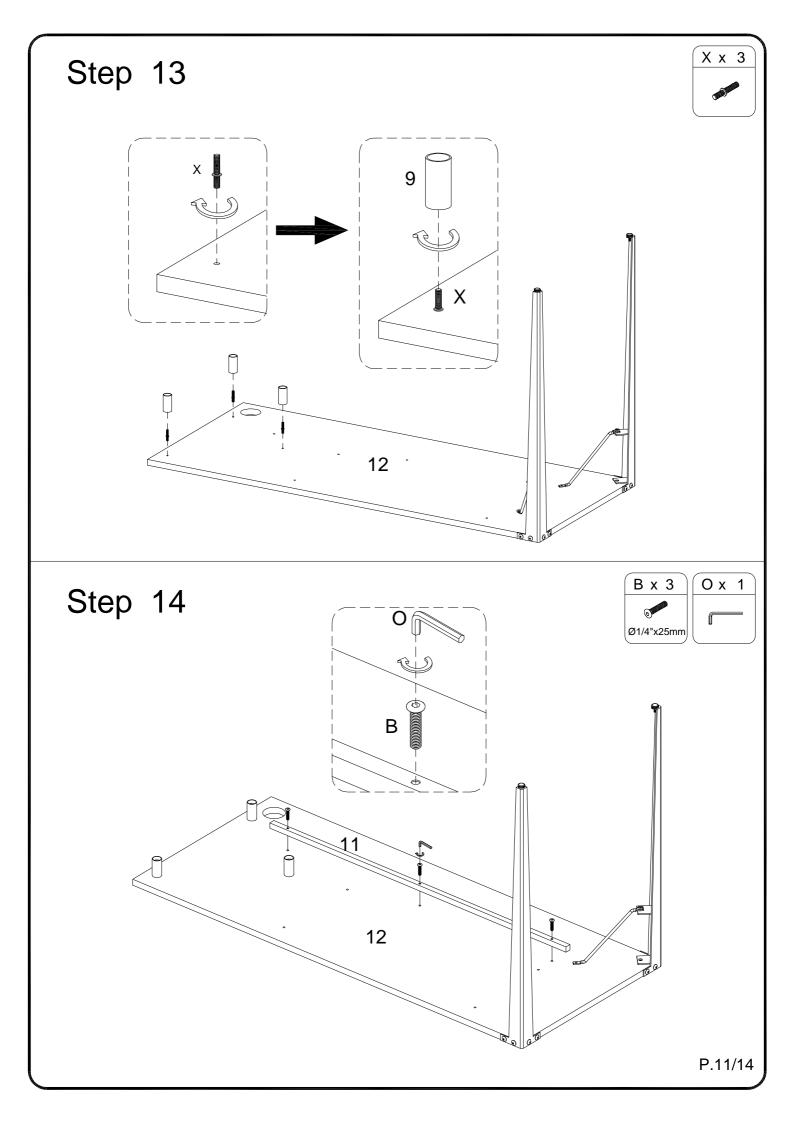


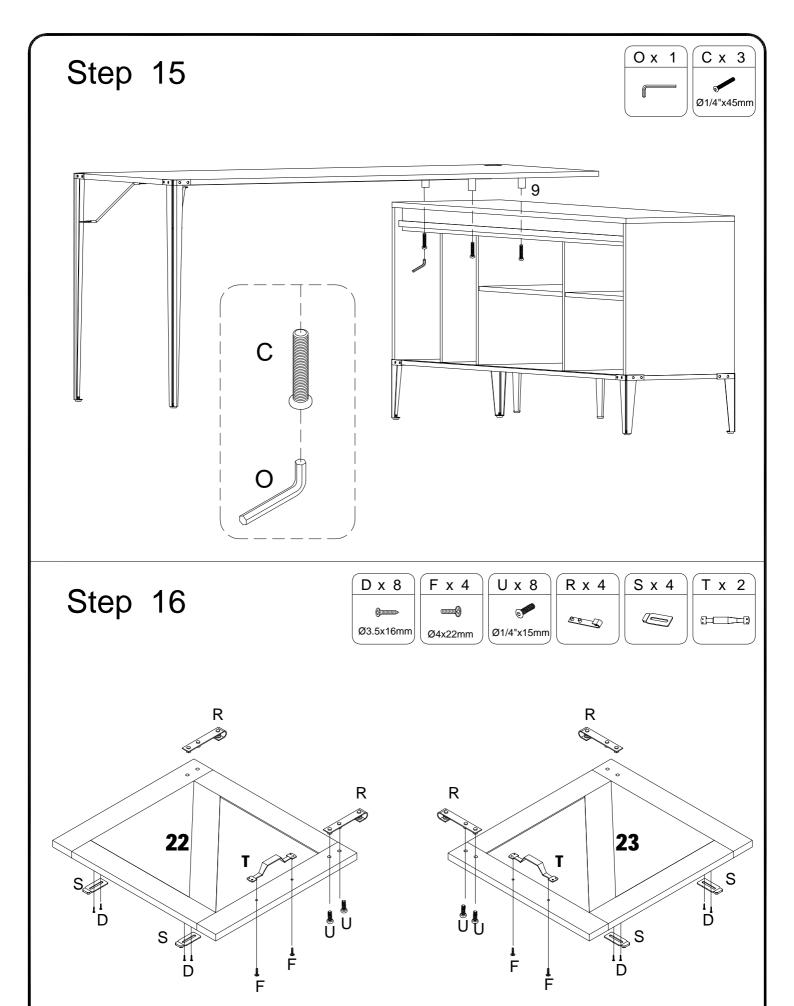

Step 17 Q x 1 Step 18 P.13/14

Step 19



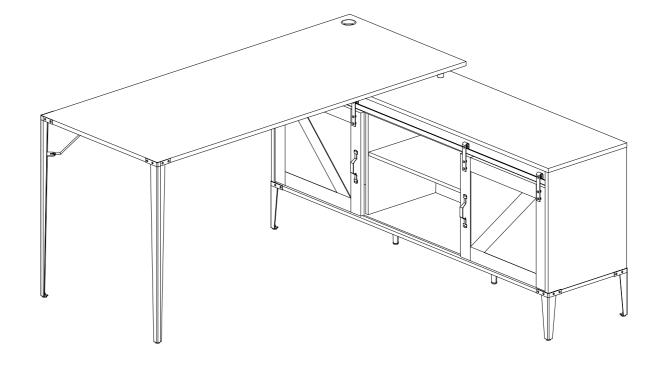

P.14/14