


ASSEMBLY INSTRUCTIONS


**MODEL : 7036A
BUFFET**

(BOX 1)


BOX OF 2 DOOR BUFFET

NO	ITEM	QTY
A	BUFFET 	1 PC
B	Wooden Shelf 	2 PCS

STEP 1 : Remove the Wood Shelf (B) from Buffet (A) as shown.

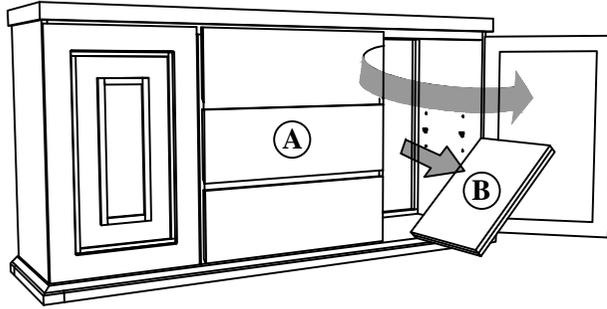

STEP 2 : Insert the PVC Shelf Support (1) to the left and right section of Buffet (A) by following the pre-drilled hole provided as shown. Insert the Wooden Shelf (B) sideways and place it on top of the PVC Shelf Support (1) as below.

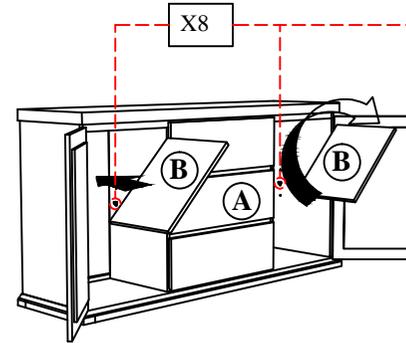

STEP 2.2



Insert the Pvc Shelf Support (1) to the pre drilled hole provided before place the wooden shelf (B).



(BOX 1)

HARDWARE LIST

No	ITEM	Qty
1	m5x16mm Pvc Shelf Support With Plastic Brw 	16 pcs

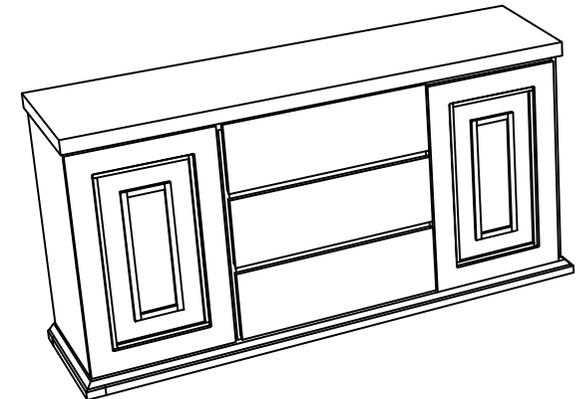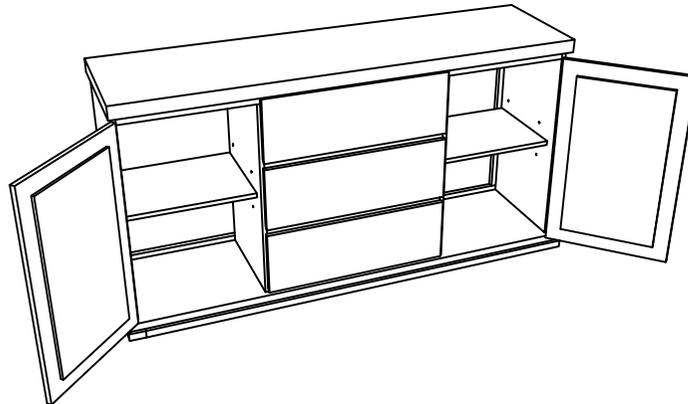

COMPLETED ASSEMBLY

NOTE : MUST TIGHTEN SCREWS PERIODCALLY OR SCREWS WILL BECOME LOOSE.CHECK TIGHTNESS OF ALL SCREWS EVERY 6-8 WEEKS.