


ASSEMBLY INSTRUCTIONS FOR CRANE LED DESK LAMP

AD9100 1.0


Model # AD9100

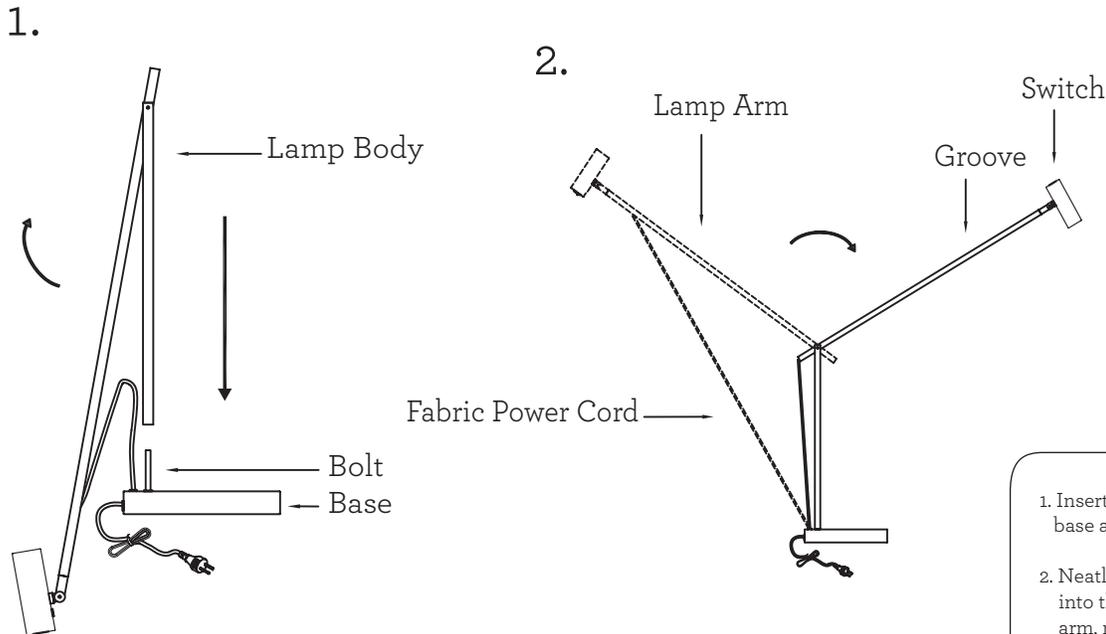

1. Insert the lamp body onto bolt of lamp base and ensure it is secure.

2. Neatly place the fabric power cord into the groove on top of the lamp arm, make sure switch is facing upward. Rotate lamp arm and ensure fabric power cord fits smoothly.

3. If the shade gets loose, tighten screws on shade joint using hex wrench to secure.

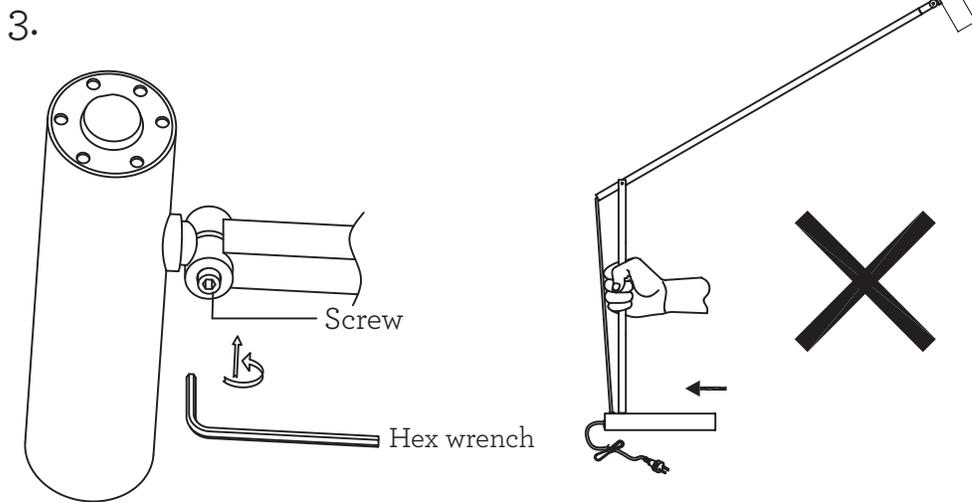

Caution:

For your safety, do not move the lamp by grabbing only the lamp body directly, in order to avoid the heavy base falling down to the ground.

GENERAL PRODUCT INFORMATION:

This product is suitable for dry locations only.



IMPORTANT SAFETY INSTRUCTIONS:

This portable lamp has a polarized plug (one blade is wider than the other) as a feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug.

If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. **DO NOT ALTER THE PLUG.**

LED: (1) 8 watt LED included.

PARTS DIAGRAM:

(1) Hex wrench

