



ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

500347(B1-B3) **Sleeper Sectional**

ITEM: 500347(B1-B3)



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

40 MINUTES

PARTS IDENTIFICATION

B1 (BOX 1)

A ARM



1PC

B STOOL



2PCS

C FOOT



8PCS


D ARM LEG



2PCS


B2 (BOX 2)

E LAF LOVE SEAT



1PC

F LOVESEAT BACK FRAME



1PC

G BACK CUSHION



2PCS

C FOOT



4PCS


H CASTER WITH SCREW



4SETS

B3 (BOX 3)

I RAF CHAISE SEAT




1PC

J CHAISE SHORT BACK FRAME



1PC

K CHAISE LONG BACK FRAME



1PC

L SHORT BACK CUSHION



1PC

M LONG BACK CUSHION



1PC

N CHAISE LEG



2PCS

C FOOT



2PCS

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provided this item.

ITEM: 500347(B1-B3)



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

HARDWARE IDENTIFICATION

Z-B1 (BOX 1) - HARDWARE PACK IS LOCATED IN 500347 (B1)

- 1 FLAT HEAD SCREW
(M4 x 45mm - BLK)



14PCS

Z-B2 (BOX 2) - HARDWARE PACK IS LOCATED IN 500347 (B2)

- 1 FLAT HEAD SCREW
(M4 x 45MM - BLK)



4PCS

Z-B3 (BOX 3) - HARDWARE PACK IS LOCATED IN 500347 (B3)

- 1 FLAT HEAD SCREW
(M4 x 45MM - BLK)



6PCS


NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provided this item.


ITEM: **500347(B1-B3)**

ASSEMBLY INSTRUCTIONS


STEP 1

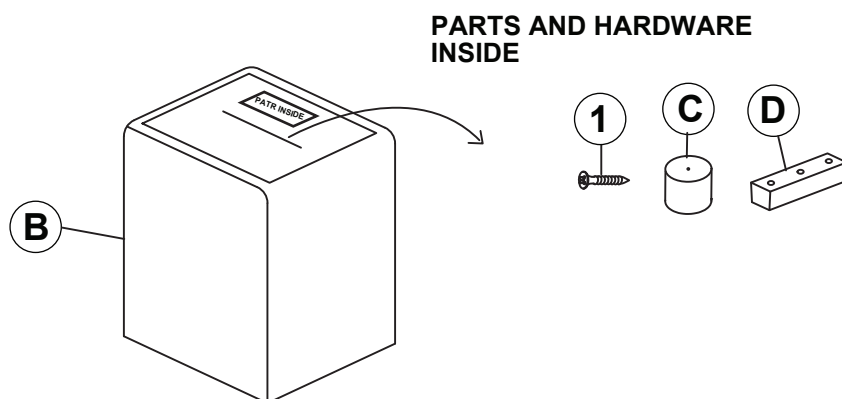

STEP 2

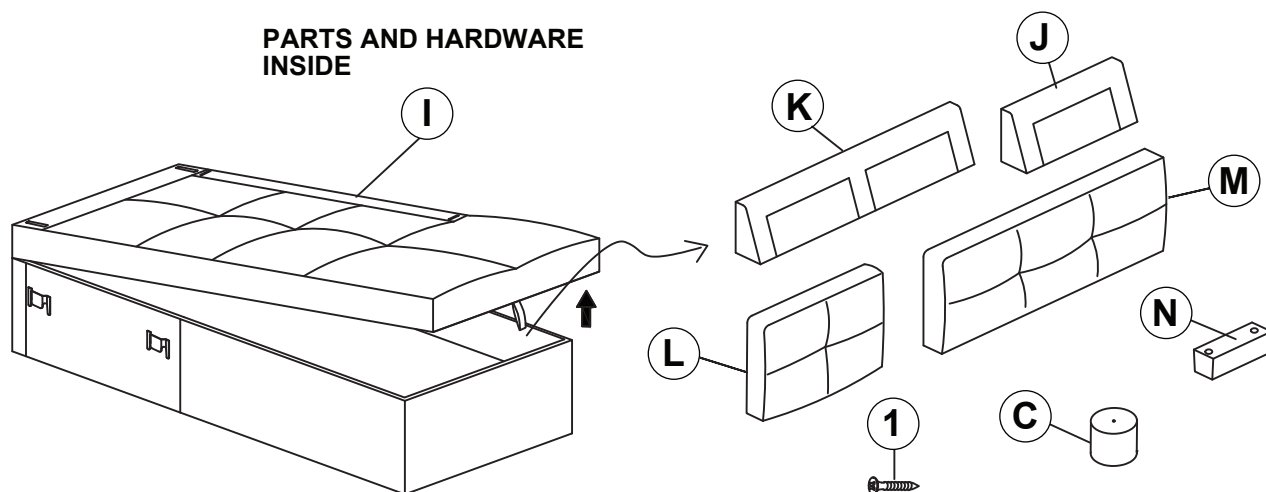


STEP 3

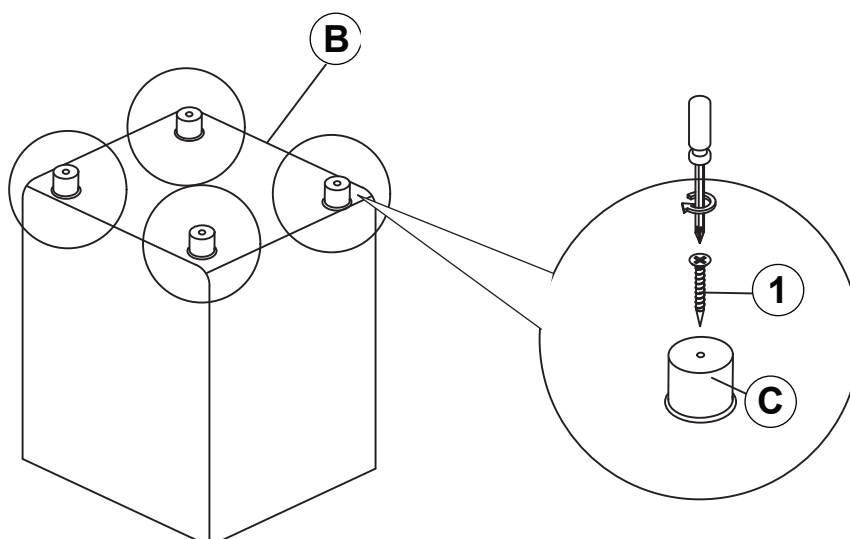


ITEM: **500347(B1-B3)**

ASSEMBLY INSTRUCTIONS


STEP 4

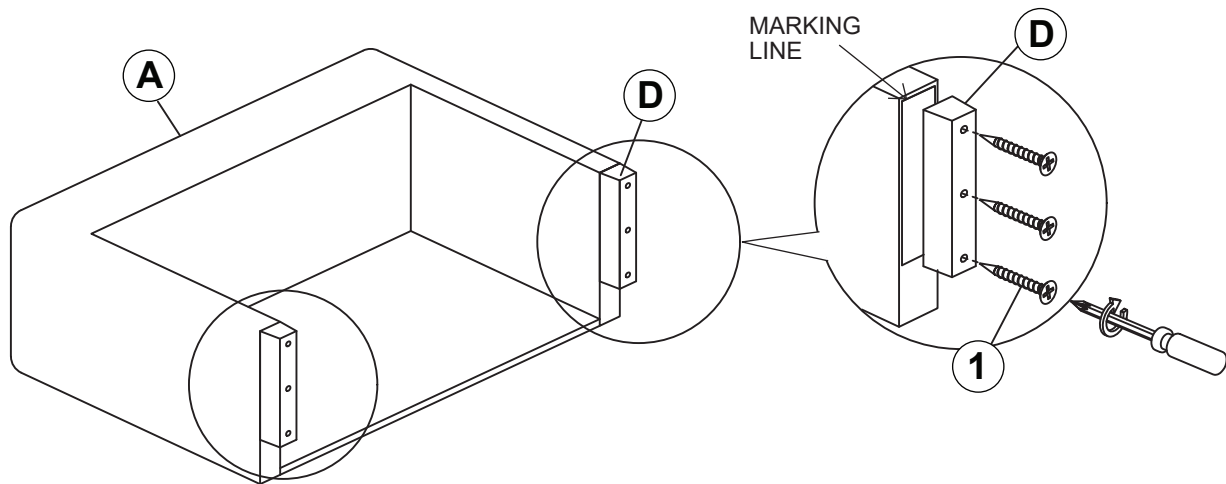

STEP 5

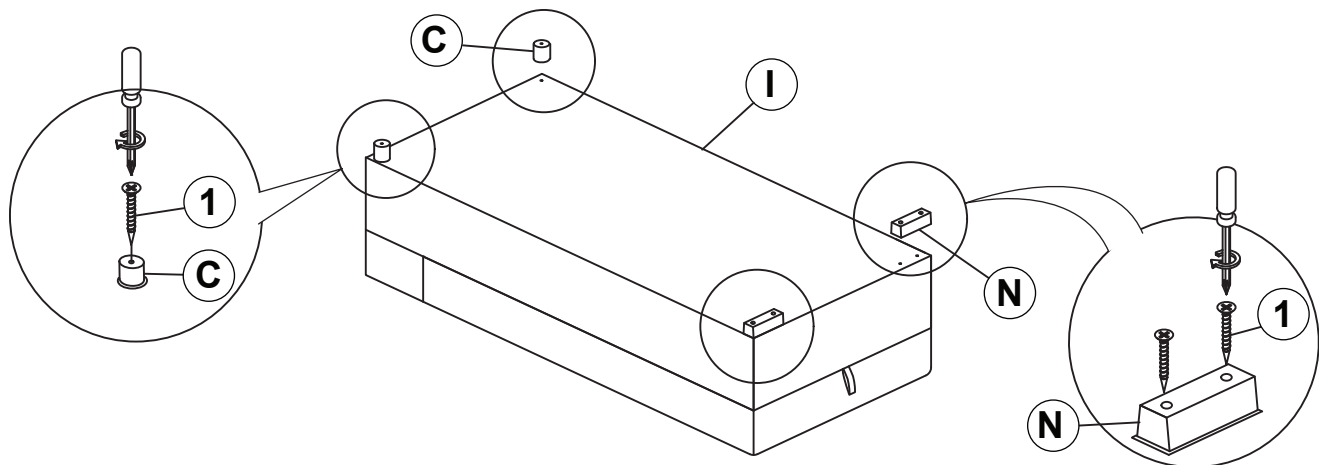


STEP 6

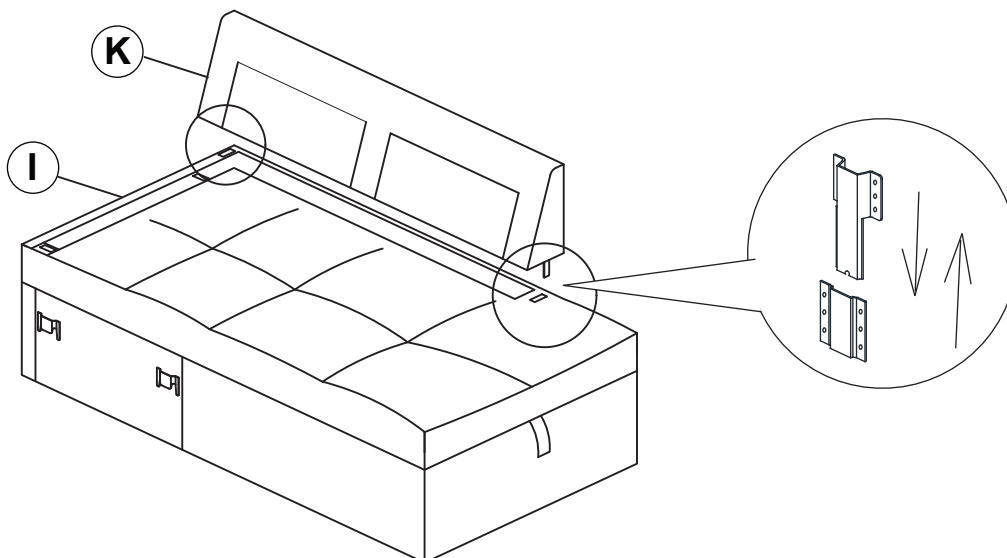


ITEM: **500347(B1-B3)**

ASSEMBLY INSTRUCTIONS

STEP 7

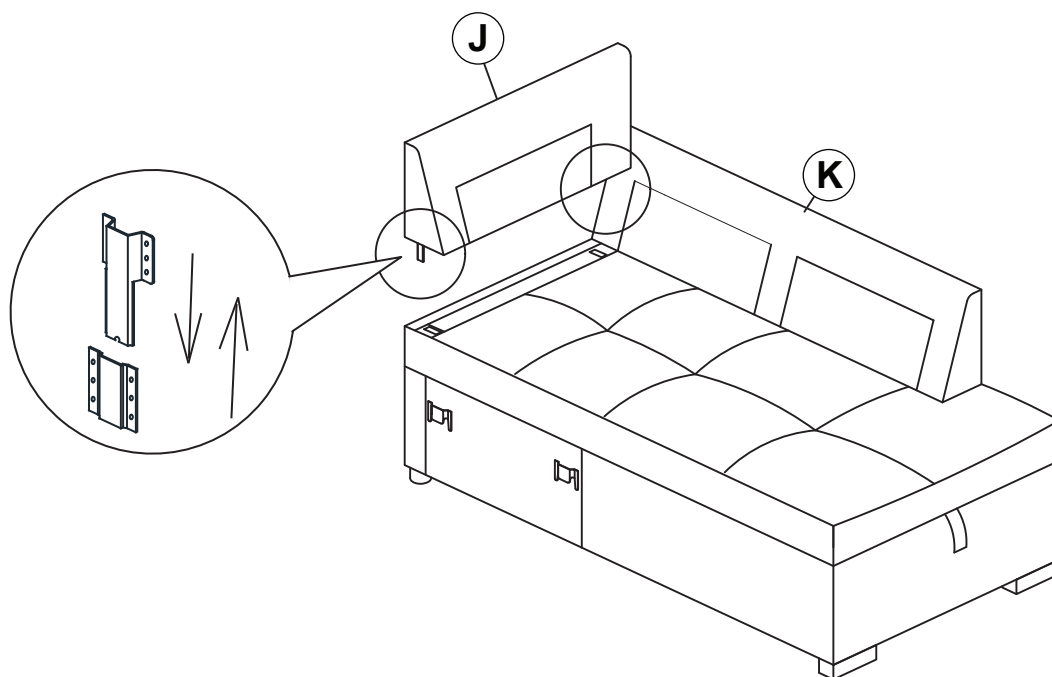


STEP 8

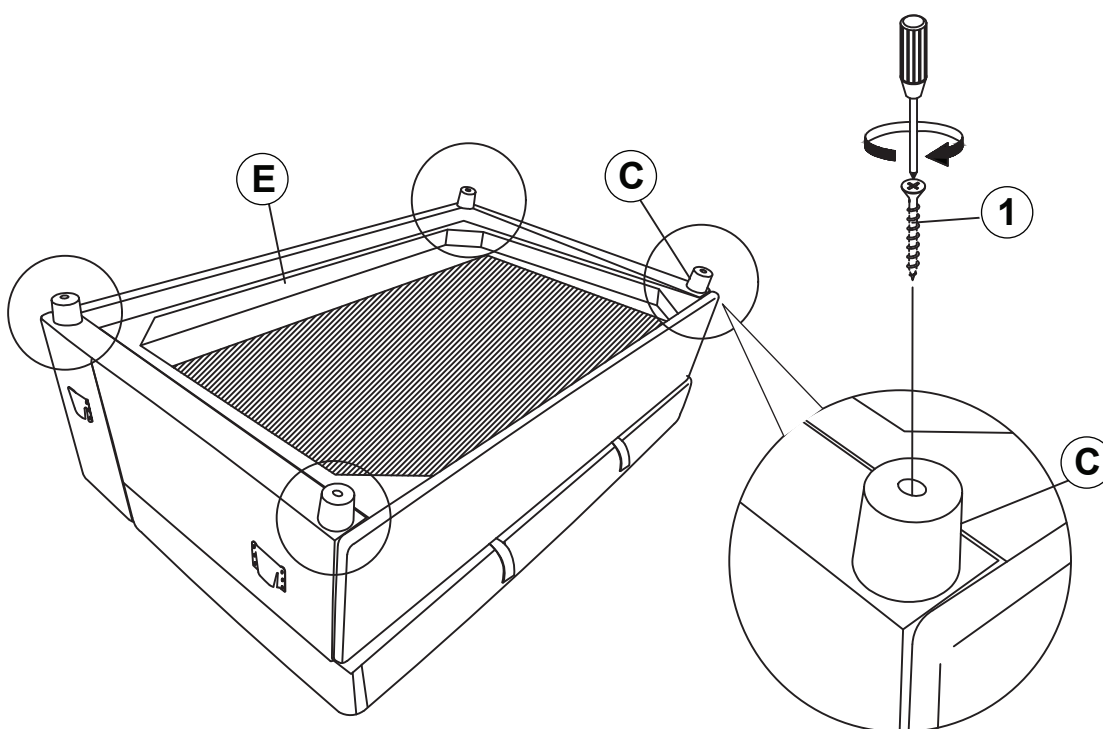


ITEM: **500347(B1-B3)**

ASSEMBLY INSTRUCTIONS

STEP 9

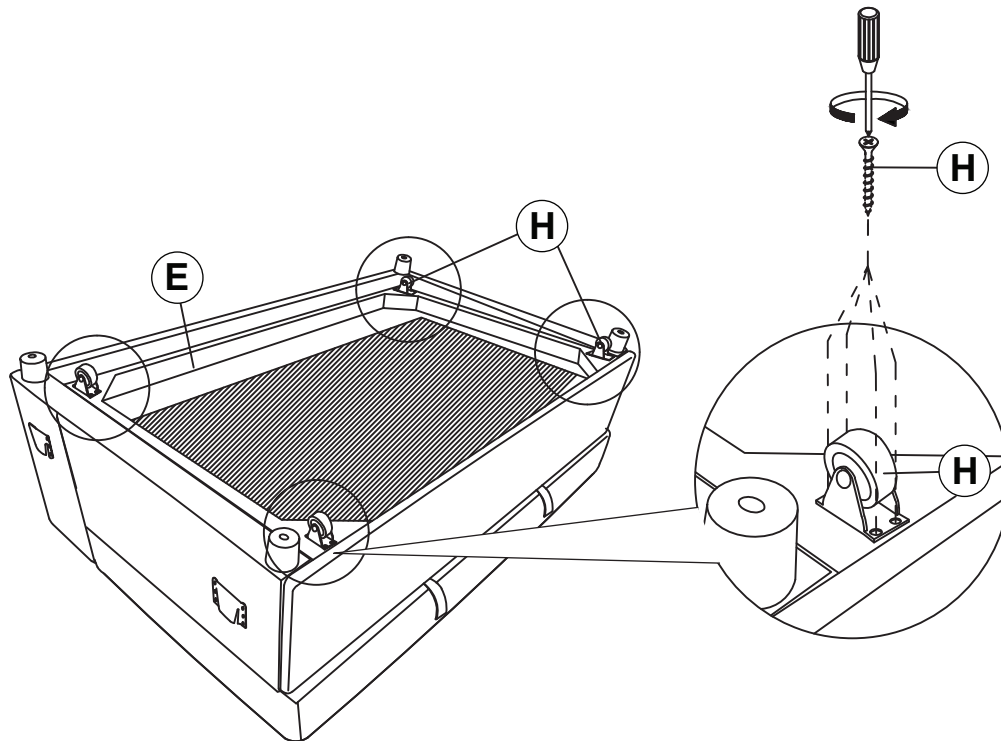

STEP 10

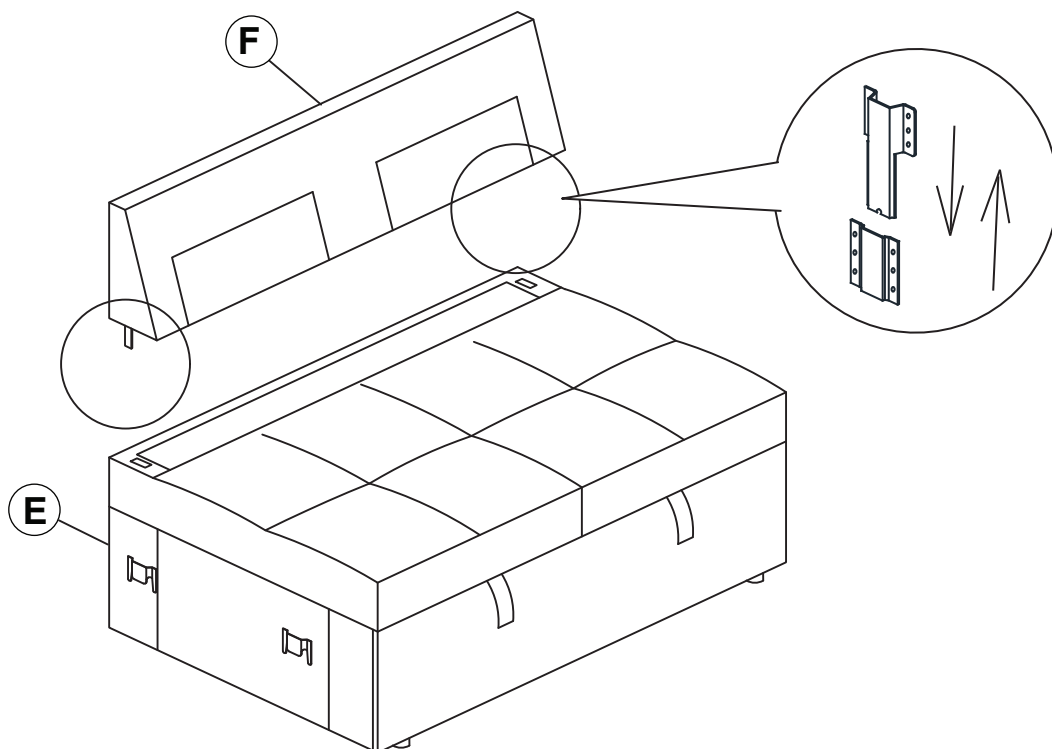


ITEM: **500347(B1-B3)**




ASSEMBLY INSTRUCTIONS

STEP 11

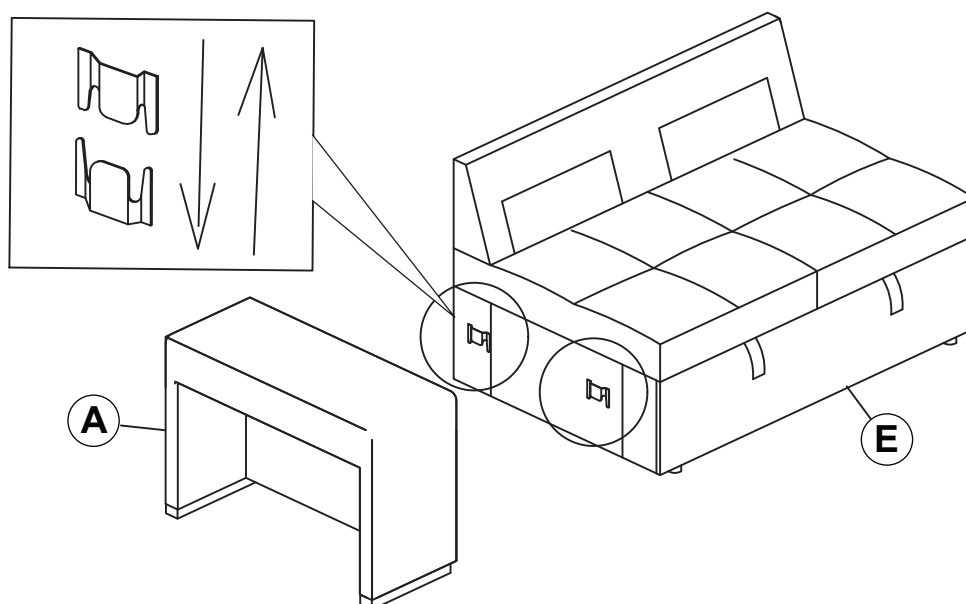


STEP 12

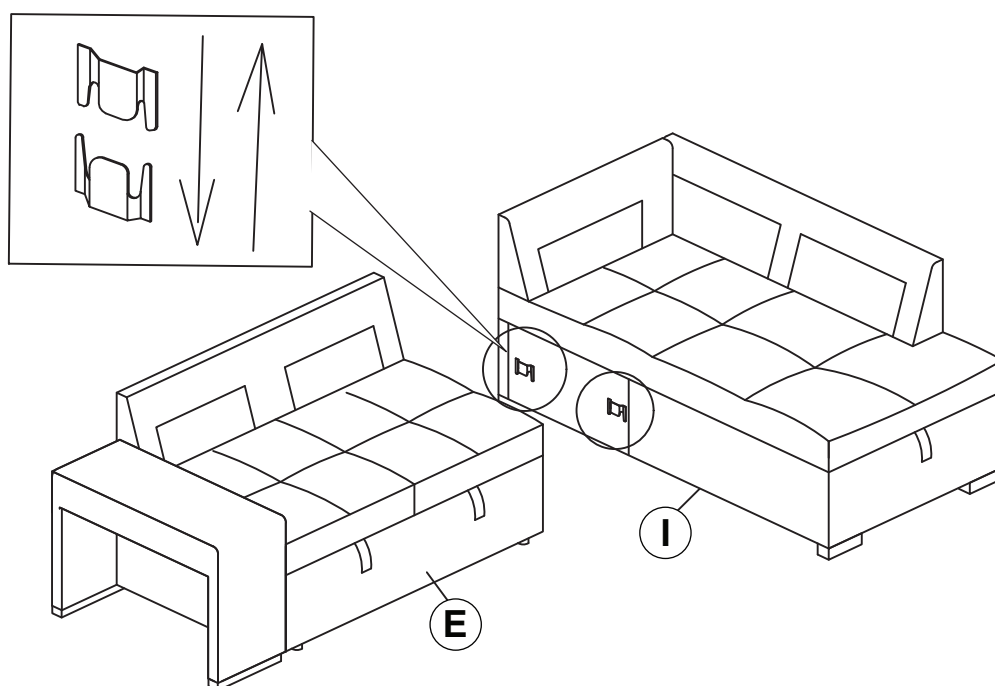

ITEM: **500347(B1-B3)**


ASSEMBLY INSTRUCTIONS

STEP 13

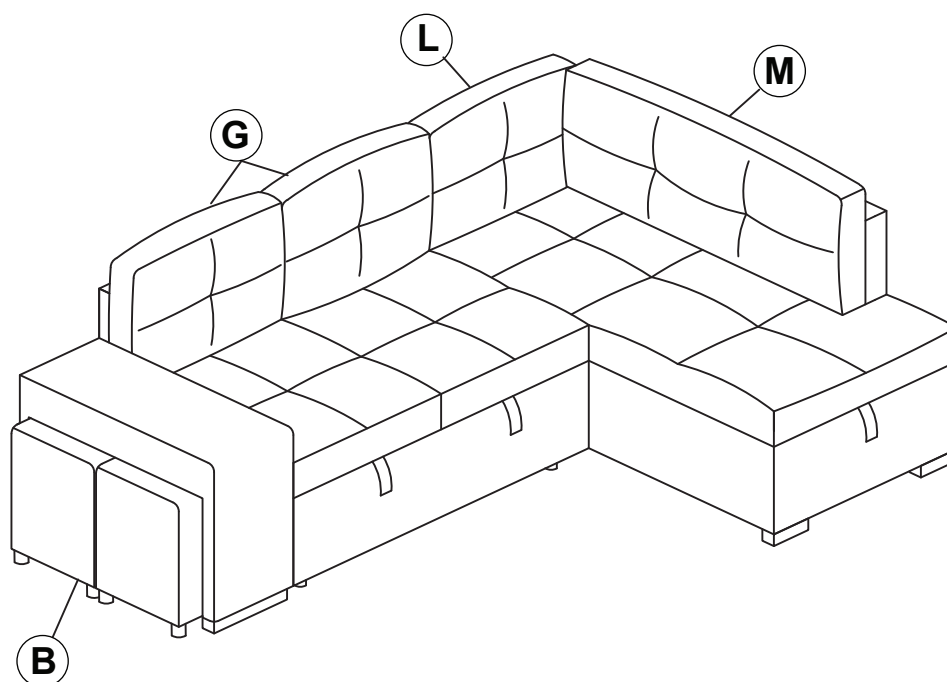


STEP 14

COMPLETE

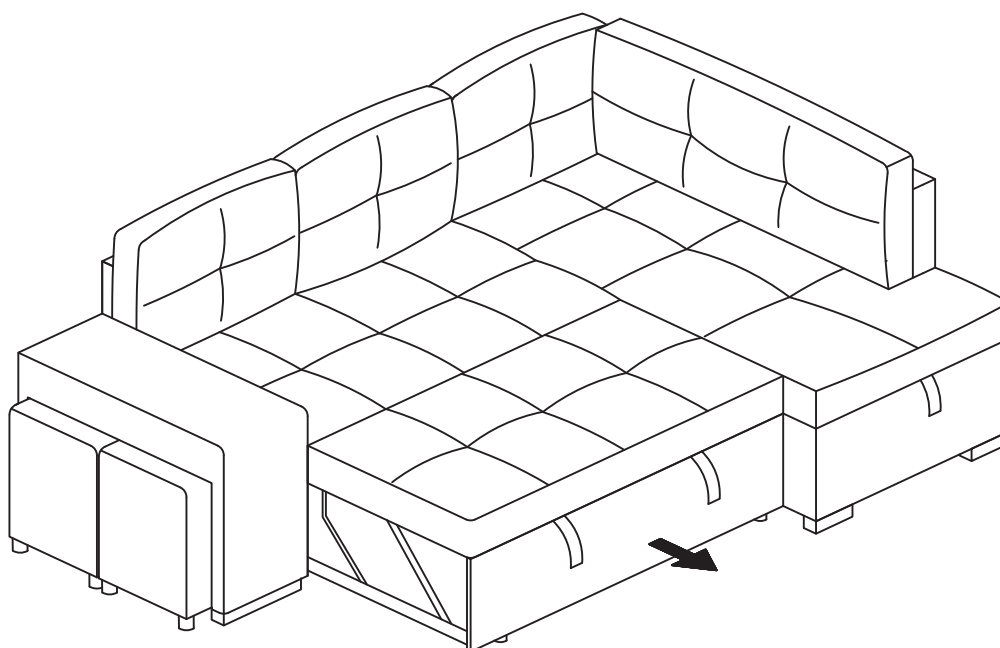

ITEM: **500347(B1-B3)**

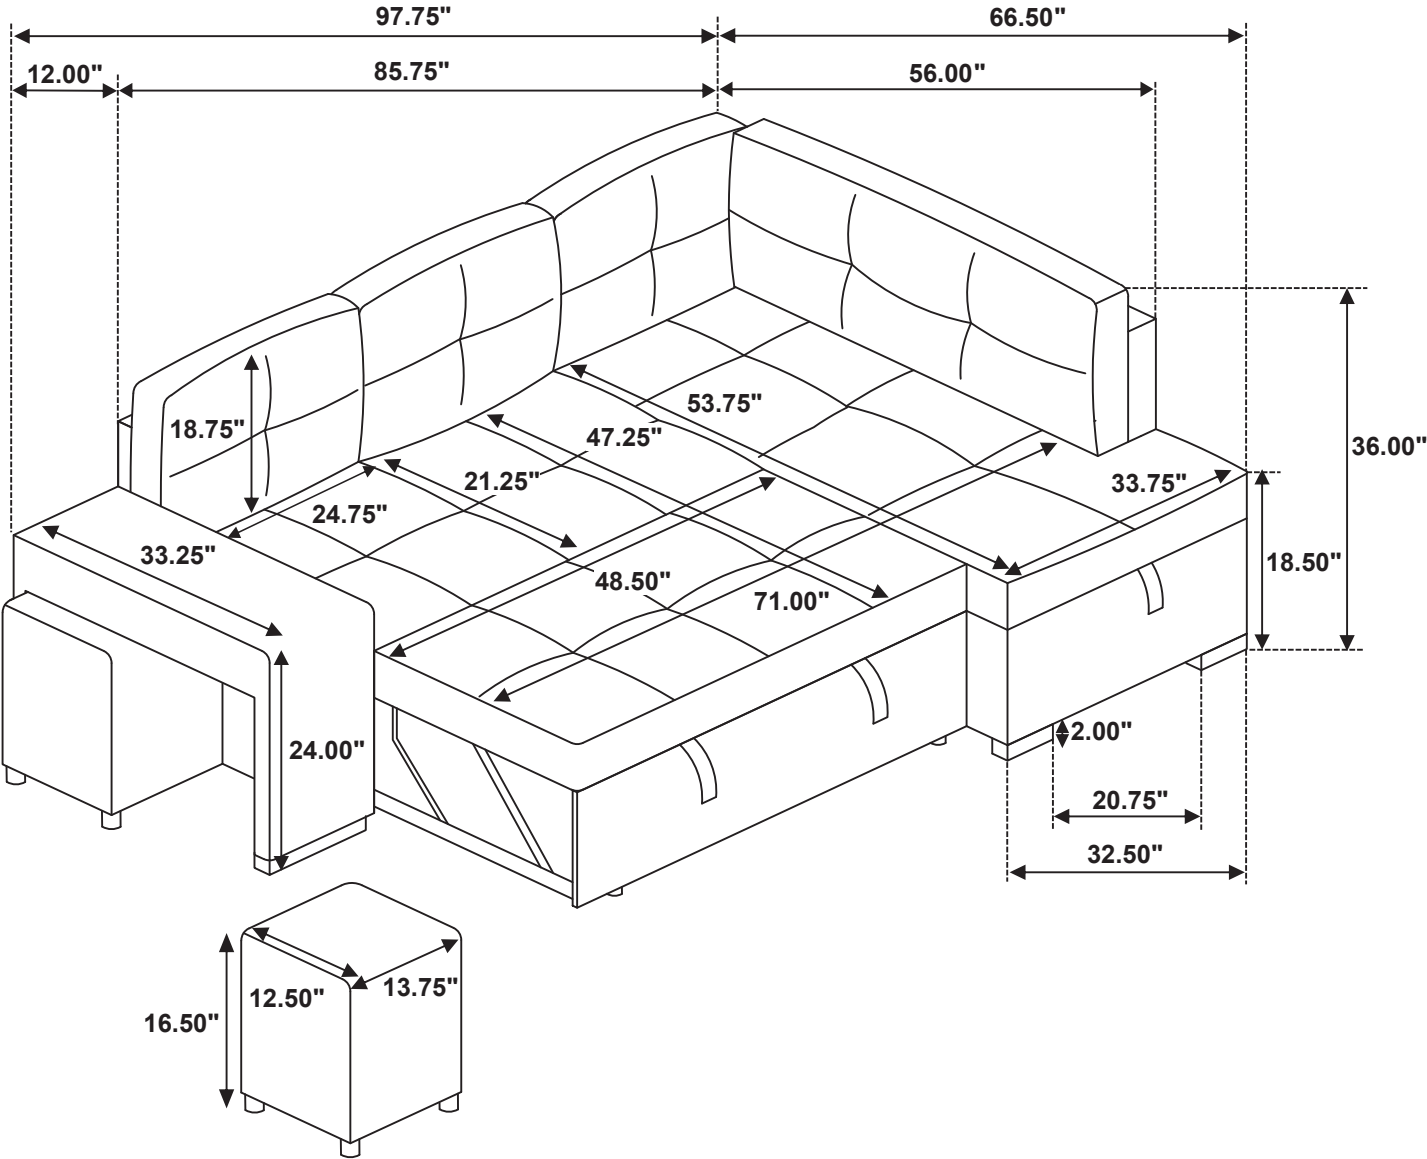

Note : Dimension tolerance $\pm 5\%$