


NOTE:

It is highly recommended to enlist the assistance of one or more person during assembly of this product to avoid any damage and/or personal injury.


STEP 1. Take Out The Wall Plug Transformer:

Attach the wall plug transformer found at the bottom rear of the LAF/RAF dual power recliner to the matching plug found at the bottom rear of the LAF/RAF dual power recliner as seen below. see Fig. 1 & Fig. 5

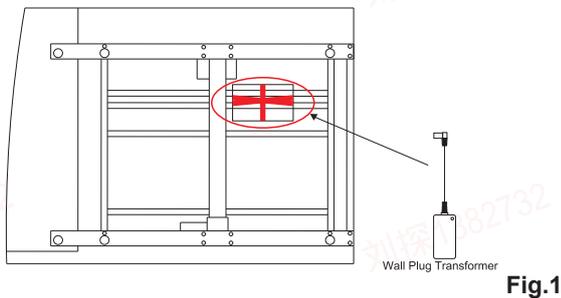


STEP 3. POWER SKU'S ONLY:

Lift velcroed flap located at the bottom back of the recliner chairs. Latch male wire plug from backrest (headrest motor wire) to female wire receiver located in the back bottom of the recliner underneath the flap. This instruction is applicable to all power recliners (Left Arm , Right Arm and Armless recliners.) see Fig. 3

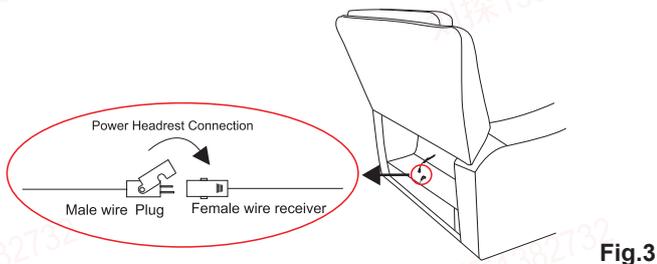

STEP 2. Attaching the KD Backs:

Install the Arm Backrest into the Arm Seat by positioning the female metal receiver brackets over the male metal posts. Ensure that female metal receiver brackets on each side of the backrest are positioned over the seat metal posts. Push down the female brackets over male posts simultaneously until each side is locked into place an audible "click" is heard. Install all backrests of sectional pieces in the same way described below. see Fig. 2

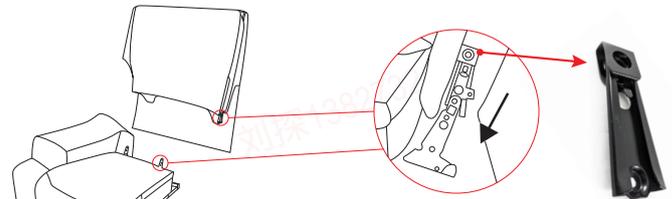


STEP 4. Close the Outside Backs:

Using the preattached Velcro on the outside back flap align and press to the preattached velcro attached to the bottom rear of the seat frame.

Note: Follow the same process above on all sku's until all KD Backs are attached


STEP 5. Sectional PCS Connections

Begin sectional connection by placing the LAF power recliner in desired location in room. Then start sectional connection by PWR armless chair into LAF. Continue sectional left items connection following the same method described below. see Fig. 4

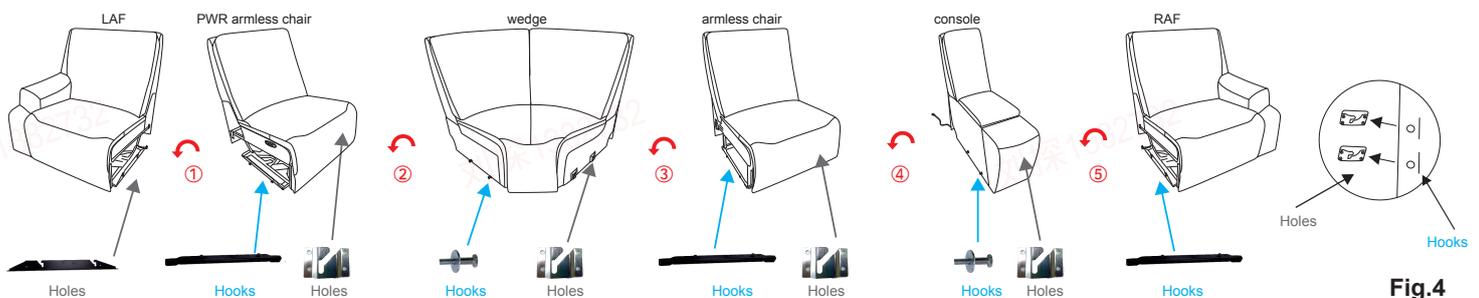

STEP 6. Wire Connections

Locate the wall plug transformer on sectional LAF/RAF and latch it to the female wire-receiver on PWR armless chair. see fig.5

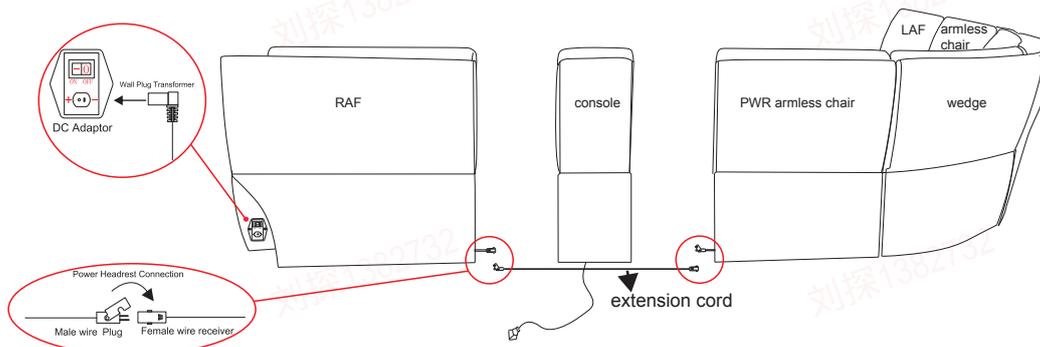

NOTE: Stationary sectional pieces such as consoles and armless stationary chairs, that do not join to a power recliner piece will not be required to be connected, therefore please buckle the unused "by-pass" wire into the backflap. All power recliner pieces will require the male wire plug to be connected to the next adjoining piece.

STEP 7

Connect wall plug transformer to transformer switch. see Fig. 6

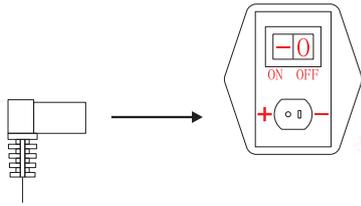


Fig.6

STEP 9

After all connections have been made, ensure that transformer power switch is switched to the on" position. see Fig. 8

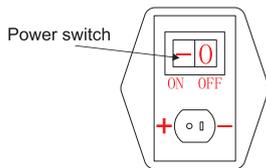


Fig.8

STEP 8

Connect wall plug transformer from Left Arm Seat to outlet. see Fig. 7


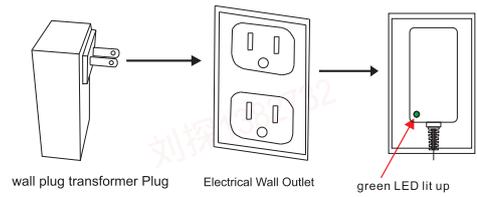


Fig.7

After assembly is complete, you product should look similar as seen below.

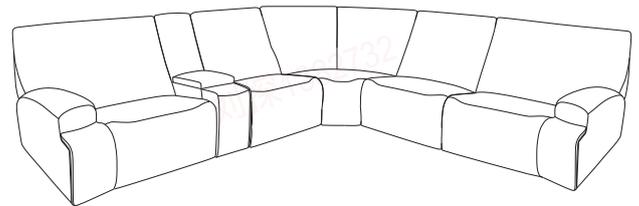

TO DISASSEMBLE THE UNITS:

1. **Disconnect wires before moving the furniture.** Disconnect all wires that were connected in illustration STEPS 3 and 7 before moving and or disconnecting the sectional. see Fig. 9

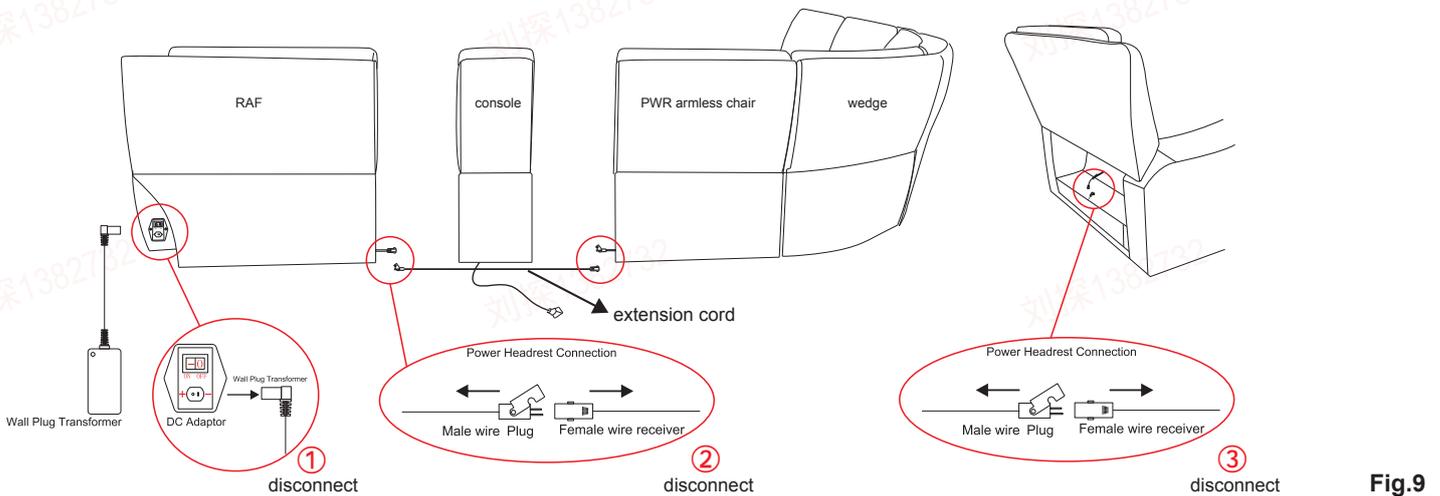


Fig.9

2. To disassemble the units, start by picking up the RAF recliner to dislodge the hooks. Continue from right to left until all units are disconnected. see Fig. 10


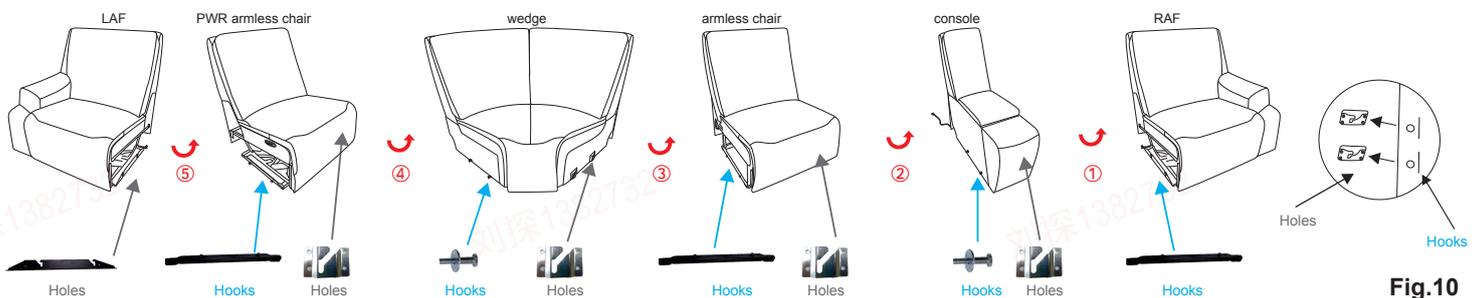


Fig.10

3. To disassemble the backrest, dislodge the connecting metal bracket between the backrest and arm seat by pushing out the tabs on the bracket and pulling out the backrest simultaneously.

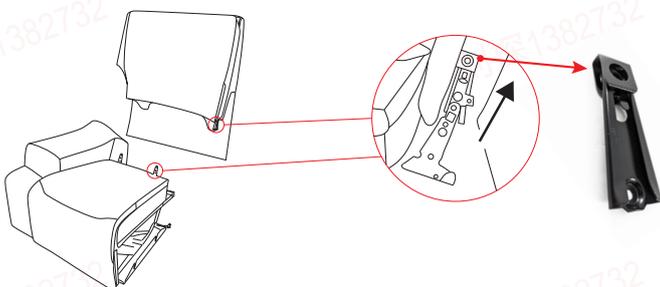

CARE & MAINTENANCE

Safety

To avoid any risk of suffocation to animals or children dispose of the plastic bags immediately.

Cleaning

As with all surfaces clean with a damp cloth and mild detergent, do not use bleach or abrasive products.