

ASSEMBLY INSTRUCTION FOR / INSTRUCTIONS D'ASSEMBLAGE POUR

SM585FB / SM385FB / SM785FB - SAMI FULL MONTESSORI BED IN ESPRESSO / GREY / WHITE

SM585FB / SM385FB / SM785FB - LIT MONTESSORI COMPLET SAMI EN ESPRESSO / GRIS / BLANC

Caution: Please read instructions thoroughly before unpacking assembly parts. Sharp, exposed staple tips can cause injury, therefore, for your protection, please remove any exposed staples used in packing.

1. We recommend that you should assemble this product with the assistance of another person; this will make assembly easier, and will help to eliminate damaging the product or injury to persons during assembly.
2. Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment.
3. Please do not over tighten screws or bolts.
4. Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

Attention : Veuillez lire attentivement les instructions avant de déballer les pièces à assembler. Les pointes d'agrafes exposées et tranchantes peuvent provoquer des blessures. Par conséquent, pour votre sécurité, veuillez retirer toutes les agrafes exposées utilisées pour l'emballage.

Nous vous recommandons de monter ce produit avec l'aide d'une autre personne ; cela facilitera l'assemblage et aidera à éviter d'endommager le produit ou de se blesser pendant l'assemblage.

1. Assurez-vous de vérifier soigneusement tous les matériaux d'emballage pour repérer de petites pièces qui pourraient s'être détachées à l'intérieur du carton pendant le transport.
2. Veuillez ne pas trop serrer les vis ou les boulons.
3. Veuillez poser toutes les pièces sur un sol non abrasif avant l'assemblage et suivre les étapes d'assemblage pour monter correctement et efficacement votre produit nouvellement acheté.


PARTS LIST / LISTE DES PIÈCES

NO.	PART DESC / LISTE DES PIÈCES	PART/DESSIN	CODE	QTY
A	LOFT BED - SIDE TOP UPPER / LIT MEZZANINE - CÔTÉ SUPÉRIEUR HAUT		PSM585FBSTOP PSM385FBSTOP PSM785FBSTOP	4 pcs
B	LOFT BED - SIDE (A) / LIT MEZZANINE - CÔTÉ (A)		PSM585POSTA PSM385POSTA PSM785POSTA	2 pcs
C	LOFT BED - SIDE (B) / LIT MEZZANINE - CÔTÉ (B)		PSM585POSTB PSM385POSTB PSM785POSTB	2 pcs
D	LOFT BED - SIDE BTM / LIT MEZZANINE - CÔTÉ INFÉRIEUR		PSM585FBSBRL PSM385FBSBRL PSM785FBSBRL	2 pcs
E	LOFT BED - SIDE TOP / CÔTÉ SUPÉRIEUR DU LIT MEZZANINE		PSM585FBSTRL PSM385FBSTRL PSM785FBSTRL	2 pcs
F	LOFT BED - PANEL / LIT MEZZANINE - PANNEAU		PSM585FBSPN PSM385FBSPN PSM785FBSPN	2 pcs
G	LOFT BED - RAIL (A) / LIT MEZZANINE - RAIL (A)		PSM585STR1 PSM385STR1 PSM785STR1	1 pc
H	LOFT BED - RAIL (B) / LIT MEZZANINE - RAIL (B) /		PSM585STR2 PSM385STR2 PSM785STR2	4 pcs

HARDWARE LIST / LISTE DU MATÉRIEL

NO.	HARDWARE DESC./ DESCRIPTION DU MATÉRIEL	PART/DESSIN	SIZE/TAILLE	CODE	QTY
1	ALLEN BOLT / VIS À TÊTE CYLINDRIQUE		M6 x 70mm	PSM585HW	24 pcs
2	SPRING WASHER / RONDELLE RESSORT		M6		24 pcs
3	FLAT WASHER / RONDELLE PLATE		M6 x 13mm		24 pcs
4	ALLEN KEY / CLÉ ALLEN		M4x110mm		1 pc
5	WOOD DOWEL / CHEVILLE EN BOIS		M10 x 40mm		20 pcs

STEP 1 / ÉTAPE 1

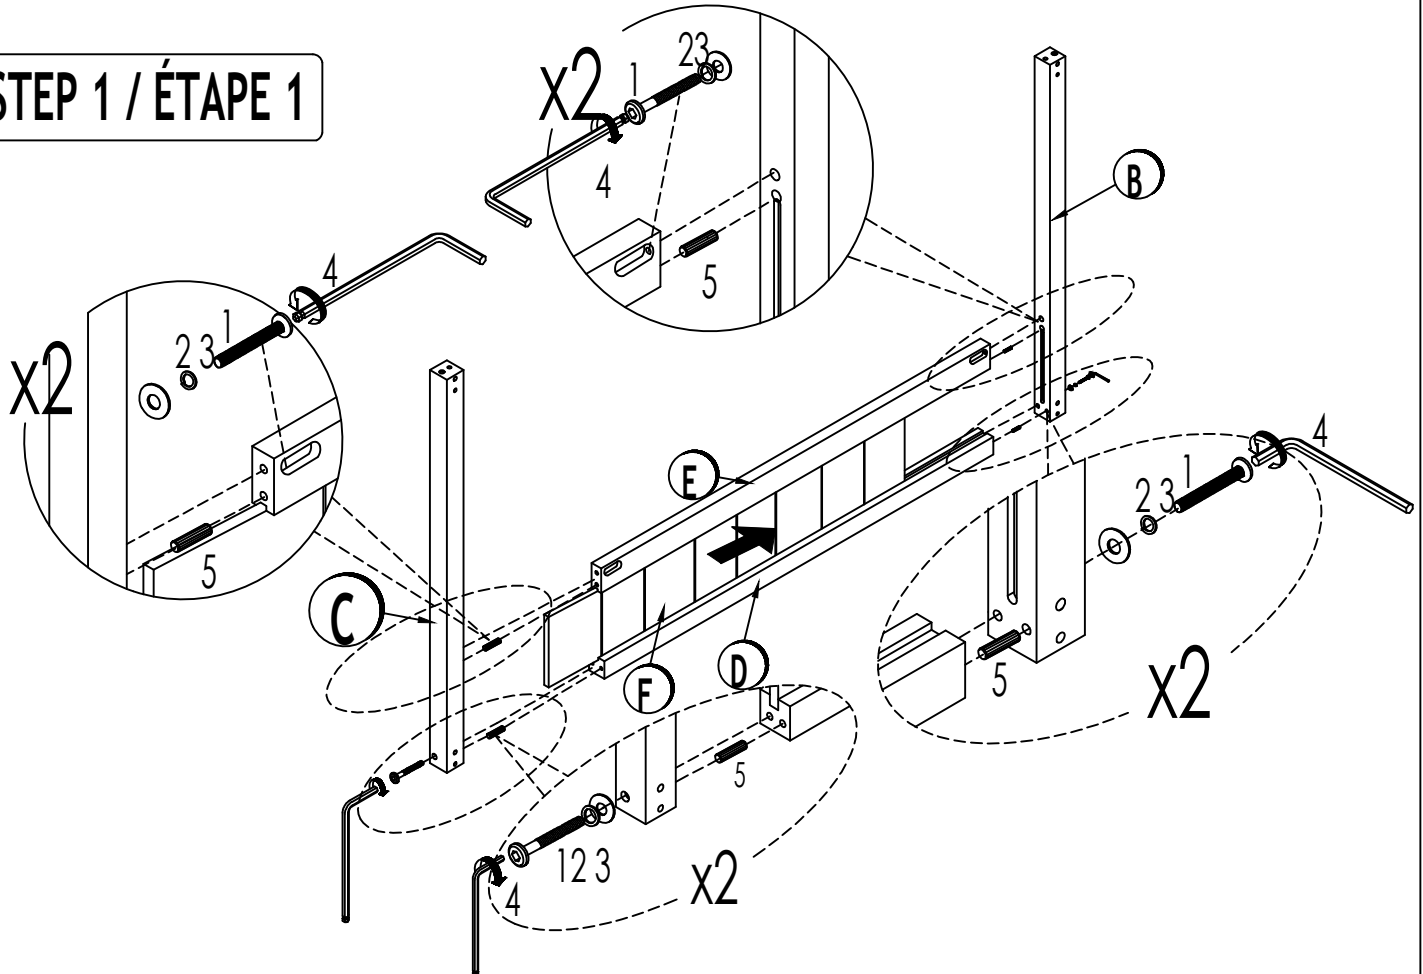


ASSEMBLY INSTRUCTION FOR / INSTRUCTIONS D'ASSEMBLAGE POUR

SM585FB / SM385FB / SM785FB - SAMI FULL MONTESSORI BED IN ESPRESSO / GREY / WHITE


SM585FB / SM385FB / SM785FB - LIT MONTESSORI COMPLET SAMI EN ESPRESSO / GRIS / BLANC

STEP 2 / ÉTAPE 2

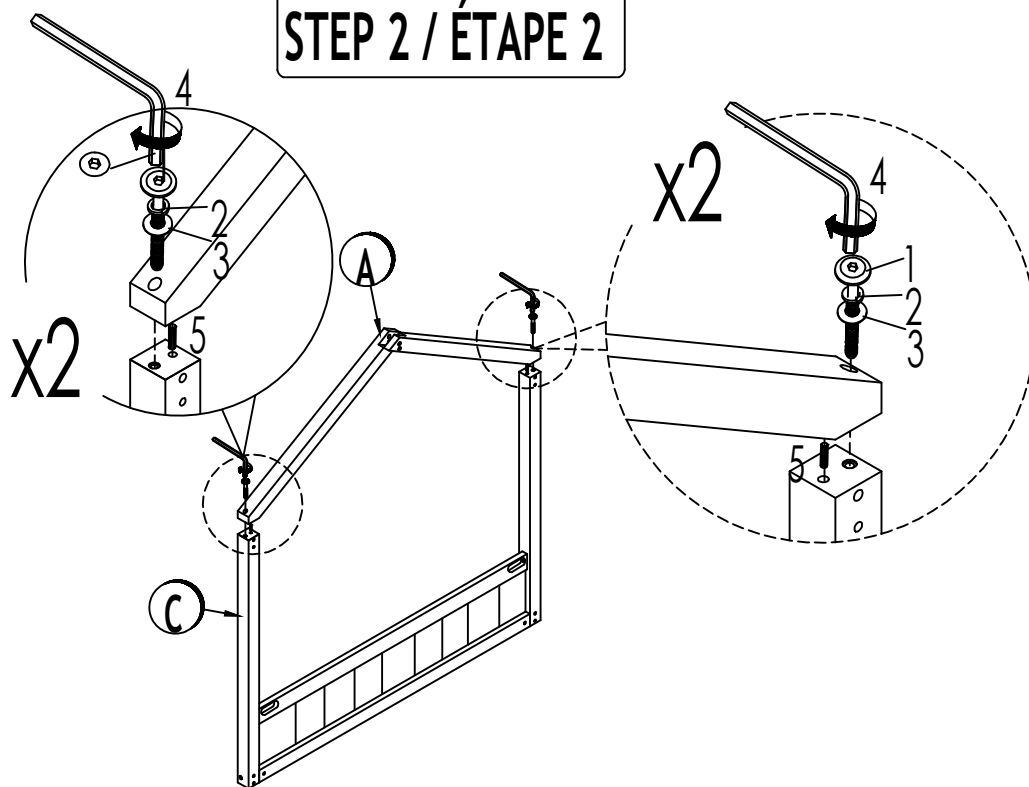

STEP 5 / ÉTAPE 5


STEP 6 / ÉTAPE 6

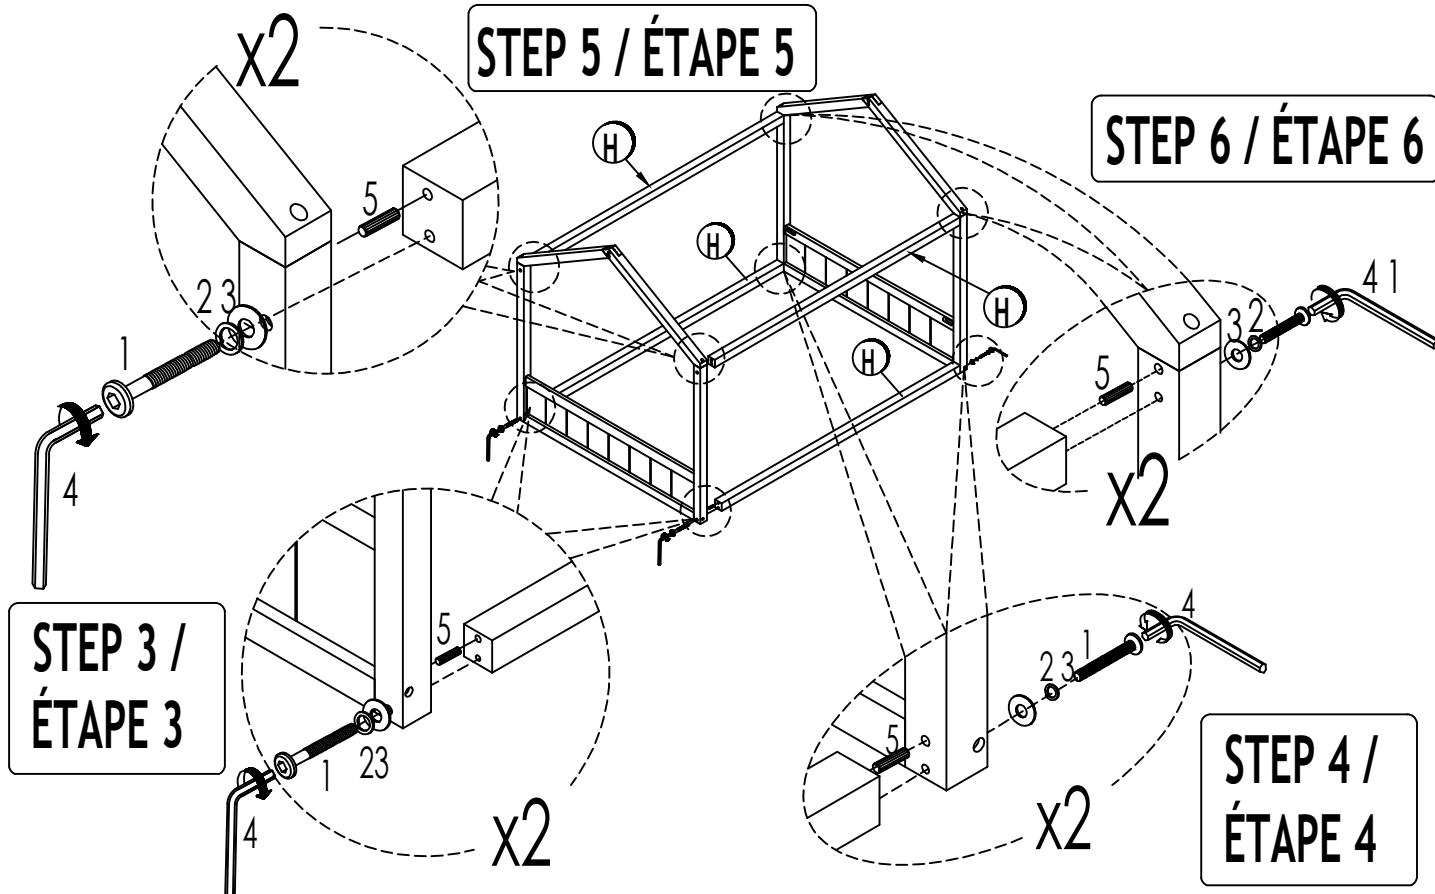


ASSEMBLY INSTRUCTION FOR / INSTRUCTIONS D ' ASSEMBLAGE POUR

SM585FB / SM385FB / SM785FB - SAMI FULL MONTESSORI BED IN ESPRESSO / GREY / WHITE
SM585FB / SM385FB / SM785FB - LIT MONTESSORI COMPLET SAMI EN ESPRESSO / GRIS / BLANC

**STEP 7 /
ÉTAPE 7**

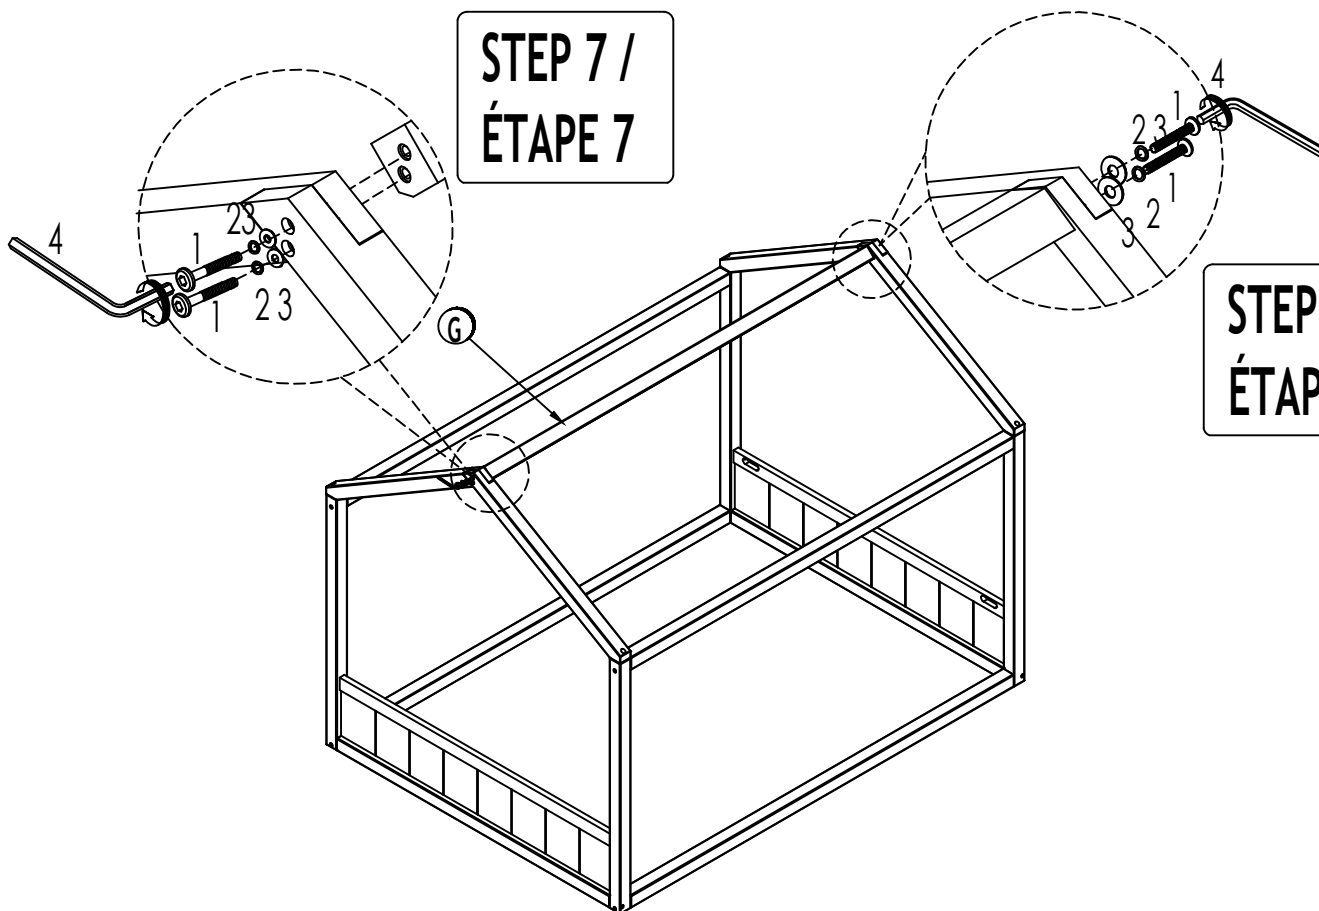

**STEP 8 /
ÉTAPE 8**

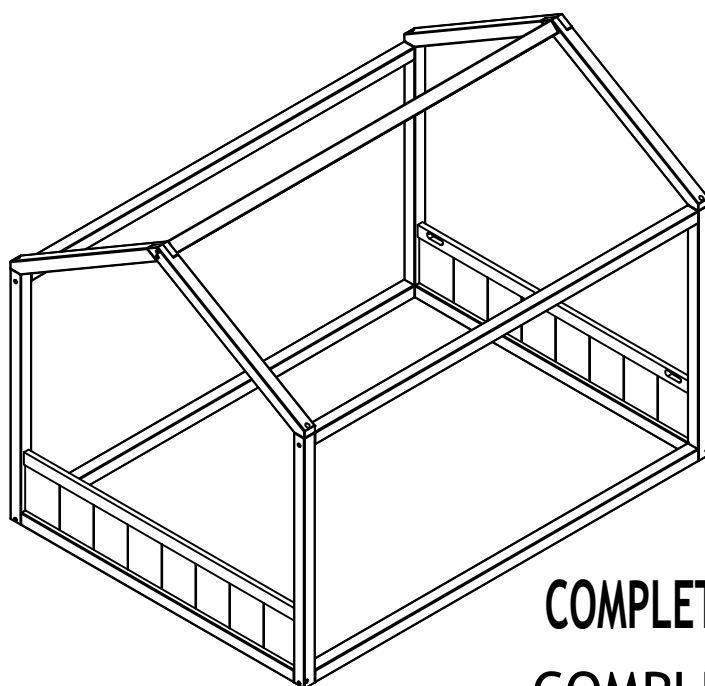

**COMPLETED /
COMPLÉTÉ.**