

ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE



Fine Furniture for every stage of life

950423
SHOE CABINET

ITEM: **950423**



ASSEMBLY INSTRUCTIONS


ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

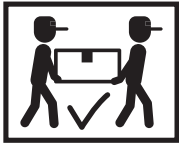


ASSEMBLY TIME

60 MINUTES


PARTS IDENTIFICATION

A LEFT SIDE
PANEL

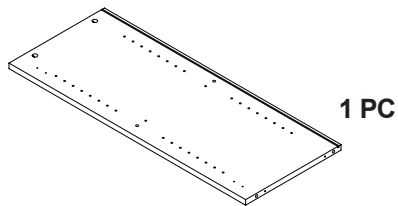


1 PC

B RIGHT SIDE
PANEL

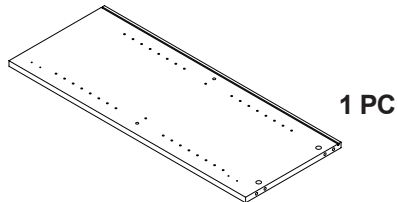


1 PC

C BOTTOM PANEL

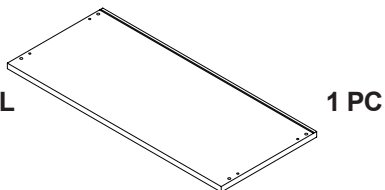


1 PC

D MIDDLE PANEL

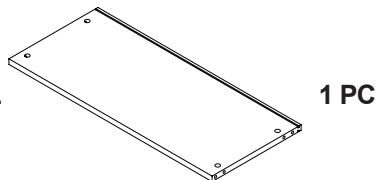


1 PC

E TOP PANEL

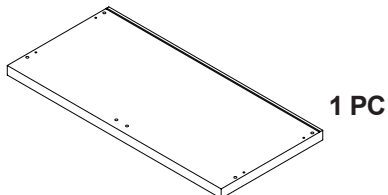


1 PC

F ADJUSTABLE
SHELF

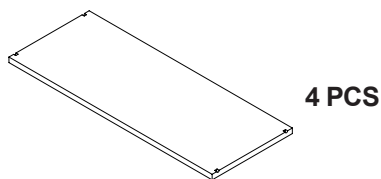


4 PCS

G BACK PANEL

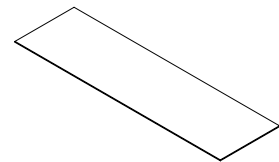


4 PCS

H LEFT DOOR

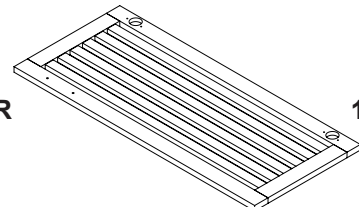


1 PC

I RIGHT DOOR

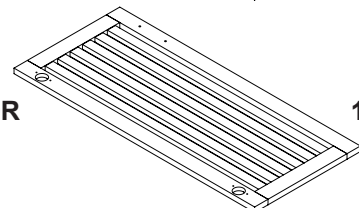


1 PC

J BACK PANEL
CONNECTING
BAR

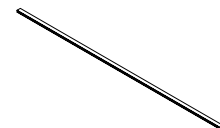

2 PCS

K LEG



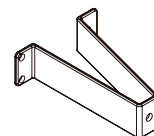














4 PCS

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: **950423****HARDWARE IDENTIFICATION**

Z							
NO	DESCRIPTION	FIGURE	Q'TY	NO	DESCRIPTION	FIGURE	Q'TY
1	GLUE 15g		1 PC	10	HINGE Ø35mm SR		4 PCS
2	WOODEN DOWEL Ø8x30mm		12 PCS	11	HINGE SCREW Ø4x15mm SR		16 PCS
3	CAM BOLT Ø7x35.5mm SR		8 PCS	12	STICKER Ø20mm		2 PCS
4	CAM LOCK Ø15x12mm SR		8 PCS	13	SCREW Ø5x19mm BLK		12 PCS
5	LONG SCREW Ø4.5x42mm SR		4 PCS	14	PLASTIC FEET		4 PCS
6	PIN FOR ADJUSTABLE SHELF Ø4.9x15mm SR		16 PCS	15	FIXER		6 PCS
7	DOOR CATCH		1 PC	16	FIXER SCREW Ø3x19mm SR		6 PCS
8	HANDLE L= 120mm BLK		2 PCS				
9	HANDLE BOLT BLK		4 PCS				


Z8,Z9,Z10,Z11,Z12,Z13 not included in blister packaging.**NOTE:**

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.


ITEM: **950423**

STEP 1

COASTER
FINE FURNITURE



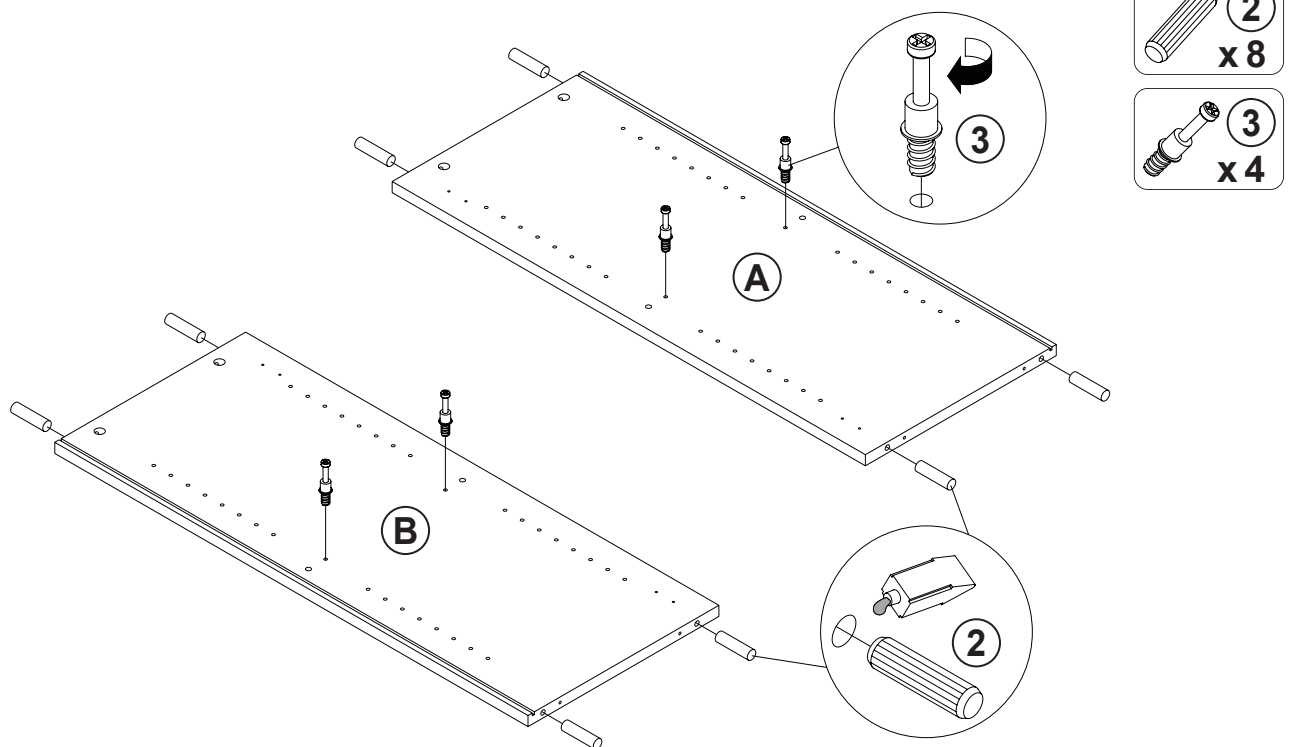


STEP 2

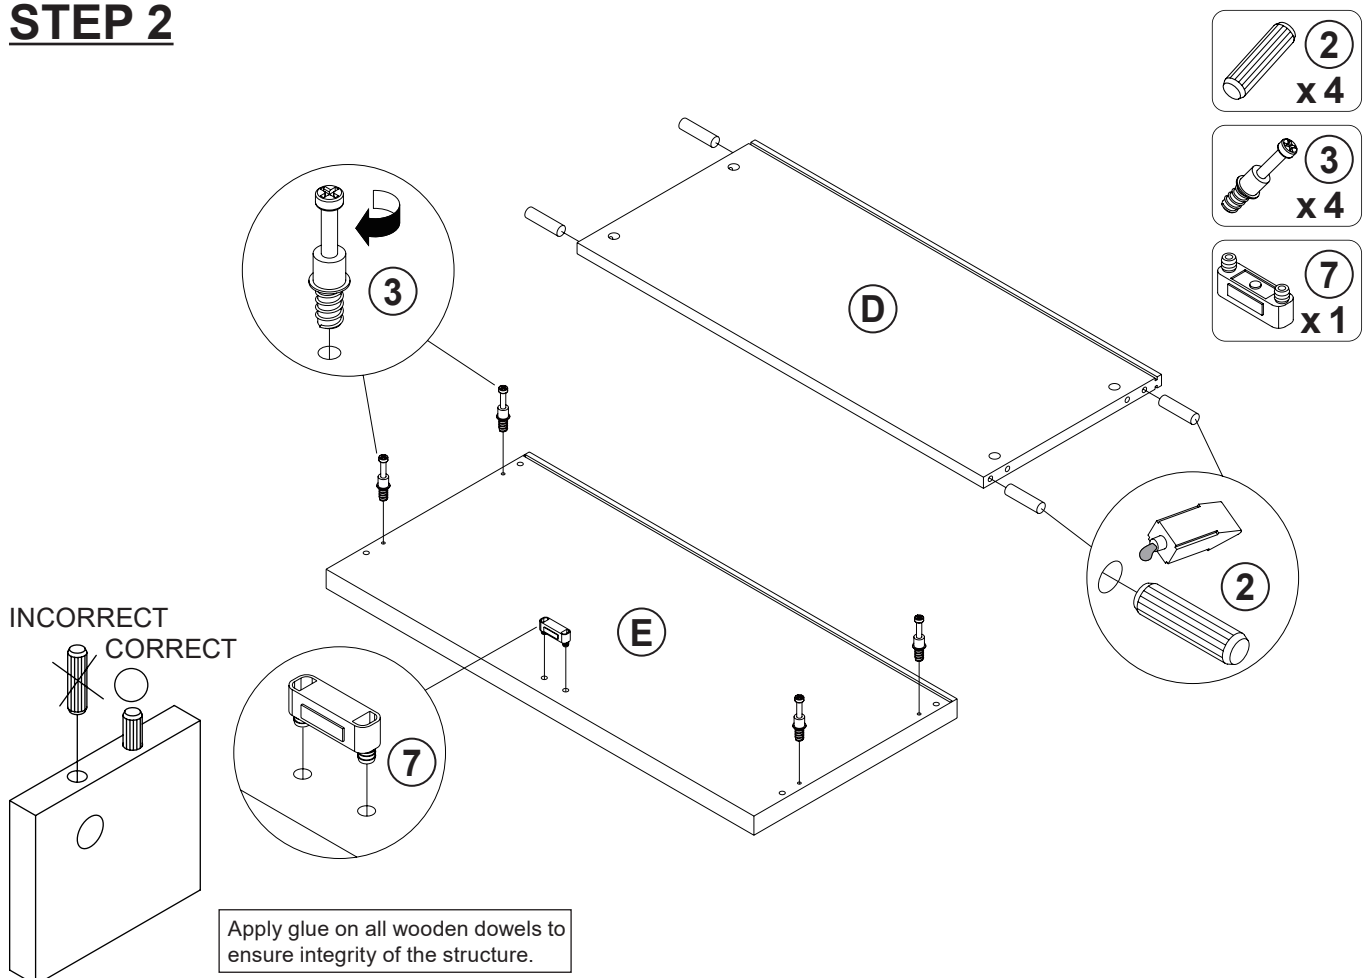


ITEM: **950423**

STEP 3

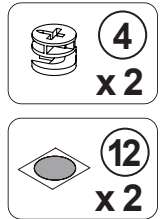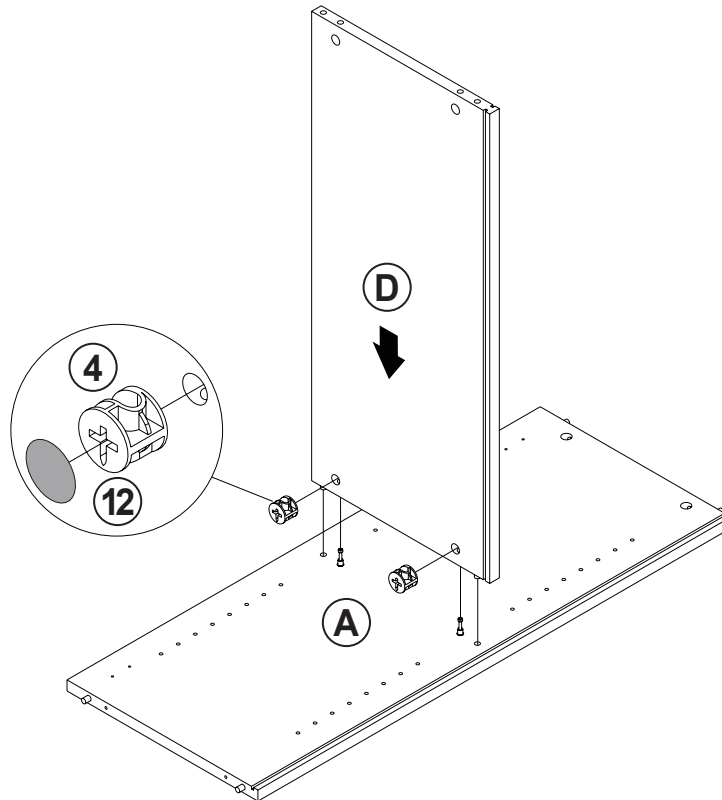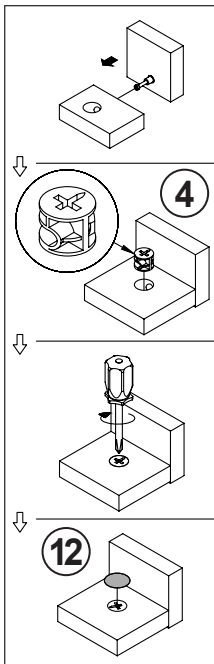




STEP 4

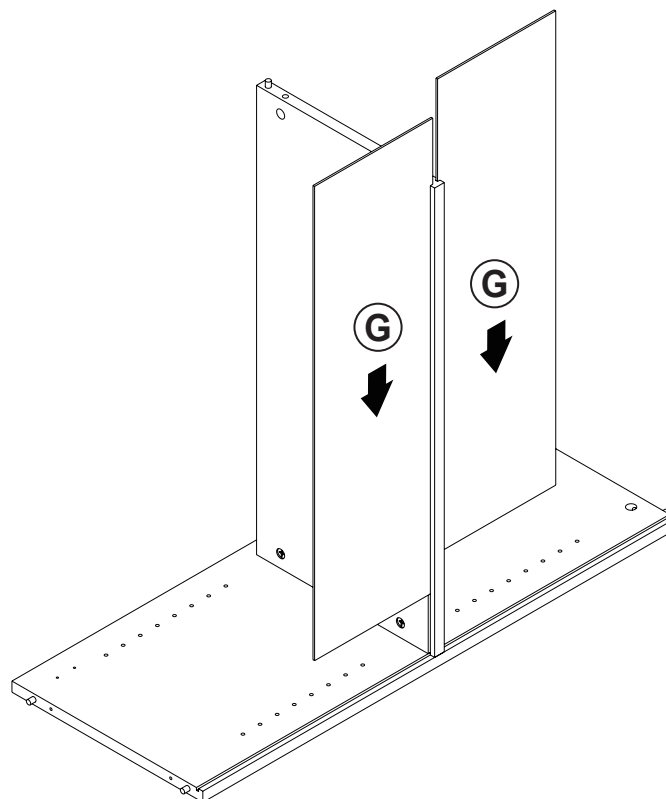


ITEM: **950423**

STEP 5

COASTER
FINE FURNITURE

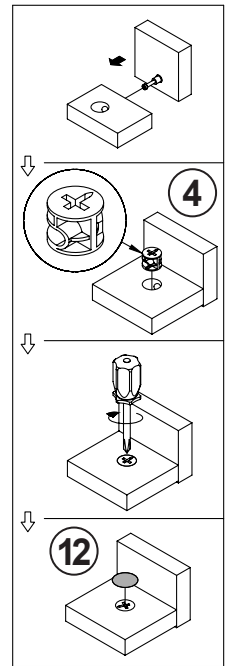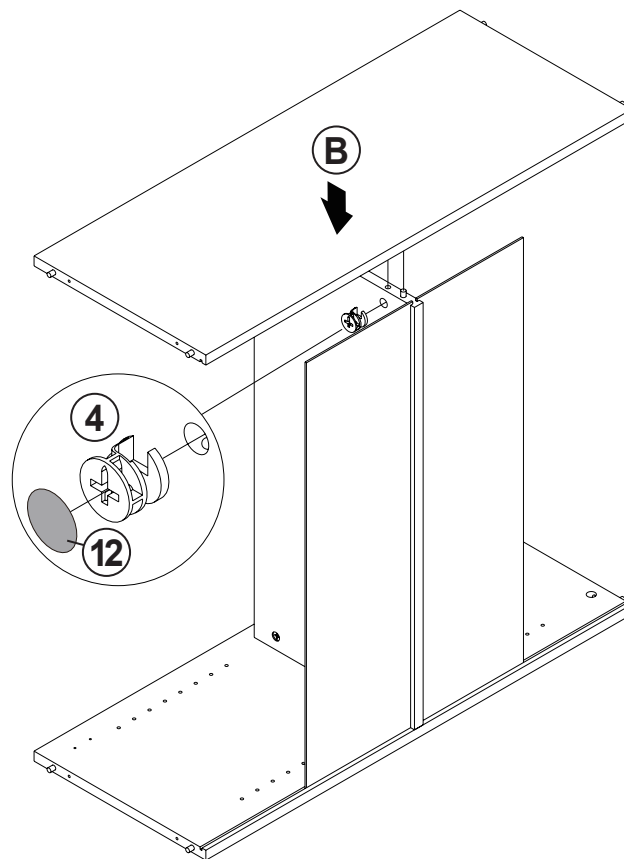


STEP 6

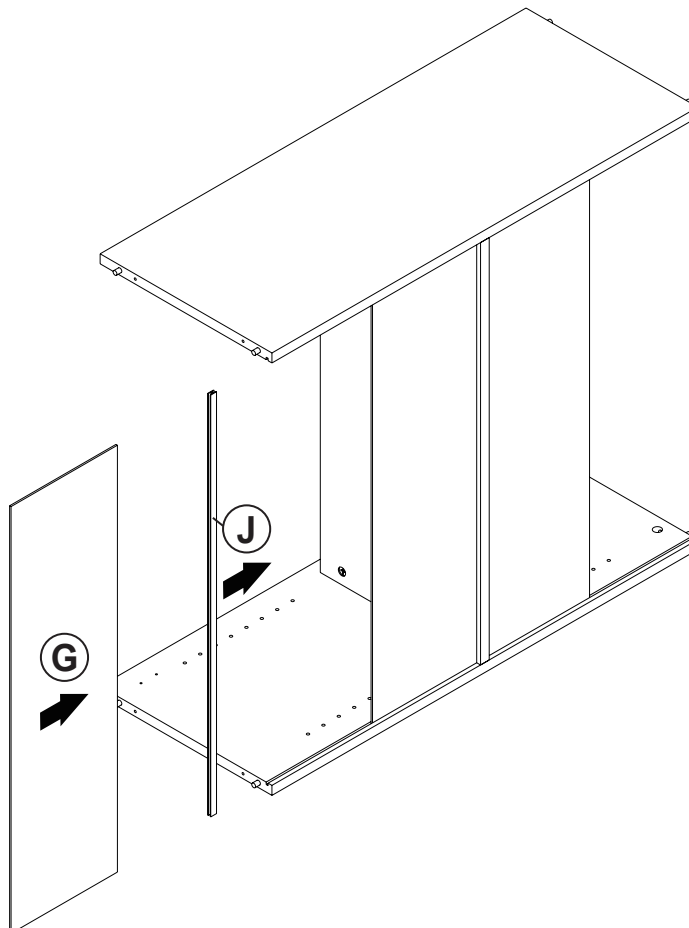


ITEM: **950423**

STEP 7

COASTER
FINE FURNITURE

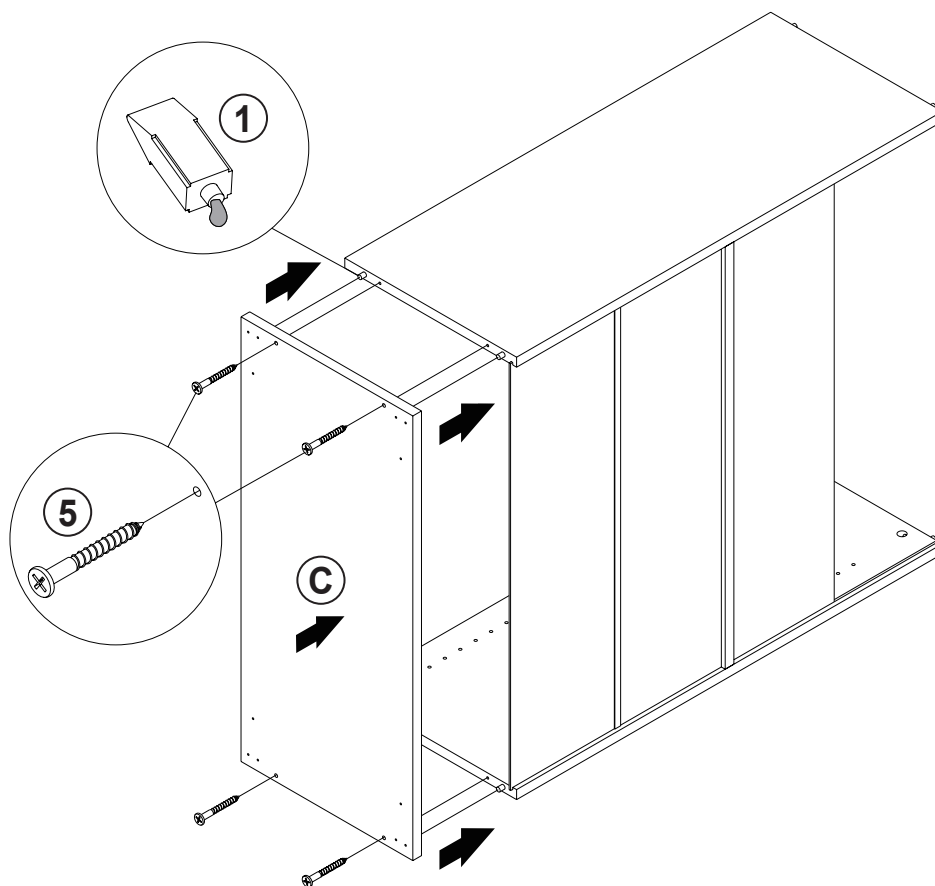




STEP 8

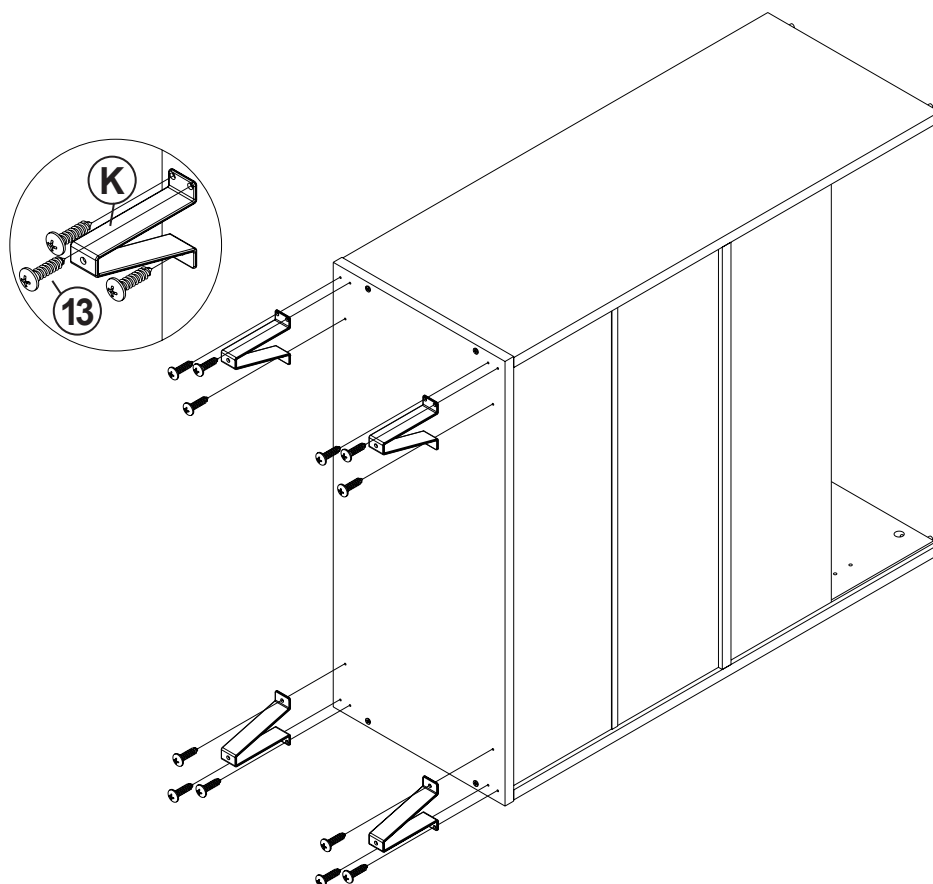


ITEM: **950423**

STEP 9

COASTER
FINE FURNITURE

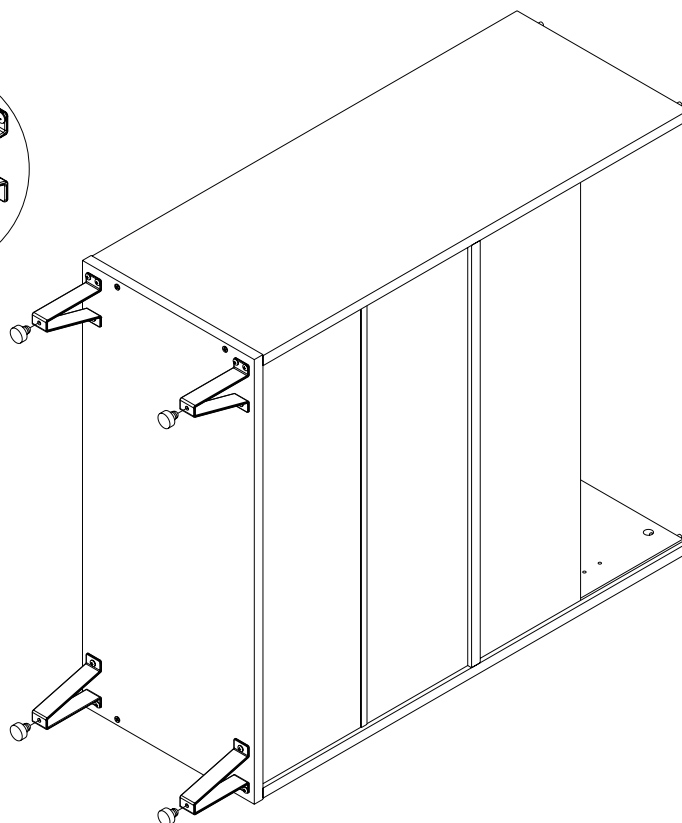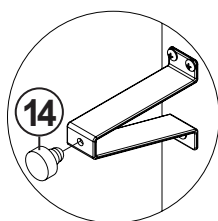





STEP 10

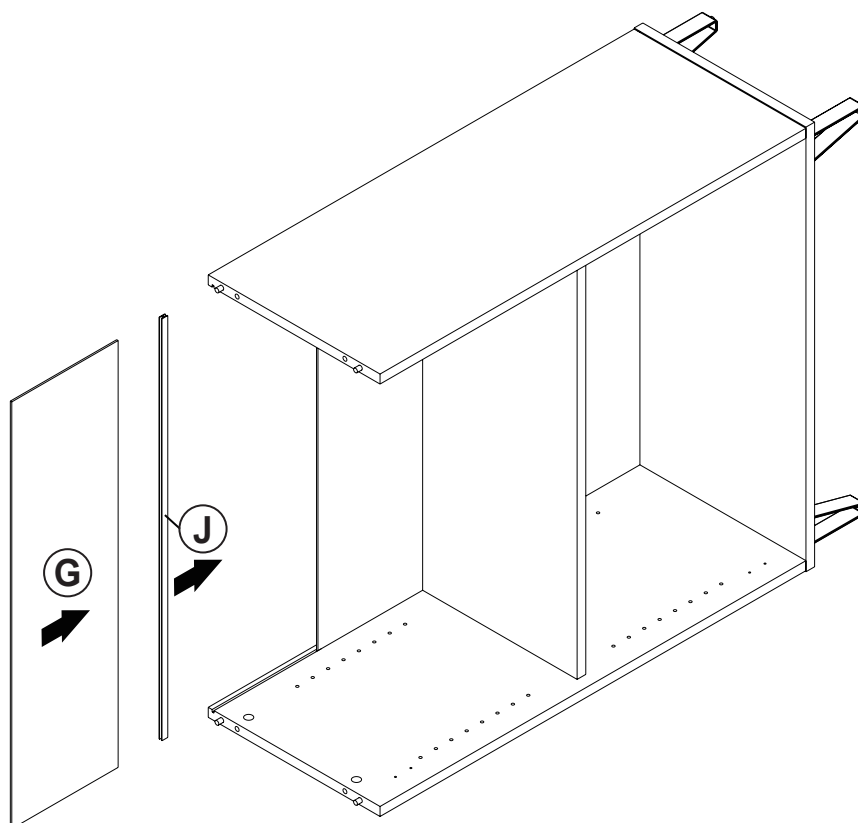




ITEM: **950423**

STEP 11

COASTER
FINE FURNITURE

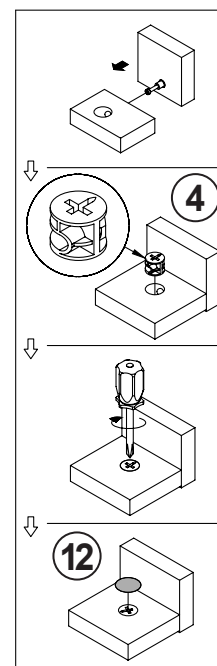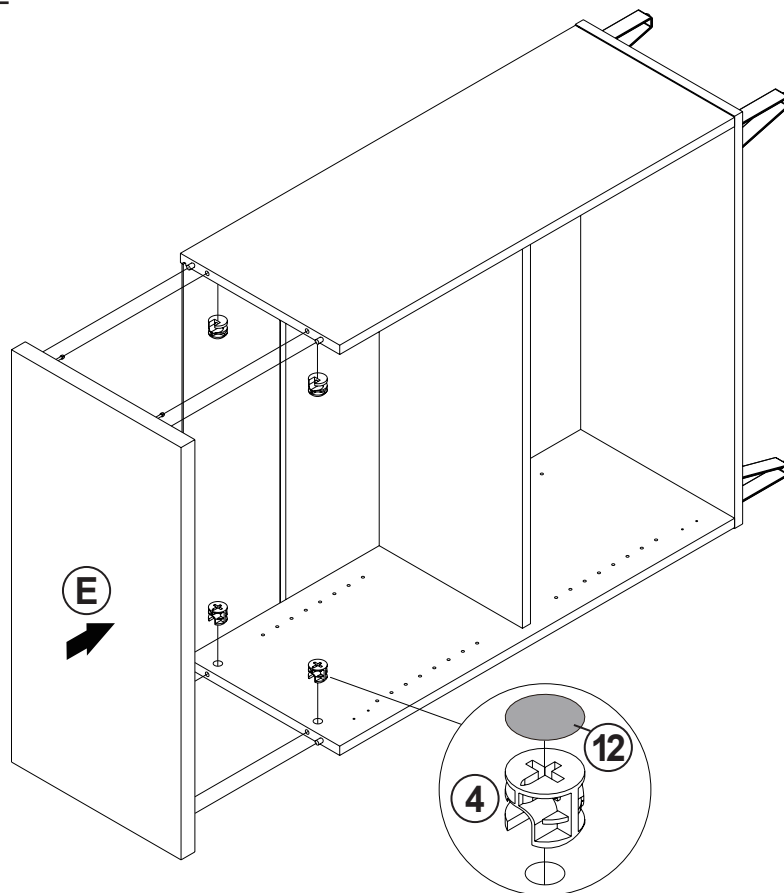


STEP 12

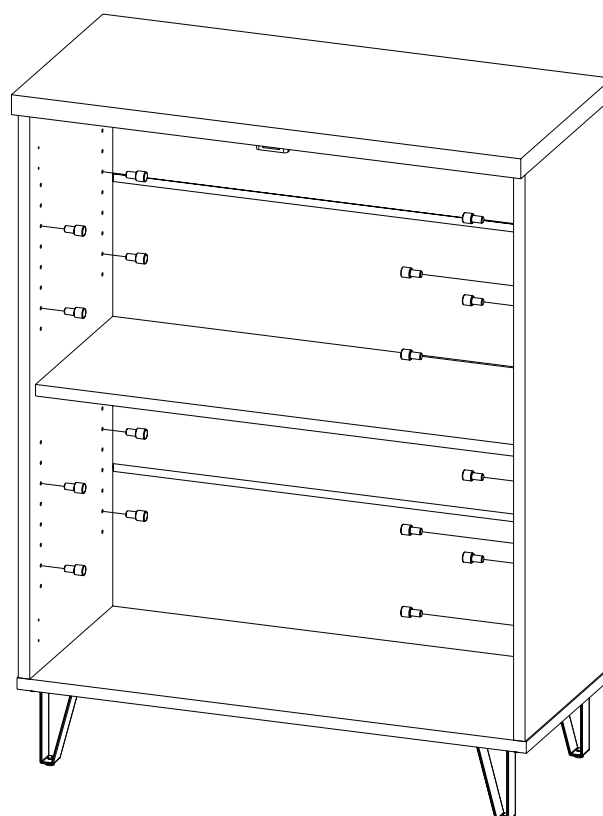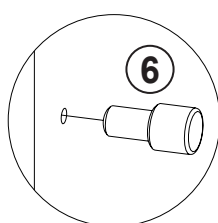


ITEM: **950423**

STEP 13

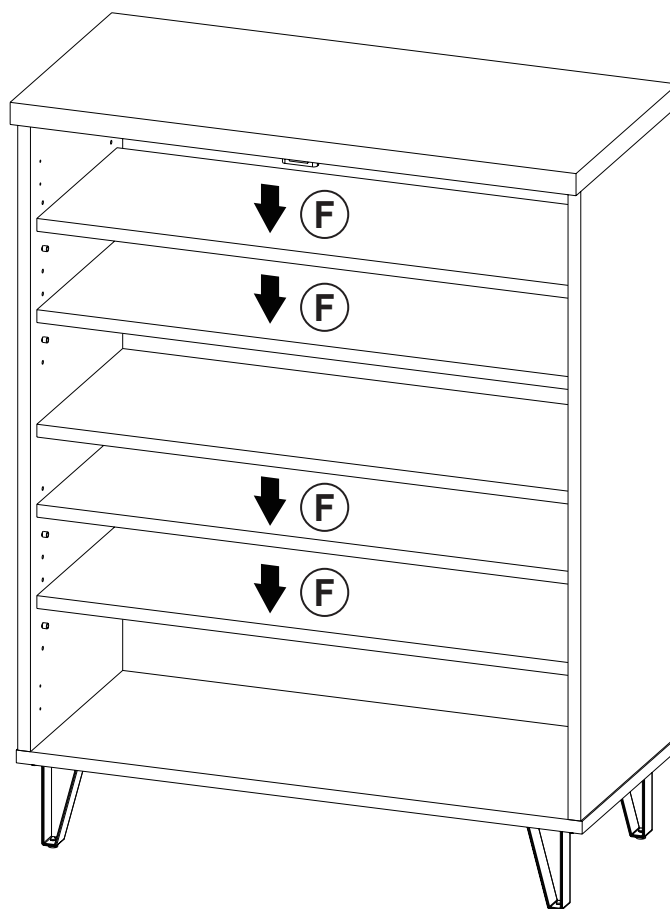



STEP 14

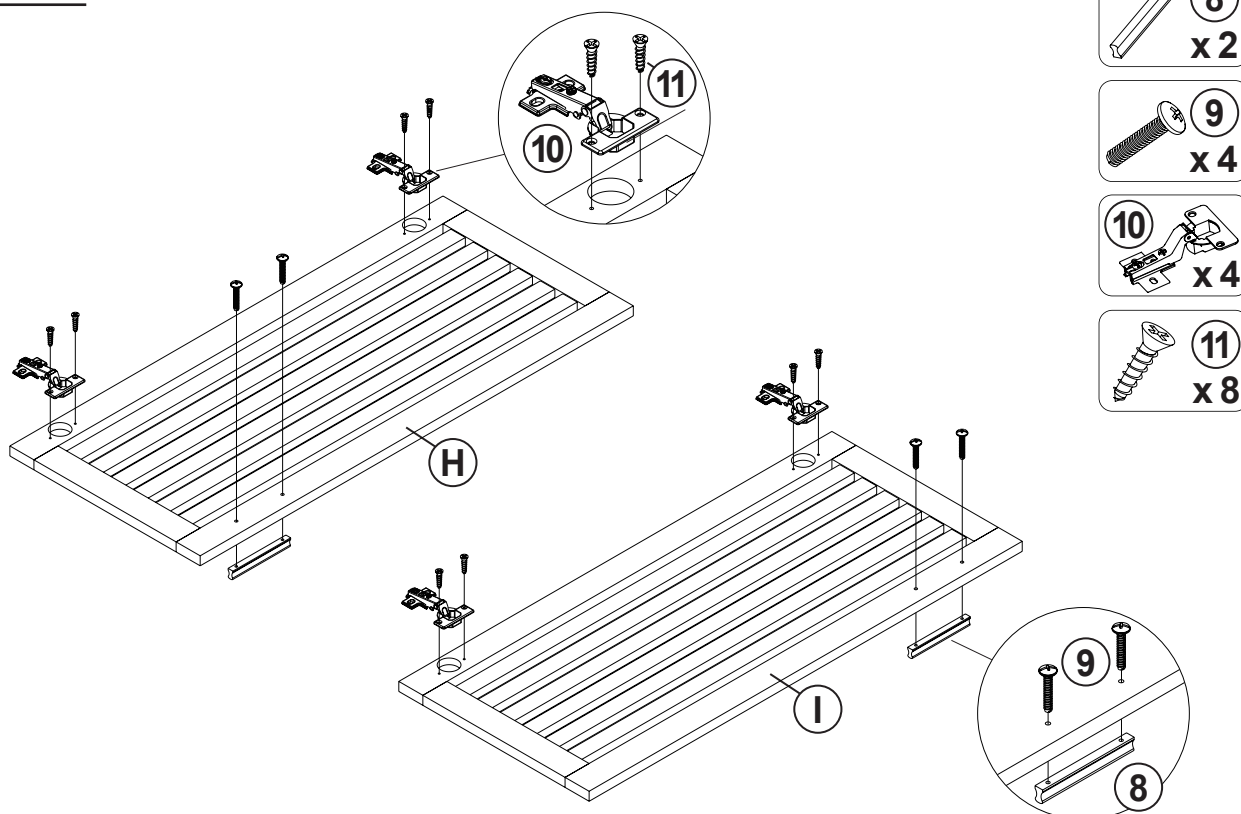


ITEM: **950423**

COASTER
FINE FURNITURE


STEP 15

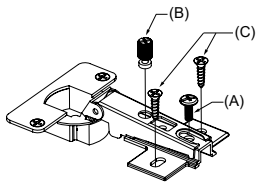



HORIZONTAL BY
SCREW A ADJUSTMENT








LATERAL BY
SCREW B ADJUSTMENT



VERTICAL BY
SCREW C ADJUSTMENT

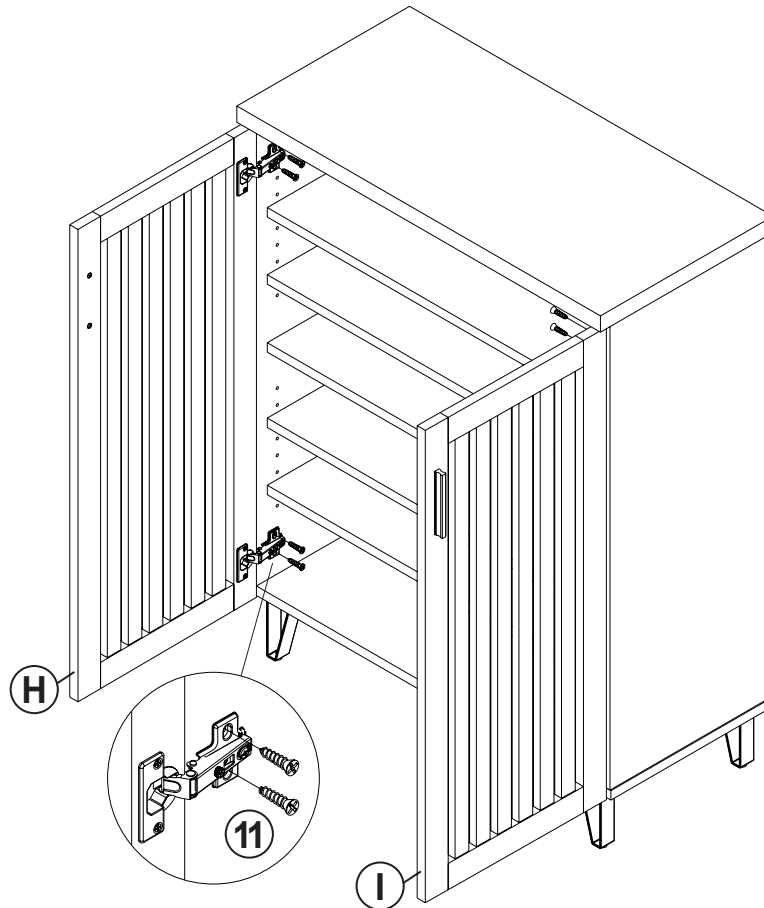

STEP 16

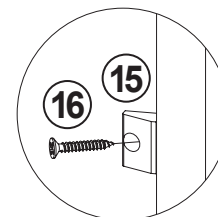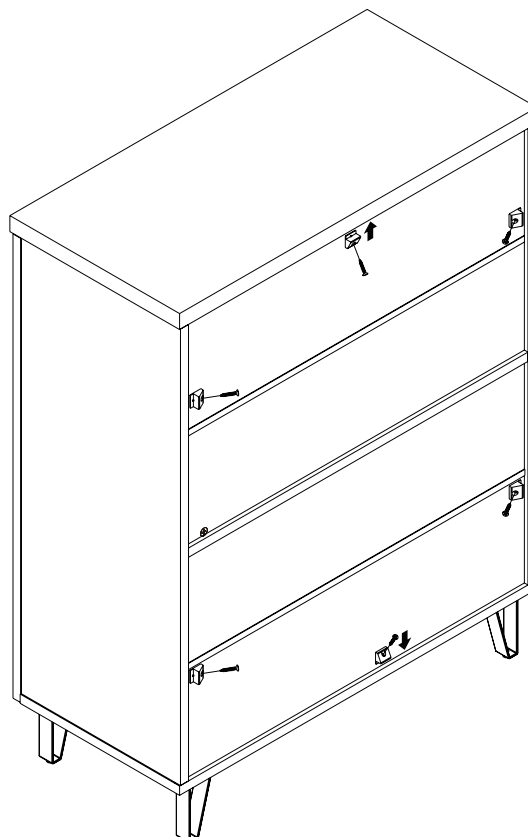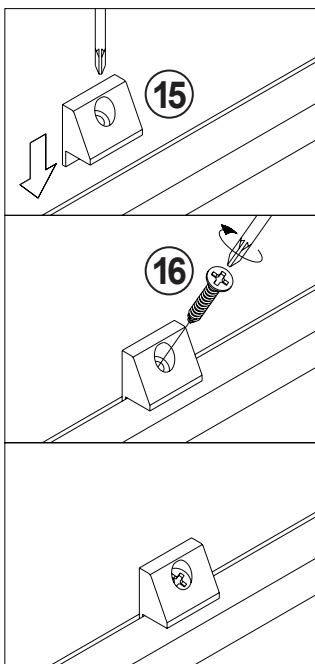




ITEM: **950423**



STEP 17

COMPLETE

COASTER
FINE FURNITURE

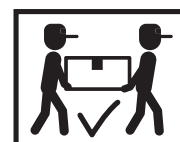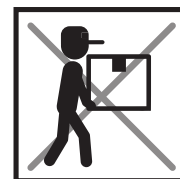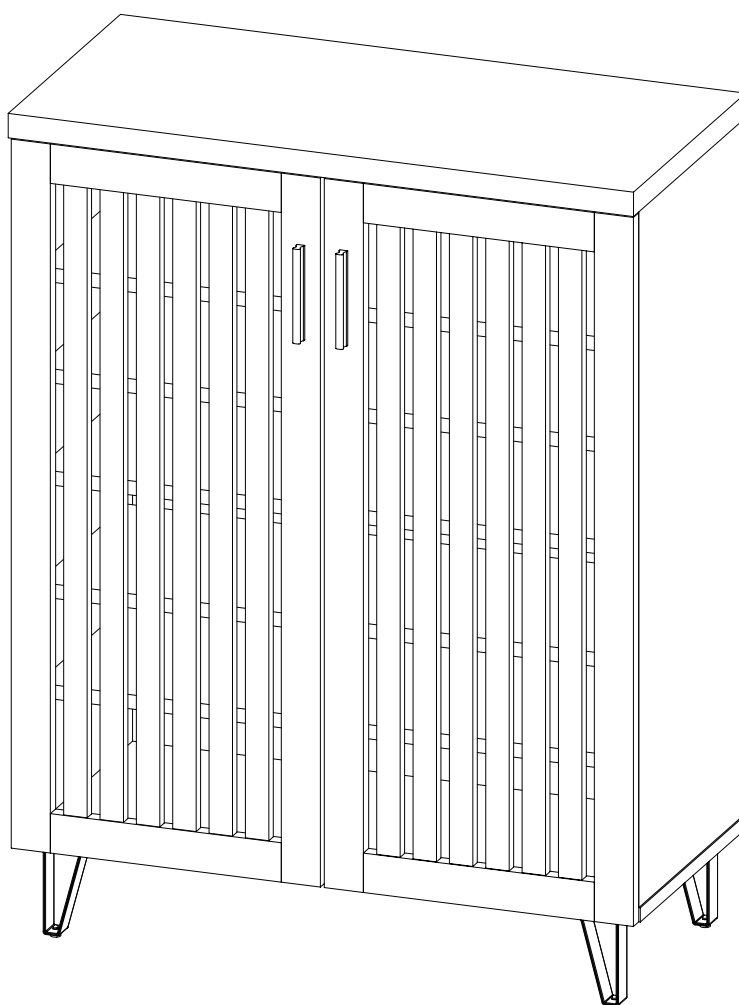

ITEM: **950423**

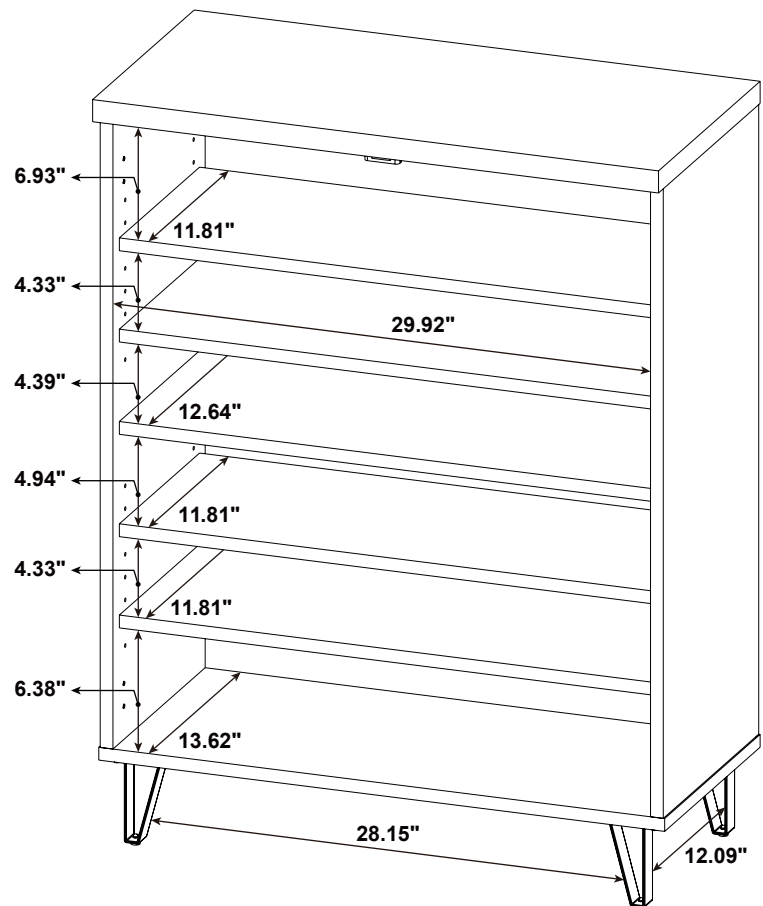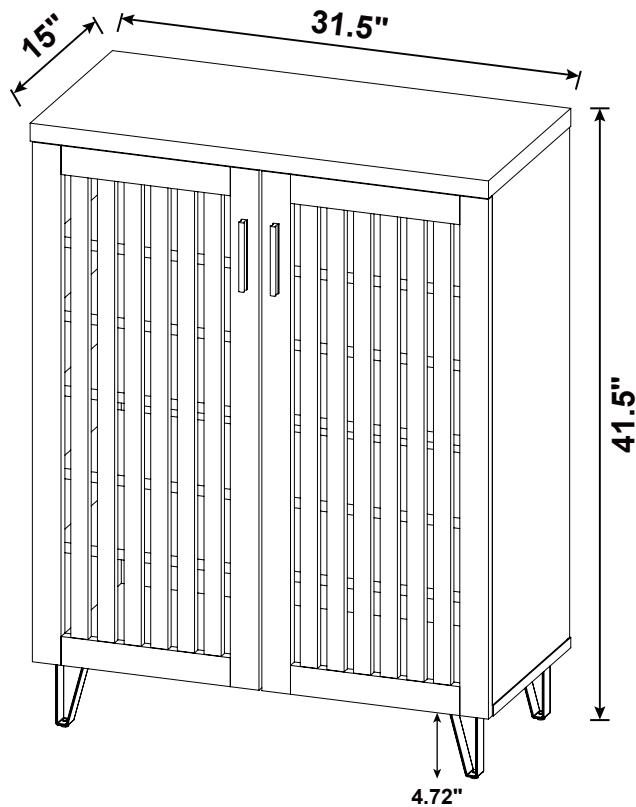

Note : Dimension tolerance $\pm 5\%$

ANTI-TIPPING INSTALLMENT INSTRUCTIONS

FURNITURE TIPPING RESTRAINT


WARNING

Injury may result from tipping furniture.
This restraint may protect against tipping furniture.
Do not allow children to climb on furniture.
This restraint is not a substitute for proper adult supervision.
Failure to detach this restraint before moving the furniture may result in injury and damage.

This restraint must be screwed to a wood stud on the wall, using the long screw provided.


STEP 1

Secure the bracket to the back top of the unit, using the short screw provided, as shown in the drawing.

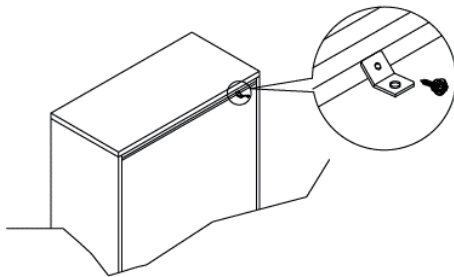

STEP 2

Locate the wood stud on the wall, and secure the other bracket, 2 inches below the back of the unit.

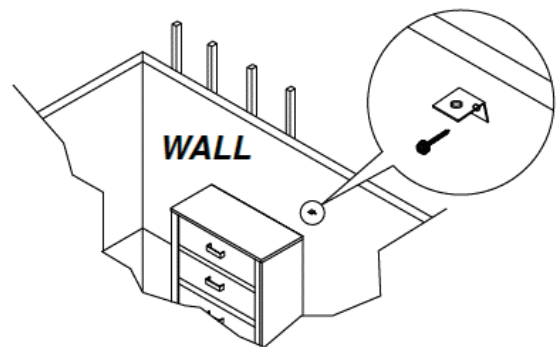

STEP 3

Place the furniture into position so both mounting brackets are vertically in line. Lace the end of the restraint strap through the larger hole in each mounting bracket. Bring both ends together and slide the flat end through the locking end, and drag it through, until the slack is removed. Ensure that the strap is securely laced and locked.

