



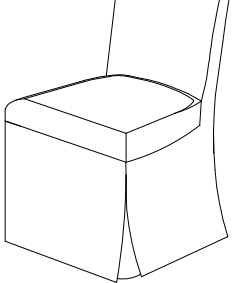



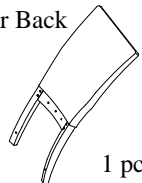




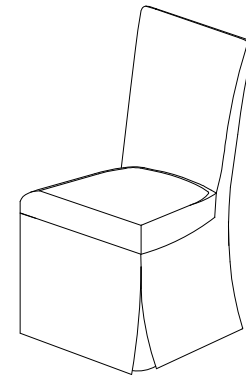


Components and Hardware List (for one chair)

M5/16" x 1 1/2" Allen Head Bolt  (A) 1 pc.	M5/16" x 2" Allen Head Bolt  (B) 4 pcs.	M5/16" x 3" Allen Head Bolt  (C) 4 pcs.	5/16" Flat Washer  (D) 9 pcs.	 #36964 Parson Chair
5/16" Spring Washer  (E) 9 pcs.	5mm Allen Wrench  (F) 1 pc.	Wood Screw  (G) 6 pcs.	Chair Back  (H) 1 pc.	
Chair Seat  (I) 1 pc.	Front Leg (Right & Left)  (J) 2 pcs.	Side Stretcher (Right & Left)  (K) 2 pcs.	Middle Stretcher  (L) 1 pc.	



#36964
Parson Chair

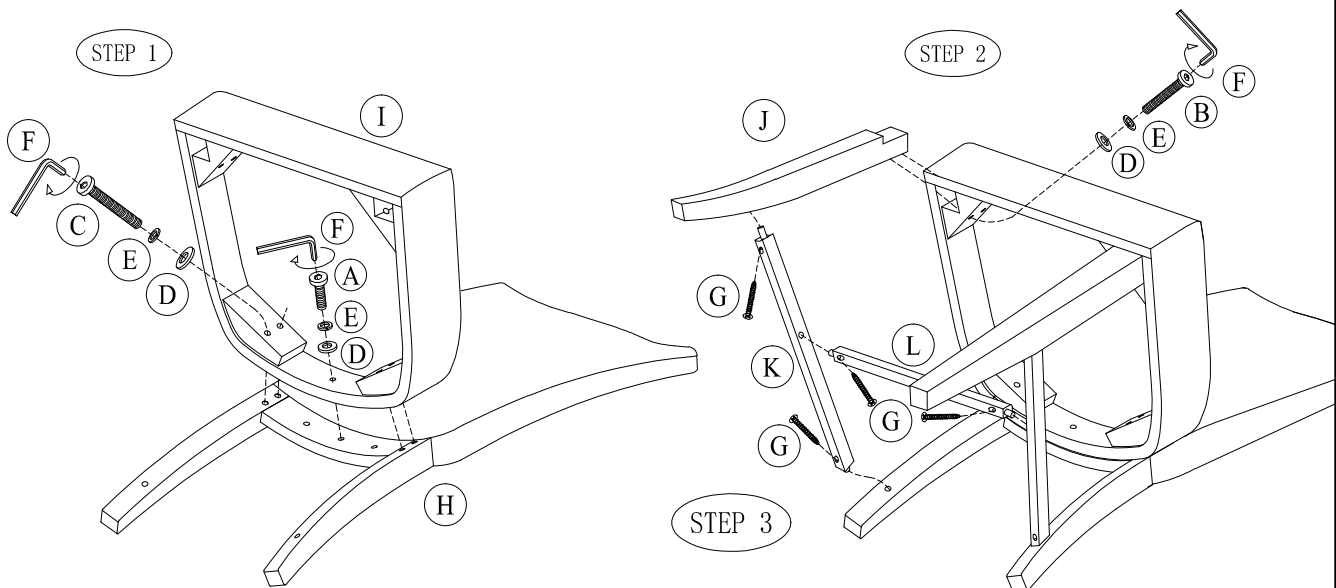
Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment. Separate and check all parts against the Components and Hardware List above.

Step 1: Place the Chair Back on a padded surface, and assemble the Chair Seat to the Chair Back (as shown in Step 1), using the 1-1/2" long Bolts (A), in the middle of the back, and the washers as shown. Install the 3" long Bolts (C), using the same washers, into the back corners of the Chair Seat. Do not fully tighten any bolts until after chair has been completely assembled.

Step 2: Assemble the Left and Right Side Stretchers to the Chair Back (do not install wood screws until after next step).

Step 3: Assemble the Middle Stretcher (L) between the two Side Stretchers and assemble the Front Legs onto the Side Stretchers and Chair Seat. Pull the Front Legs and all Stretchers snugly together to verify the parts are assembled correctly. Attach the Front Legs using the 2" long Bolts (B), and the same washers as before. Set the assembled Chair upright on a flat surface to level chair. Tighten all Bolts using the Allen Wrench.

Step 4: Pull the Front Legs, all Stretchers and Chair Back snugly together and using your Phillips Screwdriver, install the Wood Screws (G) underneath each end of the stretchers.



NOTE: THE SLIP COVER IS 100% LINEN AND MAY BE STEAMED OR IRONED ON A LINEN HEAT SETTING TO HELP REMOVE WRINKLES IF NEEDED.

Step 5: Assemble the Fabric Cover to the chair as shown below.

- A. Pull the Slip Cover over the top of the chair back and pull down snug to the back. There is a fabric tab sewn across the bottom side at the seam of the slip cover where the back and seat come together. Before pulling the cover over the chair seat, tuck the fabric tab into the joint where the chair back and seat cushions meet, to create a 'seam' in the slip cover at the back of the seat.
- B. Lower the slip cover skirt down, covering the seat and chair legs.

