

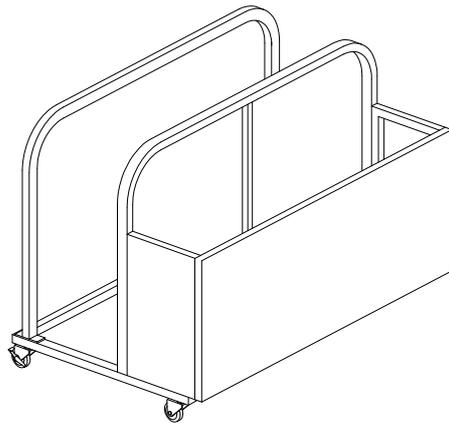
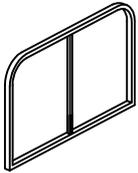
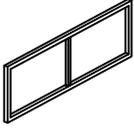
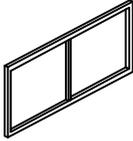






Outdoor Wicker Float Caddy
CO7308

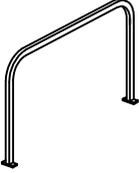

PART LIST


A 	B 	C 	D 	E 
Back Panel 1 PC	Bottom Panel 1 PC	Side Panel 2 PCS	Front Panel 1 PC	Bottom Frame 1 PC
F 	G 	H 		
Divider 1 PC	Swivel Caster 2 PCS	Locking Caster 2 PCS		

HARDWARE LIST

#1 	#2 	#3 	#4 
M6*15mm Short Bolt 4 PCS (Extra 1)	M6*40mm Long Bolt 16 PCS (Extra 1)	M6mm Flat Washer 20 PCS (Extra 1)	M6mm Allen Wrench 1 PC


Step 1. Lay back panel (part A) down on a soft flat surface, such as carpet as shown below. Attach bottom panel (part B) to back panel (part A) using long bolts (part #2), flat washers (part #3) and allen wrench (part #4).

NOTE: Please do not fully tighten bolts until unit is fully assembled.

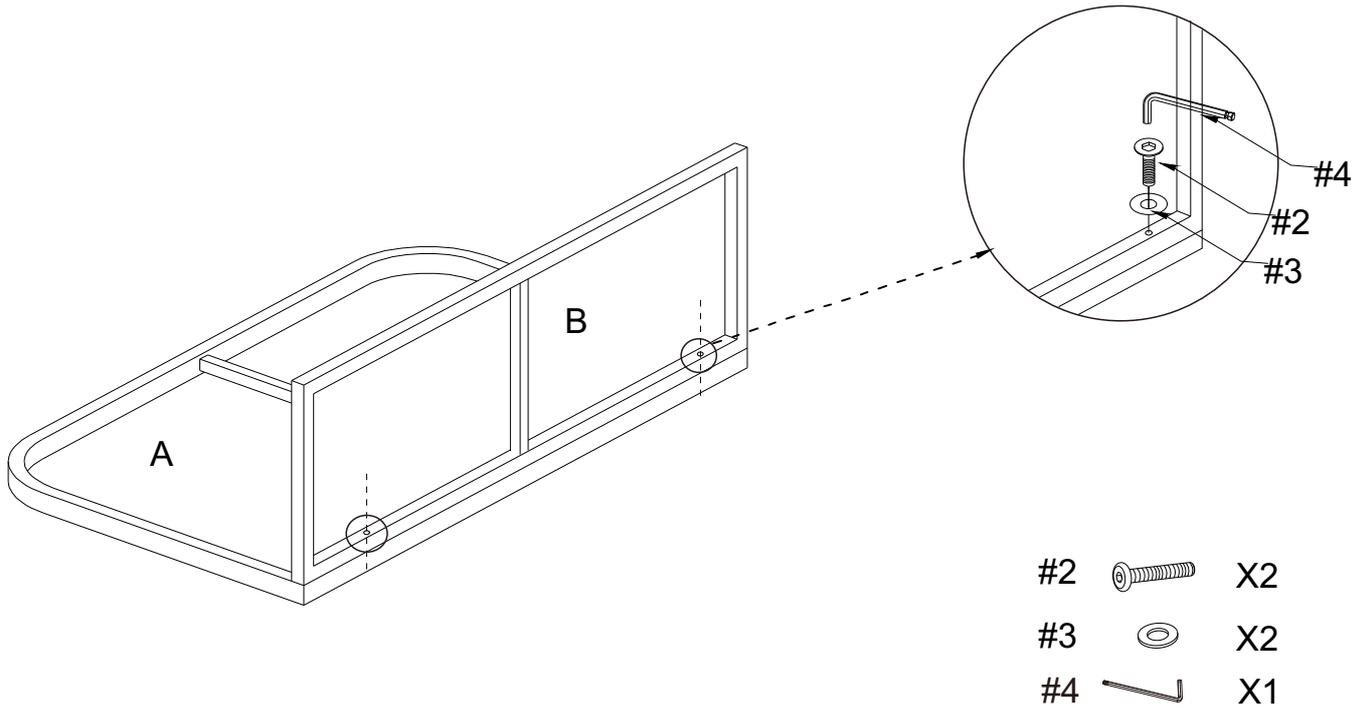


Step 2. Attach side panels (part C) to back panel (part A) using long bolts (part #2), flat washers (part #3) and allen wrench (part #4).

NOTE: Please do not fully tighten bolts until unit is fully assembled.

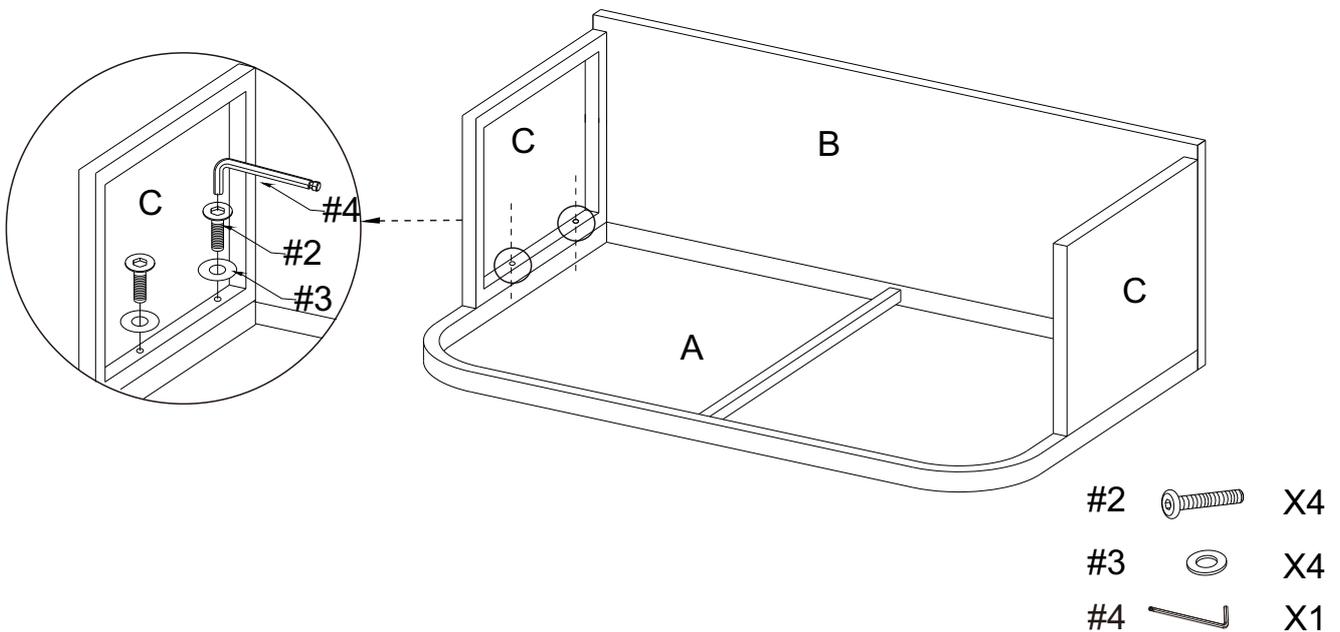


Step 3. Attach front panel (part D) to assembled unit (parts B & C) using long bolts (part #2), flat washers (part #3) and allen wrench (part #4).

NOTE: Please do not fully tighten bolts until unit is fully assembled.

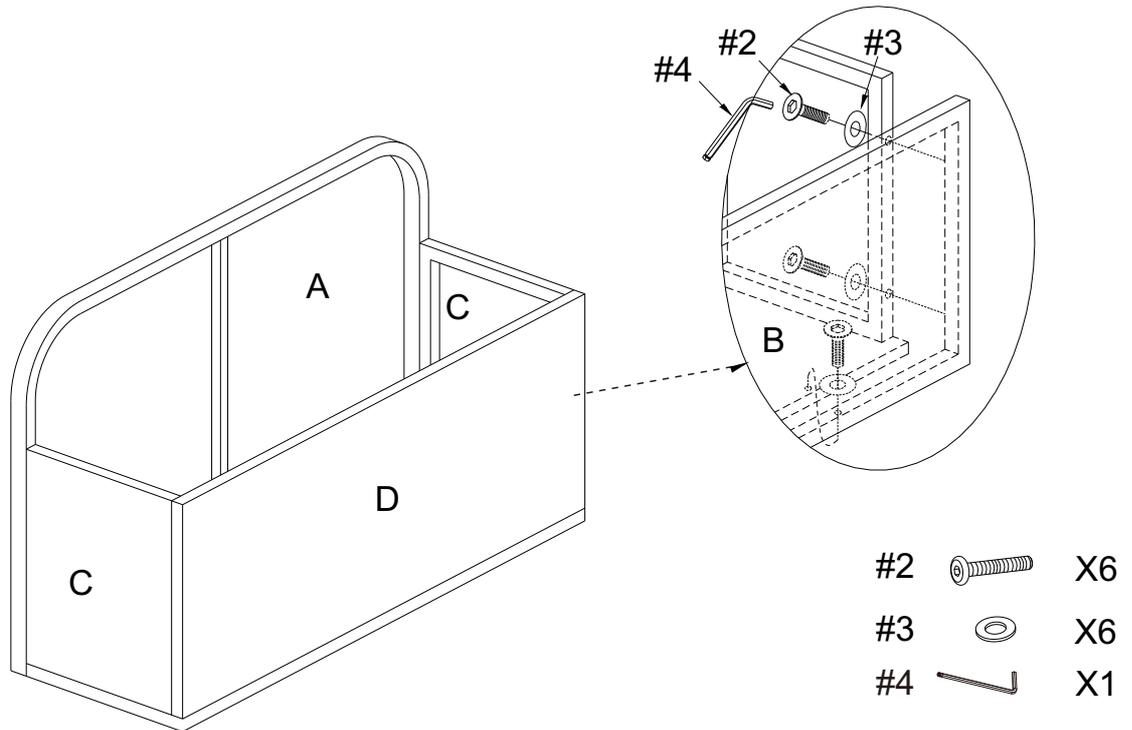


Step 4. Attach bottom frame (part E) to assembled unit (parts B & C) using long bolts (part #2), flat washers (part #3) and allen wrench (part #4).

NOTE: Please do not fully tighten bolts until unit is fully assembled.

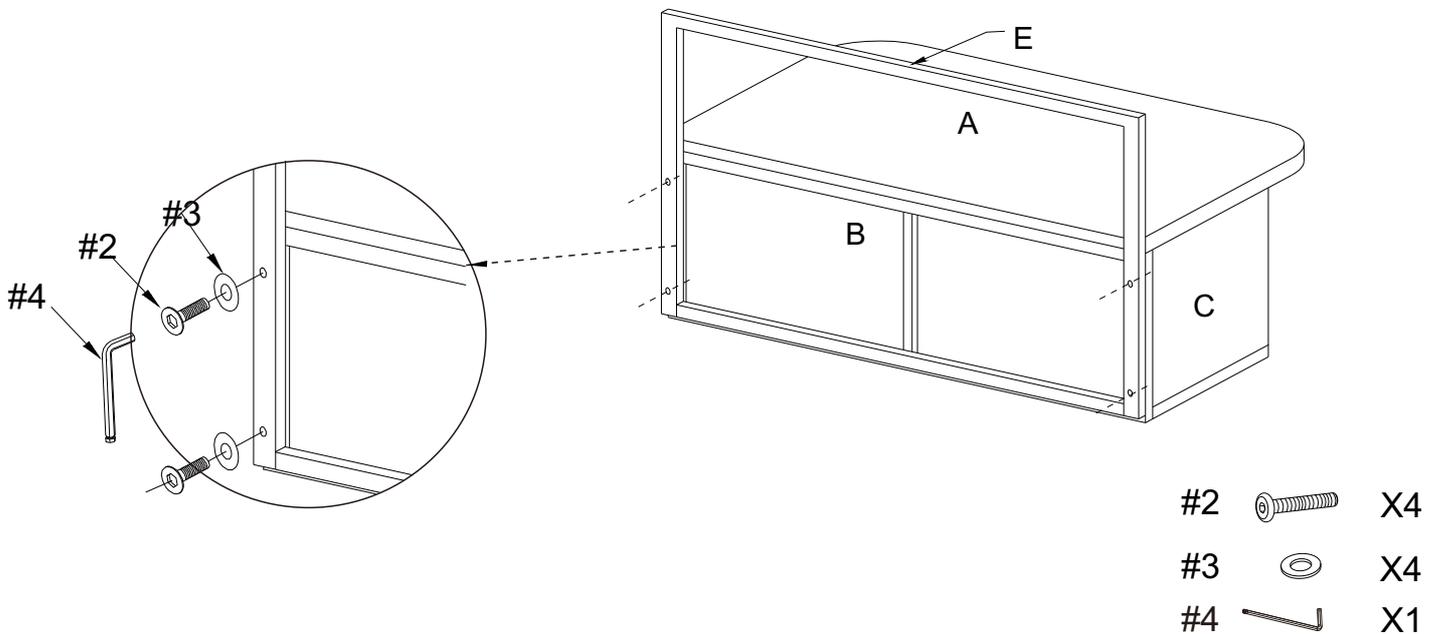

Step 5. Attach swivel casters (part G) and locking casters (part H) to bottom frame (part E).

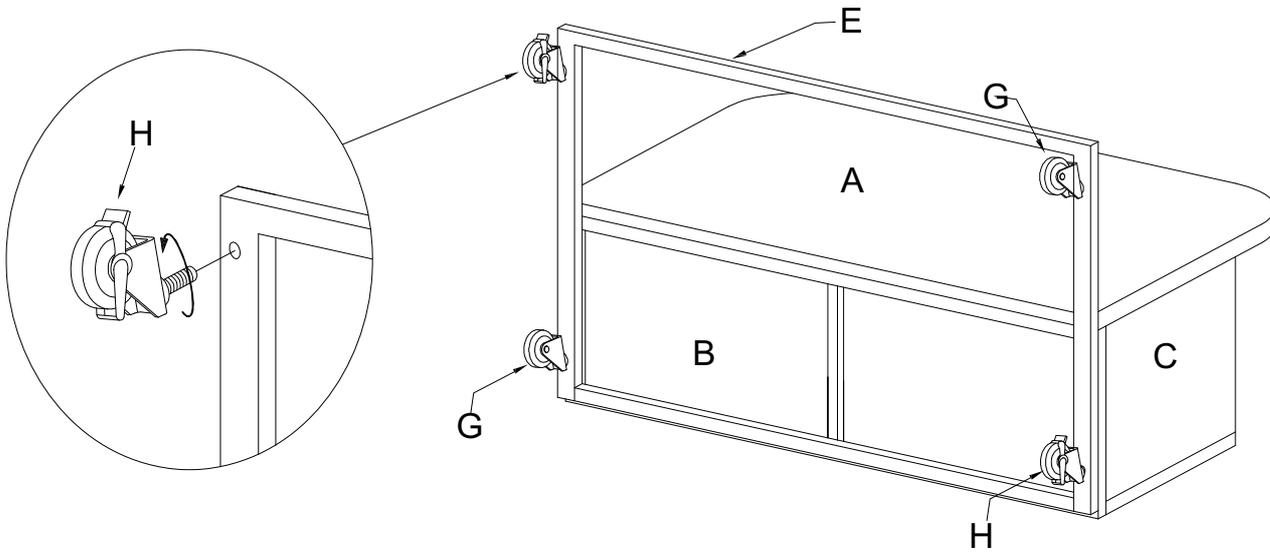

Step 6. Carefully turn unit upright. Attach divider (part F) to bottom frame (part E) using short bolts (part #1), flat washers (part #3) and allen wrench (part #4).

NOTE: Please fully tighten all bolts at this time.

